

Recognized as an
American National Standard (ANSI)

IEEE Std 583™-1982(R2006)
(Revision of IEEE 583-1975)

IEEE Standard Modular Instrumentation and Digital Interface System (CAMAC¹)

Sponsor

**Instrumentation and Detectors Committee
of the
IEEE Nuclear and Plasma Sciences Society**

Reaffirmed March 30, 2006
Approved September 17, 1981

IEEE-SA Standards Board

Reaffirmed January 13, 2000
Approved December 15, 1981

American National Standards Institute

Copyright © 1982 by
The Institute of Electrical and Electronics Engineers, Inc. 345 E. 47th Street, New York, NY 10017

No part of this publication may be reproduced in any form, in an electronic retrieval system or otherwise, without the prior written permission of the publisher.

¹Computer Automated Measurement and Control

IEEE Standards documents are developed within the Technical Committees of the IEEE Societies and the Standards Coordinating Committees of the IEEE Standards Board. Members of the committees serve voluntarily and without compensation. They are not necessarily members of the Institute. The standards developed within IEEE represent a consensus of the broad expertise on the subject within the Institute as well as those activities outside of IEEE which have expressed an interest in participating in the development of the standard.

Use of an IEEE Standard is wholly voluntary. The existence of an IEEE Standard does not imply that there are no other ways to produce, test, measure, purchase, market, or provide other goods and services related to the scope of the IEEE Standard. Furthermore, the viewpoint expressed at the time a standard is approved and issued is subject to change brought about through developments in the state of the art and comments received from users of the standard. Every IEEE Standard is subjected to review at least once every five years for revision or reaffirmation. When a document is more than five years old, and has not been reaffirmed, it is reasonable to conclude that its contents, although still of some value, do not wholly reflect the present state of the art. Users are cautioned to check to determine that they have the latest edition of any IEEE Standard.

Comments for revision of IEEE Standards are welcome from any interested party, regardless of membership affiliation with IEEE. Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate supporting comments.

Interpretations: Occasionally questions may arise regarding the meaning of portions of standards as they relate to specific applications. When the need for interpretations is brought to the attention of IEEE, the Institute will initiate action to prepare appropriate responses. Since IEEE Standards represent a consensus of all concerned interests, it is important to ensure that any interpretation has also received the concurrence of a balance of interests. For this reason IEEE and the members of its technical committees are not able to provide an instant response to interpretation requests except in those cases where the matter has previously received formal consideration.

Comments on standards and requests for interpretations should be addressed to:

Secretary, IEEE Standards Board
345 East 47th Street
New York, NY 10017
USA

Foreword

[This Forward is not a part of ANSI/IEEE Std 583–1982, IEEE Standard Modular Instrumentation and Digital Interface System (CAMAC).]

The interface system on which this standard is based was developed by the ESONE Committee of European Laboratories** with the collaboration of the NIM Committee of the US Department of Energy (DOE).^{*} This standard is based on ERDA² Reports TID-25875, July 1972 (corresponding to ESONE Report EUR 4100e) and TID-25877. The mandatory features and dimensions in this document are identical (see note) to those in the reports mentioned above and in Publications 482 and 516 of the International Electrotechnical Commission (IEC).

This standard was reviewed and balloted by the Nuclear Instruments and Detectors Committee of the IEEE Nuclear and Plasma Sciences Society. Because of the broad applicability of this instrumentation and interface system, coordination was established with numerous IEEE Societies, Groups, and Committees, including the Communications Society, Control Systems Society, Industry Applications Society, Industrial Electronics and Control Instrumentation Group, Instrumentation and Measurement Group, and the Power Generation and Nuclear Power Engineering Committees of the Power Engineering Society. This review and coordination resulted in valuable suggestions that have been incorporated into the standard.

The revision of this standard was in conjunction with the 1981 review (1982 issue) of the entire family of IEEE CAMAC standards undertaken to incorporate existing addenda and corrections into the standards.

At the time of approval of this standard, the membership of the Nuclear Instruments and Detectors Committee of the IEEE Nuclear and Plasma Sciences Society was as follows:

D. C. Cook, *Chair*
Louis Costrell, *Secretary*

J. A. Coleman
J. F. Detko
F. S. Goulding
F. A. Kirsten
T. R. Kohler

H. W. Kraner
W. W. Managan
G. L. Miller
D. E. Persyk
P. L. Phelps

J. H. Trainor
F. J. Walter
S. Wagner

At the time it approved this standard, the American National Standards Committee on Nuclear Instruments, N42, had the following representatives:

Louis Costrell, *Chair*
D. C. Cook, *Secretary*

American Conference of Governmental Industrial Hygienists	Jesse Lieberman
American Nuclear Society	Frank W. Manning
Health Physics Society	J. B. Horner Kuper J. M. Selby (<i>Alt</i>)
Institute of Electrical and Electronics Engineers	Louis Costrell Julian Forster (<i>Alt</i>) David C. Cook (<i>Alt</i>) A. J. Spurgin (<i>Alt</i>)
Instrument Society of America	M. T. Slind J. E. Kaveckis (<i>Alt</i>)
Lawrence Berkeley National Laboratory	Lee J. Wagner
Oak Ridge National Laboratory	Frank W. Manning

²Department of Energy Research and Development Administration (now part of US Department of Energy).

	D. J. Knowles (<i>Alt</i>)
US Department of the Army, Materiel Command	Abraham E. Cohen
US Department of Commerce, National Bureau of Standards	Louis Costrell
US Department of Energy	Gerald Goldstein
US Federal Emergency Management Agency	Carl R. Siebentritt, Jr
US Nuclear Regulatory Commission	Robert E. Alexander
US Naval Research Laboratory	David C. Cook
Members-at-Large	J. G. Bellian
	O. W. Bilharz, Jr
	John M. Gallagher, Jr
	Voss A. Moore
	R. F. Shea
	E. J. Villario

***NIM Committee³**

L. Costrell, Chair

C. Akerlof	N. W. Hill	L. B. Mortara
E. J. Barsotti	D. Horelick	V. C. Negro
B. Bertolucci	M. E. Johnson	L. Paffrath
J. A. Biggerstaff	C. Kerns	D. G. Perry
A. E. Brenner	F. A. Kirsten	I. Pizer
R. M. Brown	P. F. Kunz	E. Platner
E. Davey	R. S. Larsen	S. Rankowitz
W. K. Dawson	A. E. Larsh, Jr	S. J. Rudnick
S. R. Deiss	R. A. LaSalle	G. K. Schulze
S. Dhawan	N. Latner	W. P. Sims
R. Downing	F. R. Lenkszus	D. E. Stilwell
T. F. Droege	R. Leong	J. H. Trainor
C. D. Ethridge	C. Logg	K. J. Turner
C. E. L. Gingell	S. C. Loken	H. Verweij
A. Gjovig	D. R. Machen	B. F. Wadsworth
B. Gobbi	D. A. Mack	L. J. Wagner
D. B. Gustavson	J. L. McAlpine	H. V. Walz
D. R. Heywood		D. H. White

NIM Executive Committee for CAMAC

L. Costrell, Chair

E. J. Barsotti	S. Dhawan	D. A. Mack
J. A. Biggerstaff	F. A. Kirsten	J. H. Trainor
	R. S. Larsen	

NIM Dataway Working Group

F. A. Kirsten, Chair

E. J. Barsotti	D. R. Heywood	R. S. Larsen
J. A. Biggerstaff	D. Horelick	D. R. Machen
L. Costrell	C. Kerns	L. Paffrath
S. Dhawan	P. F. Kunz	S. Rankowitz
A. Gjovig		S. J. Rudnick

³National Instrumentation Methods Committee of the US Department of Energy.

NIM Software Working Group

D. B. Gustavson, Jr, *Chair*

W. K. Dawson, *Secretary*

A. E. Brenner
R. M. Brown
S. R. Deiss
S. Dhawan

C. D. Ethridge
M. E. Johnson
P. A. LaSalle
F. B. Lenkszus

C. A. Logg
J. McAlpine
L. B. Mortara
D. G. Perry

NIM Mechanical and Power Supplies Working Group

L. J. Wagner, *Chair*

L. Costrell

C. Kerns
S. J. Rudnick

W. P. Sims

NIM Analog Signals Working Group

D. I. Porat, *Chair*

L. Costrell

C. E. L. Gingell
N. W. Hill

S. Rankowitz

NIM Serial System Subgroup

D. R. Machen, *Chair*

E. J. Barsotti
D. Horelick

F. A. Kirsten
R. G. Martin

L. Paffrath
S. J. Rudnick

NIM Block Transfer Subgroup

E. J. Barsotti, *Chair*

W. K. Dawson
F. A. Kirsten

R. A. LaSalle
F. R. Lenkszus

R. G. Martin
R. F. Thomas, Jr

NIM Multiple Controllers Subgroup

P. F. Kunz, *Chair*

E. J. Barsotti

F. A. Kirsten
D. R. Machen

R. G. Martin

****ESONE Committee⁴**

W. Attwenger, Austria, *Chair, 1980–81*

H. Meyer, Belgium, *Secretary*

Representatives of ESONE Member Laboratories

W. Attwenger, Austria
R. Biancastelli, Italy
L. Binard, Belgium

J. Biri, Hungary
B. Bjarland, Finland
D. A. Boyce, England

B. A. Brandt, F. R. Germany
F. Cesaroni, Italy
P. Christensen, Denmark

⁴European Standards on Nuclear Electronics Committee.

W. K. Dawson, Canada
 M. DeMarsico, Italy
 C. A. DeVries, Netherlands
 H. Dilcher, F. R. Germany
 B. V. Fefilov, USSR
 R. A. Hunt, England
 W. Kessel, F. R. Germany
 R. Klesse, France
 E. Kwakkel, Netherlands
 J. L. Lecomte, France
 J. Lingertat, D. R. Germany
 M. Lombardi, Italy
 M. Maccioni, Italy
 P. Maranesi, Italy

C. H. Mantakas, Greece
 D. Marino, Italy
 H. Meyer, Belgium
 K. D. Muller, F. R. Germany
 J. G. Ottes, F. R. Germany
 A. D. Overtom, Netherlands
 E. C. G. Owen, England
 L. Panaccione, Italy
 M. Patrutescu, Roumania
 R. Patzelt, Austria
 A. C. Peatfield, England
 I. C. Pyle, England
 B. Rispoli, Italy
 M. Sarquiz, France

W. Schoeps, Switzerland
 R. Schule, F. R. Germany
 P. G. Sjolín, Sweden
 L. Stanchi, Italy
 R. Trechcinski, Poland
 M. Truong, France
 P. Uuspaa, Finland
 H. Verweij, Switzerland
 A. J. Vickers, England
 S. Vitale, Italy
 M. Vojinovic, Yugoslavia
 K. Zander, F. R. Germany
 D. Zimmermann,
 F. R. Germany

ESONE Executive Group (XG)

W. Attwenger, Austria, XG, (Chairman 1980–81)

H. Meyer, Belgium, Secretary

P. Christensen, Denmark
 M. Dilcher, F. R. Germany

B. Rispoli, Italy
 M. Sarquiz, France
 R. Trechcinski, Poland

A. Vickers, England
 H. Verweij, Switzerland

ESONE Technical Coordination Committee (TCC)

A. C. Peatfield, England, (TCC Chairman)

P. Christensen, Denmark, (TCC Secretary)

W. Attwenger, Austria
 R. Biancastelli, Italy
 G. Bianchi, France
 H. Dilcher, F. R. Germany

P. Gallice, France
 W. Kessel, F. R. Germany
 J. Lukacs, Hungary

R. Patzelt, Austria
 P. J. Ponting, Switzerland
 W. Schoeps, Switzerland
 S. Vitale, Italy

ECA/ESONE CAMAC Document Maintenance Study Group (DMSG)

P. Gallice, France, Chair

R. C. M. Barnes, England
 L. Besse, Switzerland

J. Davis, England
 F. Iselin, Switzerland

H. Meyer, Belgium
 H. J. Trebst, F. R. Germany

When this standard was approved on September 17, 1981, by the IEEE Standards Board it had the following membership:

I. N. Howell, Jr, Chair

Irving Kolodny, Vice Chair

Sava I. Sherr, Secretary

G. Y. R. Allen
 J. J. Archambault
 J. H. Beall
 J. T. Boettger
 Edward Chelotti
 Edward J. Cohen
 Len S. Corey

Jay Forster
 Kurt Greene
 Loering M. Johnson
 Joseph L. Koepfinger
 J. E. May
 Donald T. Michael*
 J. P. Riganati

F. Rosa
 R. W. Seelbach
 J. S. Stewart
 W. E. Vannah
 Virginus N. Vaughan, Jr
 Art Wall
 Robert E. Weiler

*Member emeritus

NOTE — Figures prefixed by the letter K are supplementary illustrations.

CAMAC and NIM Standards and Reports

Title	IEEE, ANSI Std No	IEC No	DOE No	EURATOM (EUR) or ESONE No
CAMAC Instrumentation and Interface Standards*	SH08482* (Library of Congress No 8185060)	—	—	—
Modular Instrumentation and Digital Interface System (CAMAC)	ANSI/IEEE Std 583-1982	516	TID-25875 [†] and TID-25877 [†]	EUR 4100e
Serial Highway Interface System (CAMAC)	ANSI/IEEE Std 595-1982	640	TID-26488 [†]	EUR 6100e
Parallel Highway Interface System (CAMAC)	ANSI/IEEE Std 596-1982	552	TID-25876 [†] and TID-25877 [†]	EUR 4600e
Multiple Controllers in a CAMAC Crate	ANSI/IEEE Std 675-1982	729	DOE/EV-0007	EUR 6500e
Block Transfers in CAMAC Systems	ANSI/IEEE Std 683-1976 (Reaff 1981)	677	TID-26616 [†]	EUR 4100 suppl
Amplitude Analog Signals within a 50 Ω System	—	—	TID-26614	EUR 5100e
The Definition of IML A Language for Use in CAMAC Systems	—	—	TID-26615	ESONE/IML/01
CAMAC Tutorial Articles	—	—	TID-26618	—
Real-Time BASIC for CAMAC	ANSI/IEEE Std 726-1982	‡	TID-26619 [†]	ESONE/RTB/03
Subroutines for CAMAC	ANSI/IEEE Std 758-1979 (Reaff 1981)	713	DOE/EV-0016 [†]	ESONE/SR/01
Recommendations for CAMAC Serial Highway Drivers and LAM Graders for the SCC-L2	—	—	DOE/EV-0006	ESONE/SD/02
Definitions of CAMAC Terms	Included in SH08482	678	DOE/ER-0104	ESONE/GEN/01
Standard Nuclear Instrument Modules NIM	—	547 [§]	TID-20893 (Rev 4)	—

*This is a hard cover book that contains ANSI/IEEE Std 583-1982, ANSI/IEEE Std 595-1982, ANSI/IEEE Std 596-1982, ANSI/IEEE Std 675-1982, ANSI/IEEE Std 683-1976 (Reaff 1981), ANSI/IEEE Std 726-1982 and IEEE Std 758-1979 (Reaff 1981), plus introductory material and a glossary of CAMAC terms.

[†]Superseded by corresponding IEEE Standard listed.

[‡]In preparation.

[§]Covers only mechanical features and connector pin assignments.

NOTE — Availability of Documents

ANSI	Sales Department, American National Standards Institute, 1430 Broadway, New York, NY 10018.
IEEE	IEEE Service Center, 445 Hoes Lane, Piscataway New Jersey 08854, USA.
IEC	International Electrotechnical Commission, 1, rue de Varembe, CH-1211 Geneva 20, Switzerland.
DOE and TID Reports	National Bureau of Standards, Washington, D.C. 20234, USA, Attn: L. Costrell.
EURATOM	Office of Official Publications of the European Communities, P.O. Box 1003, Luxembourg.
ESONE	Commission of the European Communities, CGR-BCM, B-2440 GEEL, Belgium, Attn: ESONE Secretariat, H. Meyer.

CLAUSE	PAGE
1. Introduction	1
2. Interpretation	1
3. Basic Features	2
4. Mechanical Characteristics	3
4.1 The Crate	4
4.2 Plug-In Units	6
4.3 Adaptor for NIM Units	9
4.4 The Dataway	9
5. Use of the Dataway Lines	14
5.1 Commands	15
5.2 Strobe Signals <i>S1</i> and <i>S2</i>	17
5.3 Data	17
5.4 Status Information	18
5.5 Common Controls <i>Z</i> , <i>C</i> , <i>I</i>	28
5.6 Nonstandard Connections <i>P1–P7</i>	29
5.7 Power Lines	30
6. Dataway Commands	30
6.1 Read Commands: Function Codes <i>F(0)–F(7)</i>	30
6.2 Control Commands: Function Codes <i>F(8)–F(15)</i>	31
6.3 Write Commands: Function Codes <i>F(16)–F(23)</i>	32
6.4 Control Commands: Function Codes <i>F(24)–F(31)</i>	34
6.5 External Representation of the Command	35
7. Signal Standards	35
7.1 Digital Signals on the Dataway	36
7.2 Other Digital Signals	42
7.3 Analog Signals	42
8. Power Line Standards	43
9. Forced Air Ventilation (Supplementary Information)	44
10. Use of Supplementary 6 V Power (Bus Lines <i>Y1</i> , <i>Y2</i>)	45
Annex A Definitions of Module and Controller (Informative)	60
Annex B Digital Signal Classes and Standard Markings for Coaxial Connectors (Supplementary Information) (Informative)	61
Annex C Preferred Connectors and Contact Assignments (Informative)	62
Annex D Typical Crate Mounted Power Supply and Ventilation Unit With Crate/Power Supply Interface Housing (Informative)	71
Annex E Camac Categories (Informative)	81
Annex F Bibliography (Informative)	82

An American National Standard

IEEE Standard Modular Instrumentation and Digital Interface System (CAMAC)

1. Introduction

This standard is intended to serve as a basis for a range of modular instrumentation capable of interfacing transducers and other devices to digital controllers for data and control. It consists of mechanical standards and signal standards that are sufficient to ensure physical and operational compatibility between units regardless of source.

The standard fully specifies a data bus (Dataway) by means of which instruments and other functional modules can communicate with each other, with peripherals, with computers, and with other external controllers as shown in Fig K1A. This serves to drastically reduce both the variety and quantity of interfacing required in a single installation and provides a considerable degree of computer independence. The multiplicity of computer dependent and instrument dependent interfaces shown in Fig K1B is typically replaced by a single computer dependent interface as in Fig K1C with one side of the interface speaking the computer language and the other side the standardized Dataway language. It will be noted that the Dataway is strictly a digital interface.

A single crate as shown in Fig K1A can typically accommodate up to twenty-three separate modules plus controller. Both single-crate systems and multiple-crate systems can be assembled. Fig K1D shows a multiple-crate system in which data is transferred in parallel, utilizing a parallel highway and a parallel highway driver. Fig K1E shows a serial system in which data is transferred bit or byte serial. The parallel system is especially useful where very high data rates are encountered, whereas the serial system is advantageous for industrial control and other applications where long distances are involved such that wiring cost is an important consideration. Standard parallel and serial highway configurations based on Figs K1D and K1E are being processed.

Maximum benefit is derived from using this standard as a whole. Selected portions may find application in additional areas. Other devices and buses, such as that of IEEE 488, can be readily incorporated into the system through an interfacing module.

2. Interpretation

Statements that specify mandatory aspects of the system are enclosed in blocks such as this. They are usually accompanied by the word *must*.

The word *should* indicates a recommended or preferred practice which is to be followed unless there are sound reasons to the contrary.

The word *may* indicates a permitted practice, leaving freedom of choice to the designer.

Appendix E defines the various CAMAC categories.

3. Basic Features

This specification is intended to serve as a basis for a range of modular instrumentation capable of linking transducers and other devices with digital controllers or computers. It consists of mechanical standards and signal standards that are sufficient to ensure compatibility between units from different sources of design and production.

The basic features of the system are as follows:

- 1) It is a modular system, with functional units which can be combined to form equipment assemblies.
- 2) The functional units are constructed as plug-in units and are mounted in a standard crate.

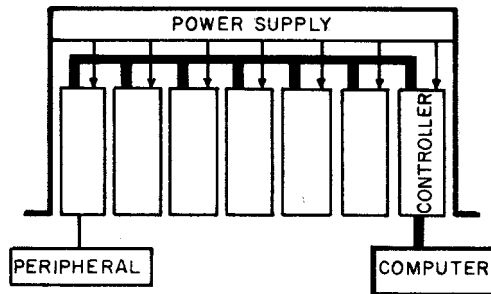


Figure K1A —Standard Arrangement. Data bus (Dataway) is heavy black line going to all modules

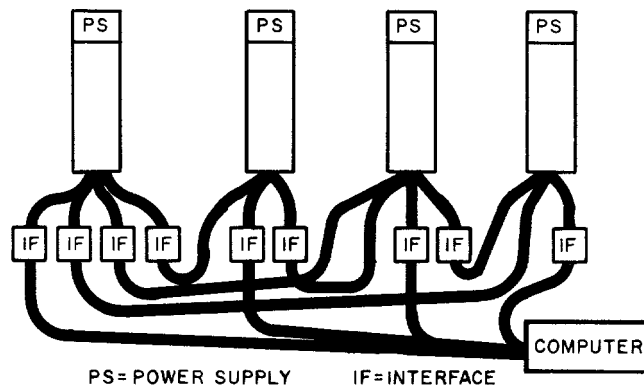


Figure K1B —Multiplicity of Interfaces Required by Nonstandard Arrangements

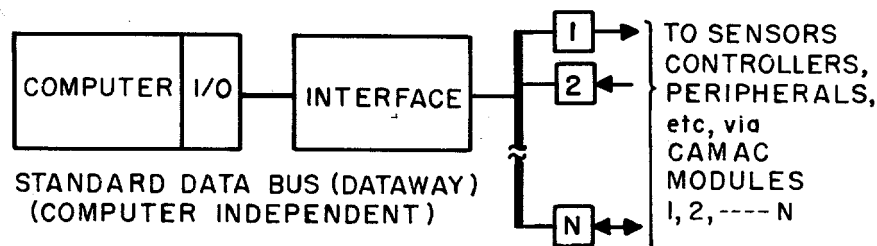


Figure K1C —Typical System With Standard Data Bus (Dataway) and Dedicated Interface

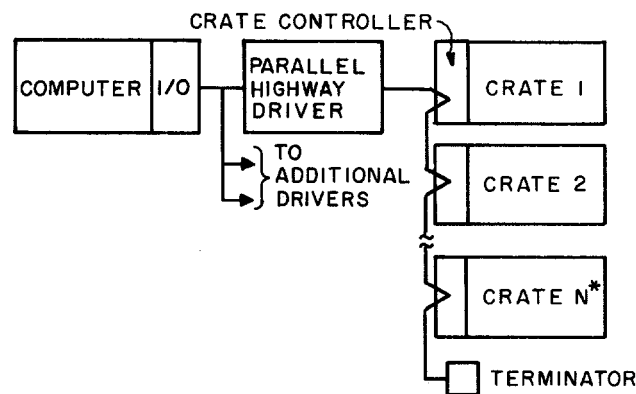


Figure K1D — Parallel Highway System
Typically $N = 7$ max

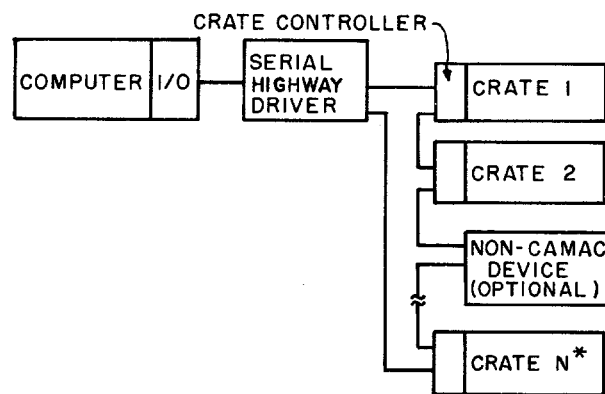


Figure K1E — Serial Highway System
Typically $N = 62$ max

- 3) The mechanical structure is designed to exploit the high-component packing density possible with integrated circuit packages and similar devices.
- 4) Each plug-in unit makes direct connection to a standard Dataway. This highway forms part of the crate and conveys digital data, control signals, and power. The standards of the Dataway are independent of the type of plug-in unit or computer used.
- 5) The system has been designed so that an assembly consisting of a crate and plug-in units can be connected to an on-line digital computer. However, the use of a computer is entirely optional and no part of this specification depends upon its presence in the system.
- 6) External connections to plug-in units may conform to the digital or analog signal standards of associated transducers, computers, etc, or to the recommended standards given in this standard.
- 7) Assemblies of crates may be interconnected by means of parallel or serial highways.
- 8) No license or other permission is needed in order to use this standard.

4. Mechanical Characteristics

CAMAC is a modular system. Equipment assemblies are formed by mounting appropriate plug-in units in a standard chassis or crate. Each plug-in unit occupies one or more mounting stations in the crate. At each station there is an

eighty-six contact connector socket giving access to the CAMAC Dataway, a data highway which forms part of the crate. The Dataway consists mainly of bus lines for data, control, and power.

Drawings for the manufacture of CAMAC compatible crates and plug-in units can be derived from the definitive dimensions given in Figs 1–3 for crates, Fig 4 for plug-in units, and Fig 5 for Dataway connector plugs and sockets.

Recommended dimensions for ventilated crates, NIM adaptors, and printed wiring cards for plug-in units are given in the nonmandatory Figs 6–8, respectively.

All dimensions in these figures are in millimeters unless indicated otherwise.

4.1 The Crate

The crate mounts in a 19 inch rack and has up to twenty-five stations for plug-in units on a pitch of 17.2 mm. Each station has upper and lower guides for the runners of a plug-in unit, an eighty-six contact Dataway connector socket, and a tapped hole for the fixing screw of a plug-in unit. Modules conforming to the NIM specification (Type N Module of IEC Publ 482), also, ERDA Report TID - 20893 (see Bibliography) can be mounted in the crate on their basic pitch of 34.4 mm (see Section 4.3).

Unless indicated otherwise, all crates must conform to Fig 1–3 and those parts of Fig 5 defining the connector socket.

Sections 4.1.1 and 4.1.2 are comment on these figures.

4.1.1 Dimensions.

Fig 1 shows the front view of a basic twenty-five station crate which occupies the minimum height of $5U$ ($U = 44.45$ mm). Crates may have less than twenty-five stations, which, as indicated by Note 3 on Fig 1, need not be positioned symmetrically.

The lower cross-member has holes tapped ISO-M4 pitch 0.7 for the fixing screws of CAMAC plug-in units, and intermediate holes tapped UNC 6–32 for the lower fixing screws of NIM units. The upper cross-member may also have holes for the fixing screws of NIM units. The positions of these holes for CAMAC and NIM units, relative to the left-hand edge of the front aperture, are given in Fig 1 by the formulas for dimensions z and w , respectively.

The positions of the centers of the guides, also relative to the left-hand edge of the aperture, are given by the formula for dimension x in Fig 1. Detail A shows the entry into a guide. The dimensions of the lead-in are not specified.

Detail B gives dimensions specified for 19 inch rack-mounting equipment by the International Electrotechnical Commission in IEC Publ 297 and also specified in Electronic Industries Association Std RS - 310-B (ANSI C83.9–1972).

Fig 2 is a plan view of the lower guides in the crate. In order to remove any heat generated in the plug-in units, it is necessary to provide adequate ventilation through the bottom and top of the crate. The unobstructed area between adjacent guides, both at the top and bottom of the crate, is not permitted to be less than 15 cm^2 and should preferably be distributed over the full depth of the crate from the front cross-members to the Dataway assembly. If crates such as that shown in Fig 1 with height $5U$ ($U = 44.45\text{ mm}$ per IEC Publ 297), are mounted above or below other equipment, (including other similar crates), it may be necessary to use intermediate deflectors, etc, to ensure adequate ventilation. Alternatively, the crate may be extended to include additional ventilation features, as described in Section 4.1.3.

Fig 3 is a sectioned side view on the offset line $d-d$ in Fig 1, passing through the center of an upper guide and a ventilating space between lower guides. The front faces of the upper and lower cross-members constitute the vertical datum of the crate. This datum is set back from the front face of the crate by a distance e , typically between 3 and 4

mm, so that the front panels of plug-in units do not project beyond the front of the crate. The backs of the crate-mounting flanges are typically, but not necessarily, aligned with the datum.

The front ends of the upper and lower guides may be set back from the vertical datum. The guides extend sufficiently far toward the rear of the crate to ensure that the connector plug of a plug-in unit is guided into the entry of the connector socket.

The minimum overall depth of the crate provides mechanical protection for the Dataway assembly. The side panels are shorter than the frontal height of the crate (see dimensions a in Figs 1, 3, and 6,) to permit the use of typical runners for supporting the crate in the rack. This reduction in height extends at least to within 25 mm of the rear face of the rack-mounting flanges of the crate.

The running surface of the lower guide constitutes the crate horizontal datum. The Dataway assembly is not permitted to extend upward more than 135 mm from this horizontal datum, so that there is unrestricted access to the upper part of the rear of plug-in units.

The positions of the connector sockets are defined with respect to the three datum lines of the crate. The center lines of the sockets are defined with respect to the left-hand edge of the front aperture by dimension y in Fig 1. The vertical datum of the sockets is shown relative to the vertical datum of the crate in Figs 2 and 3, and the horizontal datum of the sockets relative to the horizontal datum of the crate in Fig 3.

SUPPLEMENTARY INFORMATION: The design of the rear of the crate should be such as to protect the Dataway from damage. At the same time, in the space above the Dataway, access must be provided to the rear of the plug-in units. Fig D-5 of Appendix D shows a typical interface housing unit to provide this protection and to accommodate a typical power supply. (See also Appendix D.)

4.1.2 Dataway Connector Sockets.

The Dataway connector sockets have two rows of forty-three contacts on a pitch of 0.1 in (2.54 mm). Mandatory and recommended dimensions of the sockets are given in Fig 5, together with additional commonly used dimensions upon which the designs of many existing crates and Dataway assemblies have been based.

The vertical datum of the connector sockets is the nominal position of the leading edge of the connector plug of a plug-in unit fully inserted into the crate. The position of the vertical datum is defined in 5.5 of Fig 5 with respect to other functional features of the socket. In some commonly used sockets the plane of the mounting face coincides with the vertical datum of the connector socket, but this is not necessarily so.

The maximum forward projection of the connector socket in front of the vertical datum is shown in 5.5 of Fig 5. The shapes of the straight or curved chamfers that guide the connector plug into the socket are shown in 5.6, 5.7, 5.8 of Fig 5. Within the minimum width shown for each chamfer the angle between any tangent to the chamfer and the line of entry of the connector plug does not exceed 60° .

If the front aperture of the crate extends to the inner surface of the right-hand side panel (as in Figs 1 and 2), the adjacent connector socket cannot exceed the recommended width of 12 mm. Elsewhere, sockets up to the maximum width of 17.2 mm can be used.

The dimensions of the contacts of the connector socket are shown in 5.4 of Fig 5. The position of each edge is defined by a dimension d , D relative to the horizontal datum of the socket, and is completely independent of the positions of all other edges on both rows of contacts.

Alternatively, a connector socket with point contacts may be used, in which case the distance between each point contact and the horizontal datum of the connector socket is $(2.56 + 2.54k) \pm 0.13$.

4.1.3 Optional Features of the Crate.

The height of the crate may be extended by an integral number of U units ($U = 44.45$ mm), in Fig 6, in order to provide an entry for cool air which then flows up between the guides, and an exit for any warm air that may be rising from equipment below.

A crate may have fewer than twenty-five stations. The width of the front aperture is $17.2s_{-0.0}^{+0.3}$ mm for s stations, and formulas given in Fig 1 are used for locating the guides, connector socket, etc, at each station.

Power supply units may be mounted at the rear of a CAMAC crate. The overall depth of crate with rear-mounted power supplies may be limited by the depth of the rack. A recommended maximum depth of 525 mm is shown in Fig 3. A power supply unit is not allowed to extend upward above the maximum height of the Dataway assembly. It should not obstruct the entry or exit of the ventilating air flows in a crate such as that shown in Fig 6. The width of a rear-mounted power supply is limited to 447 mm.

4.2 Plug-In Units

Basically a plug-in unit consists of a front panel with fixing screw, top and bottom runners that slide in the guides of the crate, and an eighty-six contact Dataway connector plug. The connector plug is typically an integral part of a printed-wiring card but may be a separate male connector mounted at the rear of the plug-in unit. A plug-in unit may occupy more than one station and, if so, may have more than one set of runners and more than one connector plug.

Unless indicated otherwise, all plug-in units must conform to Fig 4 and those parts of Fig 5 defining the connector plug.

The following sections are comments on these figures.

4.2.1 Dimensions.

The horizontal datum of plug-in unit is the edge of the lower runner. The vertical datum is the rear face of the front panel. The upper and lower parts of the rear face should be in contact with the cross-members of the crate when the plug-in unit is fully inserted. Note 4 of Fig 4 therefore requires that the upper and lower 11 mm of the rear face of the front panel be free of projections, other than the fixing screws.

Fig 4 shows the dimensions of single-width and double-width plug-in units and gives general formulas for the front-panel widths of units.

It is recommended that the fixing screw should also provide a jacking action to assist in overcoming the withdrawal forces of the connector socket. The fixing screw of a single-width plug-in unit is located on the center line of the front panel. If a multiple-width unit has only one fixing screw, and this has a jacking action, the screw should be positioned to give the most effective pull for withdrawal of the plug-in unit (hence it should be at the same station as a single connector or approximately symmetrical with respect to two or more connectors).

Above the maximum height of the Dataway assembly there can be projections at the rear of the plug-in unit, extending more than 290 mm from the vertical datum. Below this height, in order to provide clearance for the connector socket, only the connector plug is allowed to extend beyond 290 mm.

There should be adequate ventilation through the bottom and top of each plug-in unit to remove any heat generated within the unit.

4.2.2 Dataway Connector Plug.

The dimensions of the connector plug are shown in 5.1, 5.2, 5.3 of Fig 5.

The full eighty-six contacts are always present and extend to the extreme edge of the plug. In order to avoid the risk of damage to the contact plating of connector sockets by exposed abrasives in the substrate of the connector plug contacts must not expose substrate.

Chamfers are provided at the top and bottom of the connector socket and are therefore not needed at the top and bottom corners of the connector plug where the maximum permitted chamfer is 1 × 1 mm. For at least 13 mm from the edge of the plug the contacts are straight and plated.

SUPPLEMENTARY INFORMATION: A chamfer of approximately 0.1 mm × 0.1 mm is preferred on the top and bottom corners of the Dataway connector plug to further reduce the possibility of momentary mismating of the edge connector with the Dataway connector socket. Mismating can result in destruction of the circuits when plug-in units are inserted in energized crates. It will be noted that the Dataway connector socket includes an entrance ramp.

A chamfer of 0.3 mm max $\times$ 0.3 mm max is permitted on the two vertical edges of the connector (see 5.2, Section a-a of Fig 5).

The dimensions of the contacts of the connector plug are shown in 5.3 of Fig 5. The position of each edge is defined by a dimension h , H relative to the horizontal datum and is completely independent of the position of all other edges on both sides of the plug. The lowest contact on each side of the plug may be extended to the horizontal datum in order to reduce the impedance of the 0 V line.

SUPPLEMENTARY INFORMATION: Fig K4.2.2 shows details of a typical Dataway connector plug derived from Figs 5 and 8.

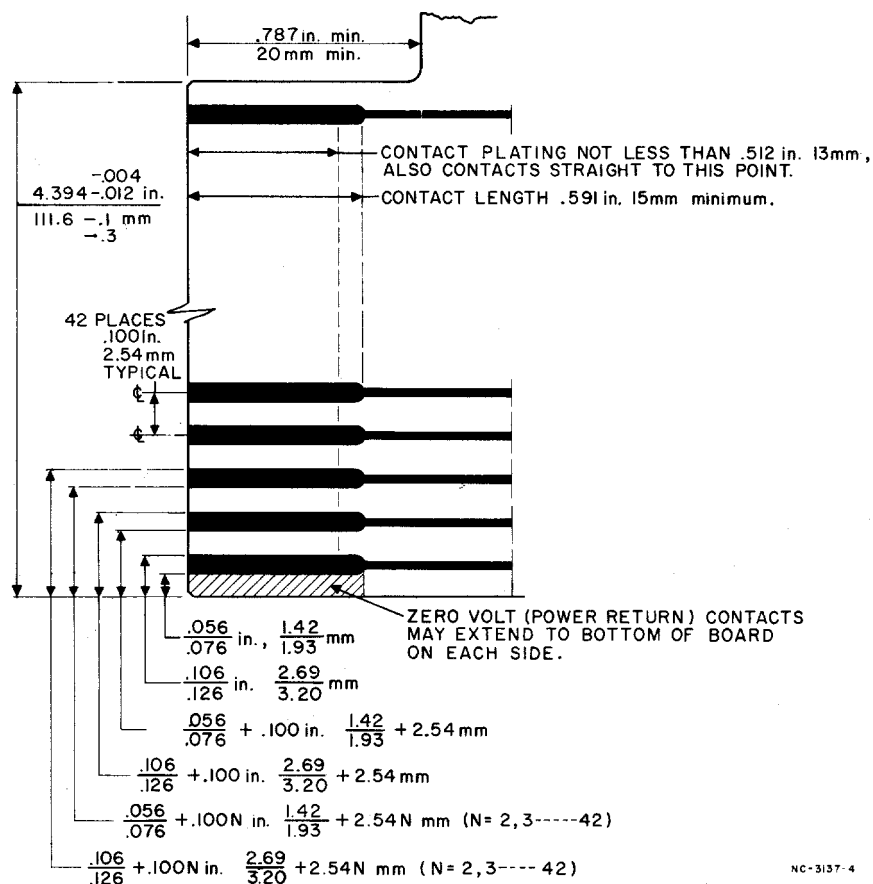


Figure K4.2.2 — Typical Dataway Connector Plug

4.2.3 Insertion of the Plug-In Unit into the Crate.

In the initial stages of insertion the plug-in unit is supported by the lower guide in the crate. The upper runner, although within the guide, has some vertical clearance. When the plug-in unit is fully inserted, the connector plug is located by the connector socket, and the front panel is supported by the securing screw. The top and bottom runners are then within the guides and approximately parallel to them, but both have some vertical clearance. The transition between these two states is described in detail below.

The dimensions of the guides and runners (Figs 1 and 4) ensure that the plug-in unit moves freely and is guided so that the leading edge of the connector plug enters the chamfers of the connector socket. The lower corner of the leading edge of the plug comes into contact with the chamfer at the bottom of the connector socket. Further insertion of the plug-in unit lifts the connector plug until its lower edge rests on the horizontal datum face of the connector socket. Even a connector plug with the maximum permitted 1×1 mm chamfer will have been lifted into correct alignment before any electrical contact occurs between the connector plug and socket. The position of maximum insertion without electrical contact, even with a maximum thickness plug, is defined in 5.5 of Fig 5 with respect to the vertical datum of the connector socket.

Before this point has been reached it will have been possible to engage the fixing screw in the corresponding tapped hole in the lower cross-member of the crate. This can be facilitated by having a tapered end to the screw, so that the front panel is lifted into the correct alignment.

Further insertion of the plug-in unit brings the contacts of the plug and socket into engagement, and the insertion force of the connector is encountered. The recommended maximum insertion and withdrawal forces are 80 N for each connector plug. Forces in excess of this can cause difficulty in inserting and withdrawing the plug-in unit and can also result in damage.

Fig 5, 5.5, defines, with respect to the vertical datum of the connector socket, the line beyond which there is reliable contact between corresponding contacts on the plug and socket, even with a plug of minimum thickness.

Finally, when the plug-in unit is fully inserted in the crate, the leading edge of the connector plug is nominally at the vertical datum of the connector socket and the lower datum face of the front panel of the plug-in unit is in contact with the lower cross-member of the crate. However, the forces due to the connector socket and fixing screw are not in line and tend to lift the connector plug off the horizontal datum of the socket, in which case there may be clearance between the upper datum face of the front panel and the upper cross-member. Fig 5, 5.5, ensures that there is adequate clearance beyond the extreme position of the connector plug, by defining a minimum distance between the vertical datum of the socket and any internal obstruction.

4.2.4 Printed-Wiring Card.

Fig 8 gives recommended dimensions for a printed-wiring card suitable for use with typical (but not necessarily all) commercially available frameworks for plug-in units conforming to this standard.

4.2.5 Other Connectors.

Connectors or other components such as switches may be mounted on the front panel or at the rear of the plug-in unit. Rear mounted components must be located above the maximum height limit of the Dataway assembly.

For subminiature coaxial connectors the Type 50CM in accordance with Fig 13 is strongly recommended.

There may, however, be special circumstances requiring the use of other connectors in order to suit a specific external equipment with which the plug-in unit is closely associated.

SUPPLEMENTARY INFORMATION: *Digital Signal Classes and Standard Markings for Coaxial Connectors.* Appendix B provides information for the guidance of users.

Auxiliary Connectors. Preferred auxiliary connectors for some applications, together with recommended contact assignments, are described in Appendix C. These connectors are useful for communicating from and to plug-in units. This list is not intended to be restrictive since it is recognized that connectors must be suitable for the applications.

4.3 Adaptor for NIM Units

Plug-in units conforming to the NIM specification (Type N Module of IEC Publ 482) can be inserted into the guides of a CAMAC crate. In order to supply power to a NIM unit, which is shorter than a CAMAC plug-in unit, an adaptor is required between the Dataway connector socket and the connector on the NIM unit. The essential dimensions of such an adaptor are given in Fig 7.

4.4 The Dataway

Communication between plug-in units takes place through the Dataway. This passive multiwire highway is incorporated into the crate and links the Dataway connector sockets at all stations. The Dataway consists of signal lines and power lines, as shown in Table 1.

The extreme right-hand station, as viewed from the front of the crate, has the special role of control station. The data lines in the Dataway are accessible at the remaining normal stations, but not at the control station.

Most signal lines are bus lines linking corresponding contacts of the Dataway connector sockets at all normal stations and, in some cases, the control station. There are also individual lines, each linking one contact at a normal station to one contact at the control station. At each station there are contacts for unspecified uses. Two of these contacts are linked across all normal stations to form free bus lines. The remainder are available as patch contacts, but do not have specified Dataway wiring. The Dataway construction may extend these patch contacts, and others associated with the individual lines and certain bus lines, to more readily accessible patch points to which patch connections can be attached.

Table 1 — Standard Dataway Usage

Title	Designation	Contacts	Use at a Module
Command Station Number	<i>N</i>	1	Selects the module (individual line from control station)
Subaddress	<i>A1, 2, 4, 8</i>	4	Selects a section of the module
Function	<i>F1, 2, 4, 8, 16</i>	5	Defines the function to be performed in the module
Timing Strobe 1	<i>S1</i>	1	Controls first phase of operation (Dataway signals must not change)
Strobe 2	<i>S2</i>	1	Controls second phase (Dataway signals may change)
Data Write	<i>W1–W24</i>	24	Bring information to the module
Read	<i>R1–R24</i>	24	Take information from the module
Status Look-at-Me	<i>L</i>	1	Indicates request for service (individual line to control station)
Busy	<i>B</i>	1	Indicates that a Dataway operation is in progress
Response	<i>Q</i>	1	Indicates status of feature selected by command
Command Accepted	<i>X</i>	1	Indicates that module is able to perform action required by the command
Common Controls			<i>Operate on all features connected to them, no command required</i>
Initialize	<i>Z</i>	1	Sets module to a defined state (Accompanied by <i>S2</i> and <i>B</i>)
Inhibit	<i>I</i>	1	Disables features for duration of signal
Clear	<i>C</i>	1	Clears registers (Accompanied by <i>S2</i> and <i>B</i>)
Nonstandard Connections Free bus lines	<i>P1, P2</i>	2	For unspecified uses
Patch contacts	<i>P3–P5</i>	3	For unspecified interconnections. No Dataway lines
Mandatory Power Lines			<i>The crate is wired for mandatory and additional lines</i>
+24 V dc	+24	1	
+ 6 V dc	+ 6	1	
– 6 V dc	– 6	1	
–24 V dc	–24	1	
0 V	0	2	Power return
Additional Power Lines			<i>Lines are reserved for the following power supplies:</i>
+12 V dc	+12	1	
–12 V dc	–12	1	
Clean Earth	<i>E</i>	1	Reference for circuits requiring clean earth
Supplementary –6 V**	<i>Y1</i>	1	See Section 10.
Supplementary +6 V	<i>Y2</i>	1	See Section 10.
Reserved undesignated		3	
Total		86	

Table 2 — Contact Allocation at a Normal Station (Viewed From Front of Crate)

Bus line	Free Bus line	<i>P1</i>	<i>B</i>	Busy	Bus line
Bus line	Free Bus line	<i>P2</i>	<i>F16</i>	Function	Bus line
Individual patch contact		<i>P3</i>	<i>F8</i>	Function	Bus line
Individual patch contact		<i>P4</i>	<i>F4</i>	Function	Bus line
Individual patch contact		<i>P5</i>	<i>F2</i>	Function	Bus line
Bus line	Command Accepted	<i>X</i>	<i>F1</i>	Function	Bus line
Bus line	Inhibit	<i>I</i>	<i>A8</i>	Subaddress	Bus line
Bus line	Clear	<i>C</i>	<i>A4</i>	Subaddress	Bus line
Individual line	Station Number	<i>N</i>	<i>A2</i>	Subaddress	Bus line
Individual line	Look-at-Me	<i>L</i>	<i>A1</i>	Subaddress	Bus line
Bus line	Strobe 1	<i>S1</i>	<i>Z</i>	Initialize	Bus line
Bus line	Strobe 2	<i>S2</i>	<i>Q</i>	Response	Bus line
Twenty-four Write Bus lines		<i>W24</i>	<i>W23</i>		
<i>W1</i> = least significant bit		<i>W22</i>	<i>W21</i>		
<i>W24</i> = most significant bit		<i>W20</i>	<i>W19</i>		
		<i>W18</i>	<i>W17</i>		
		<i>W16</i>	<i>W15</i>		
		<i>W14</i>	<i>W13</i>		
		<i>W12</i>	<i>W11</i>		
		<i>W10</i>	<i>W9</i>		
		<i>W8</i>	<i>W7</i>		
		<i>W6</i>	<i>W5</i>		
		<i>W4</i>	<i>W3</i>		
		<i>W2</i>	<i>W1</i>		
Twenty-four Read Bus lines		<i>R24</i>	<i>R23</i>		
<i>R1</i> = least significant bit		<i>R22</i>	<i>R21</i>		
<i>R24</i> = most significant bit		<i>R20</i>	<i>R19</i>		
		<i>R18</i>	<i>R17</i>		
		<i>R16</i>	<i>R15</i>		
		<i>R14</i>	<i>R13</i>		
		<i>R12</i>	<i>R11</i>		
		<i>R10</i>	<i>R9</i>		
		<i>R8</i>	<i>R7</i>		
		<i>R6</i>	<i>R5</i>		
		<i>R4</i>	<i>R3</i>		
		<i>R2</i>	<i>R1</i>		
Power Bus lines	−12 V dc	−12	−24	−24 V dc	
	Reserved (c)*		−6	−6 V dc	
	Reserved (a)*	—	—	Reserved (b)*	
	Supplementary −6 V†	<i>Y1</i>	<i>E</i>	Clean Earth	
	+12 V dc	+12	+24	+24 V dc	
	Supplementary +6 V**	<i>Y2</i>	+6	+6 V dc	
	0 V (Power Return)	0	0	0 V (Power Return)	

*Reserved (c) was previously assigned to +200 V dc,

Reserved (a) to 117 V ac Line, and

Reserved (b) to 117 V ac neutral, all non-mandatory voltages.

Effective 1 January 1978, these assignments were cancelled in order to avoid hazardous voltages on the connectors.

†See Section 10.

Table 3 — Contact Allocation at the Control Station (Viewed From Front of Crate)

Individual patch contact		<i>P1</i>	<i>B</i>	Busy	Bus line
Individual patch contact		<i>P2</i>	<i>F16</i>	Function	Bus line
Individual patch contact		<i>P3</i>	<i>F8</i>	Function	Bus line
Individual patch contact		<i>P4</i>	<i>F4</i>	Function	Bus line
Individual patch contact		<i>P5</i>	<i>F2</i>	Function	Bus line
Bus line	Command Accepted	<i>X</i>	<i>F1</i>	Function	Bus line
Bus line	Inhibit	<i>I</i>	<i>A8</i>	Subaddress	Bus line
Bus line	Clear	<i>C</i>	<i>A4</i>	Subaddress	Bus line
Individual patch contact		<i>P6</i>	<i>A2</i>	Subaddress	Bus line
Individual patch contact		<i>P7</i>	<i>A1</i>	Subaddress	Bus line
Bus line	Strobe 1	<i>S1</i>	<i>Z</i>	Initialize	Bus line
Bus line	Strobe 2	<i>S2</i>	<i>Q</i>	Response	Bus line
Twenty-four individual Look-at Me lines (<i>L1</i> from Station 1, etc)		<i>L24</i>	<i>N24</i>	Twenty-four individual Station Number lines, (<i>N1</i> to Station 1, etc.)	
		<i>L23</i>	<i>N23</i>		
		<i>L22</i>	<i>N22</i>		
		<i>L21</i>	<i>N21</i>		
		<i>L20</i>	<i>N20</i>		
		<i>L19</i>	<i>N19</i>		
		<i>L18</i>	<i>N18</i>		
		<i>L17</i>	<i>N17</i>		
		<i>L16</i>	<i>N16</i>		
		<i>L15</i>	<i>N15</i>		
		<i>L14</i>	<i>N14</i>		
		<i>L13</i>	<i>N13</i>		
		<i>L12</i>	<i>N12</i>		
		<i>L11</i>	<i>N11</i>		
		<i>L10</i>	<i>N10</i>		
		<i>L9</i>	<i>N9</i>		
		<i>L8</i>	<i>N8</i>		
		<i>L7</i>	<i>N7</i>		
		<i>L6</i>	<i>N6</i>		
		<i>L5</i>	<i>N5</i>		
		<i>L4</i>	<i>N4</i>		
		<i>L3</i>	<i>N3</i>		
		<i>L2</i>	<i>N2</i>		
		<i>L1</i>	<i>N1</i>		
Power Bus lines	–12 V dc	–12	–24	–24 V dc	
	Reserved (c)*		–6	–6 V dc	
	Reserved (a)*	—	—	Reserved (b)*	
	Supplementary –6 V†	<i>Y1</i>	<i>E</i>	Clean Earth	
	+12 V dc	+12	+24	+24 V dc	
	Supplementary +6 V**	<i>Y2</i>	+6	+6 V dc	
	0 V (Power Return)	0	0	0 V (Power Return)	

*Reserved (c) was previously assigned to +200 V dc,

Reserved (a) to 117 V ac Line, and

Reserved (b) to 117 V ac Neutral, all non-mandatory voltages.

Effective 1 January 1978, these assignments were cancelled in order to avoid hazardous voltages on the connectors.

†See Section 10.

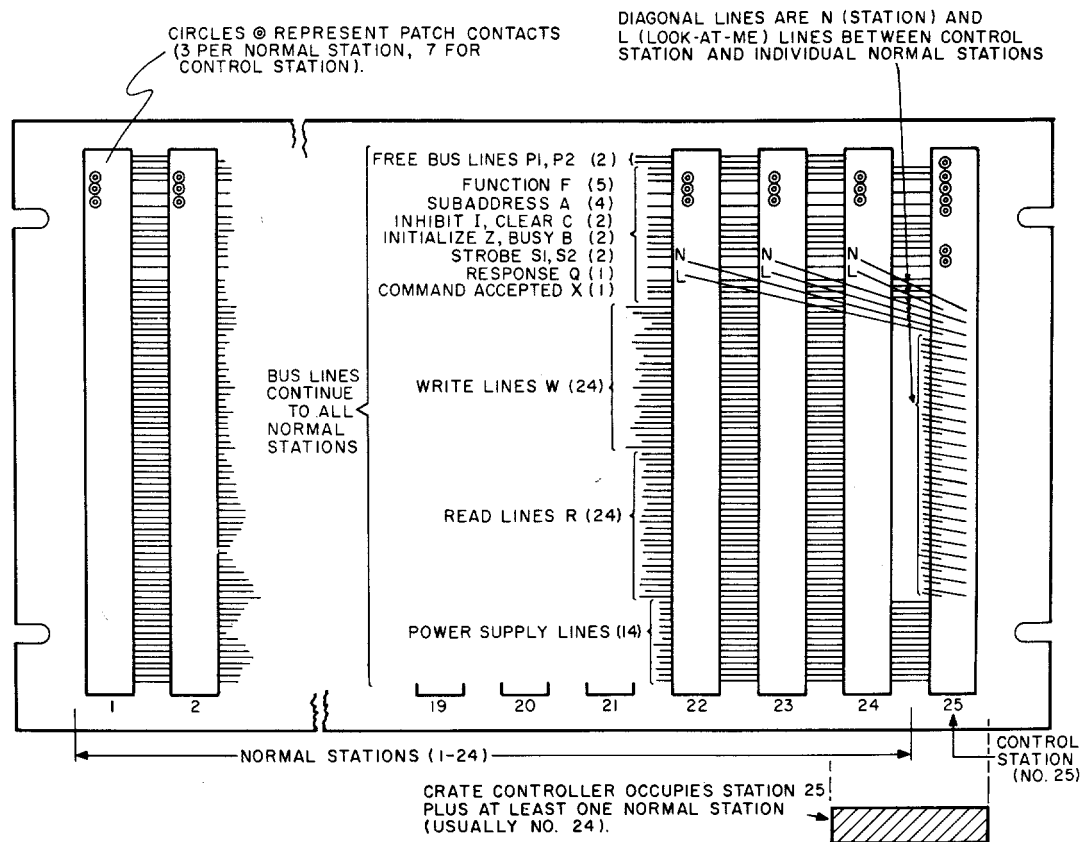


Figure K4.4 — Databay Wiring, Front View of Twenty-Five Station Crate

The power lines link corresponding contacts of the Databay connector sockets at all stations. The power return line (0 V) links two contacts in parallel at all stations.

The assignment of contacts at the Databay connector and their connections to bus lines, individual lines, and patch contacts must be as shown in Table 2 for normal stations and Table 3 for the control station. The control station must be to the right of all normal stations.

The method of construction of the Databay must be consistent with the signal standards for signal lines (see Section 7.) and with the maximum current loads specified for the power lines (see Section 8.).

Apart from this, the construction of the Databay is not specified. Appropriate techniques include printed wiring on flexible or rigid substrates (with and without ground planes) and soldered or wrapped wiring. Particular attention should be given to the cross-coupling between signal lines, and to their capacitance to ground.

SUPPLEMENTARY INFORMATION:

Databay Wiring. Fig K4.4 shows the Databay wiring in a crate with twenty-five stations. The twenty-four normal stations (station numbers 1–24) of the crate are wired identically. The wiring of the control station (number 25) is different from that of the normal stations. Since a crate controller must have access to the Read *R* and Write *W* bus lines, it must occupy at least one normal station in addition to the control station.

The Databay lines (and contacts) fall into the four categories described below:

- 1) *All Station Bus Lines* linking corresponding Dataway connector contacts at all stations, including the control station. There are thirty-one such bus lines as follows:

Function lines F	5	Busy B	1
Subaddress lines A	4	Response Q	1
Inhibit I	1	Strobe $S1, S2$	2
Clear C	1	Command Accepted X	1
Initialize Z	1	Power Supply lines	14

- 2) *Normal Station Bus Lines* linking corresponding Dataway connector contacts at all normal stations, but not connected to the control station. There are fifty such bus lines as follows:

Write lines W	24
Read lines R	24
Free bus lines $P1, P2$	2

- 3) *Individual Lines* between the control station and each normal station. There are two such lines for each normal station, the N line (Station Number line), by which the control station addresses specific normal stations, and the L line (Look-at-Me line), by which specific stations advise the control station that they desire attention. Thus twenty-four N lines and twenty-four L lines connect to the control station.
- 4) *Patch Contacts* (for each Dataway station) that are not connected to the Dataway and are thus available for patch connections. There are three patch contacts for each normal station and seven for the control station.

Dataway Patch Contact Terminals. It is mandatory that patch contacts (such as wire-wrap terminals) be provided for $P3$ - $P5$ of normal stations and $P1$ - $P7$ of the control station. In addition, it is preferred practice to have such contact terminals provided also for I , C , and the 0 V (Power Return) buses and for each N and L line.

5. Use of the Dataway Lines

Each line of the Dataway must be used in accordance with the mandatory requirements detailed in the following sections and summarized in Table 1.

A typical Dataway operation involves at least two plug-in units, one of which acts as a controller and the other as a controlled module. In this standard the terms controller and module have the following specific meanings. Controller refers to a unit occupying the control station and at least one normal station. Module refers to a unit occupying one or more normal stations. Both receive signals from some Dataway lines and generate signals on others in accordance with the definitions given in Appendix A. (In practice there can be special cases of units that combine some properties of a controller with some properties of a module.)

There are two types of Dataway operations. During *command operations* the controller generates a command consisting of signals on individual Station Number lines to specify one or more modules, on the Subaddress bus lines to specify a subsection of the module, and on the Function bus lines to specify the operation to be performed. During *unaddressed operations* there is no command, but the controller generates one of the common control signals on the Initialize or Clear bus lines, and this operates on all modules connected to the bus line. During command operations and unaddressed operations the controller generates a signal on the Busy bus line. The Busy signal is available at all stations to indicate that a Data-way operation is in progress. Two timing signals, Strobes $S1$ and $S2$, are generated in sequence on separate bus lines during command operations. Only Strobe $S2$ is mandatory during unaddressed operations, but $S1$ may also be generated.

During a Dataway command operation there may be a read data transfer from a module to the controller, or a write data transfer from the controller to a module, or neither.

In response to a read command the addressed module establishes Read data signals which are available to the controller from the time of Strobe $S1$ onwards. In response to a write command the addressed module accepts Write data signals from the controller at the time of Strobe $S1$.

The addressed module indicates by a signal on the Command Accepted bus line whether it is able to perform the action required by the command. It may also transmit one bit of status information on the Response bus line. The controller accepts the Command Accepted and Response signals at the time of Strobe $S1$.

Any module may generate a signal on its individual Look-at-Me line to indicate that it requires attention.

Three common control signals are available at all stations, without requiring addressing by a command, in order to Initialize all units (typically after switch-on), to Clear data registers, or to Inhibit features such as data taking.

The use of each Dataway line is defined in the following sections. The relationship between signals, in order to generate specific commands, is defined in Section 6., and the electrical signal standards, including timing, are defined in Section 7.

The sequence of events during command operations is described in Section 7.1.3.1 and shown in Fig 9. The sequence during unaddressed operations is described in Section 7.1.3.2 and shown in Fig 10.

SUPPLEMENTARY INFORMATION: Block Transfers. A block transfer may be defined as a specified sequence of CAMAC operations initiated by a single, more powerful command (a block transfer command). It is possible to design a large number of block transfer sequences (modes) which are compatible with this standard. However, a relatively small number of modes can accomplish nearly all block transfers which are usually needed. To enhance compatibility among modules, controllers, and software, it is recommended that only the defined modes be used.

5.1 Commands

The state of the signals on the individual Station Number lines (specifying a module or modules), the four Subaddress lines (specifying a subsection of the module) and the five Function lines (specifying the type of operation) constitute a command.

The command signals are maintained for the full duration of the Dataway operation. They are accompanied by a signal on the Busy bus line, which indicates to all units that a Dataway operation is in progress.

Plug-in units must not rely on the state of signals on the Subaddress and Function lines when no command operation is in progress.

5.1.1 Station Number N

Each normal station is addressed by a signal on an individual Station Number line N_i which comes from a separate contact at the control station (see Tables 2 and 3). The stations are numbered in decimal from the left-hand end as viewed from the front, beginning with Station 1 (addressed by $N1$).

There is no restriction on the number of stations that can be addressed simultaneously and the design of the modules should permit this.

5.1.2 Subaddress A8, A4, A2, A1

Different sections of a module are addressed by signals on the four *A* bus lines. These signals are decoded in the module to select one of up to sixteen subaddresses, numbered in decimal from *A*(0) to *A*(15).

The subaddress may be used to select, for example, a register within the module, or a feature that is to control the Response signal *Q*, or a section of the module that is to be operated on by functions such as Enable, Disable, and Execute. The use made of the subaddress within a module is discussed in relation to the function codes in Section 6.

Each subaddress code used in a module must be fully decoded in the module. Full decoding means that all four Dataway Subaddress signals are used in the decoding process.

The subaddress codes are designated *A*(0), *A*(1), *A*(2), *A*(3), etc, to distinguish them from the individual Subaddress lines *A*1, *A*2, *A*4, and *A*8. For example, the Subaddress signals *A*1 = 1, *A*2 = 1, *A*4 = 0, and *A*8 = 0 represent the code *A*(3).

5.1.3 Function F16, F8, F4, F2, F1

The function to be performed at the specified subaddress in the selected module or modules is defined by the signals on the five *F* bus lines. These signals are decoded in the module to select one of up to thirty-two functions, numbered in decimal from *F*(0) to *F*(31). The definitions of the thirty-two function codes are summarized in Table 4 and are detailed in Section 6, in relation to the command structure.

In some systems the controller partially decodes the Function signals in order to determine whether a data transfer is required to a module (writing) or from a module (reading). Multiple-station addressing allows operations with the same function code to be performed simultaneously in more than one module. These features depend on some standardization in the assignment of function codes.

The function codes are subdivided into three groups, involving read operations, write operations, and operations with no transfer of data. The standard function codes have defined actions in modules and controllers. There are also reserved codes, for any future additions to the standard codes, and nonstandard codes whose use is not defined in detail.

Each function code used in a module must be fully decoded in the module. Full decoding means that all five Dataway Function signals are used in the decoding process.

The function codes are designated *F*(0), *F*(1), *F*(2), *F*(3), etc, to distinguish them from the individual function lines *F*1, *F*2, etc. For example, the Function signals *F*1 = 1, *F*2 = 0, *F*4 = 0, *F*8 = 1, and *F*16 = 1 represent the code *F*(25).

5.2 Strobe Signals $S1$ and $S2$.

During each command operation the controller generates two Strobe signals $S1$ and $S2$ in sequence on separate bus lines. In response to these timing signals plug-in units initiate various actions appropriate to the command that is present on the Dataway.

Both Strobe signals must be generated during each command operation.

Plug-in units must not take irreversible action based on the command or data signals until the time of $S1$. Actions concerned with the acceptance of data and status information from the R , W , Q , and X lines must be initiated at the time of $S1$ (with the possible exception given below). Other actions may also be timed by $S1$, but must not change the state of signals on the R and W lines.

Any actions that can change the state of Dataway Read or Write signals must be initiated by the second strobe $S2$. For example, $S2$ must be used if it is required to clear a register whose output is connected to the Dataway.

Modules normally accept write data in response to $S1$, because the data signals are permitted to change at the time of $S2$. However, modules may accept write data in response to $S2$ under special circumstances, but this is not recommended.

During unaddressed Dataway operations the controller generates Strobe $S2$ to indicate when modules accept the common control signal. Strobe $S1$ may also be generated, but this is not mandatory, and modules cannot rely on it.

Strobe $S2$ must be generated during each unaddressed operation.

5.3 Data

All information carried by the Read and Write lines is conveniently described as data, although it may be information concerned with status or control features in modules. Information that is transferred to or from a control register in a module is thus regarded as data.

Up to 24 bits may be transferred in parallel between the controller and the selected module. Independent lines are provided for the read and write directions of transfer.

If the bits of a data word have different numerical significance, line R_n should be used for a higher order bit than R_{n-1} , and W_n for a higher order bit than W_{n-1} .

It is recommended that controllers have 24 bit capability. For particular applications assemblies are permitted in which the controller has a word length less than 24 bits and the modules have an equal or smaller word length.

Plug-in units must not rely on the state of signals on the Read and Write bus lines when no command operation is in progress.

5.3.1 Write Lines $W1$ - $W24$

The controller generates data signals on the W bus lines during each write operation. The W signals must reach a steady state before $S1$ and must be maintained until the end of the operation, unless modified by $S2$. Strobe $S1$ must be used by the modules to strobe the data unless there are very strong technical reasons for choosing $S2$ (see Section 5.2).

The W lines serve a few data sources (typically only one controller) and many data receivers.

5.3.2 Read Lines R1-R24

Data signals are set up on the *R* bus lines by the module during a read operation. The *R* signals must reach a steady state before *S1* and must be maintained for the full duration of the Dataway operation, unless the state of the data source is changed by *S2*. The controller must initiate action concerned with the acceptance of data from the *R* lines at the time of the Strobe *S1* and must not take irreversible action before this.

Table 4 — The Function Codes

Code <i>F()</i>	Function	Use of <i>R</i> and <i>W</i> Lines	Function Signals					Code <i>F()</i>
			<i>F16</i>	<i>F8</i>	<i>F4</i>	<i>F2</i>	<i>F1</i>	
0	Read Group 1 register	Functions using the <i>R</i> lines	0	0	0	0	0	0
1	Read Group 2 register		0	0	0	0	1	1
2	Read and Clear Group 1 register		0	0	0	1	0	2
3	Read Complement of Group 1 register		0	0	0	1	1	3
4	Nonstandard		0	0	1	0	0	4
5	Reserved		0	0	1	0	1	5
6	Nonstandard		0	0	1	1	0	6
7	Reserved		0	0	1	1	1	7
8	Test Look-at-Me	Functions not using the <i>R</i> or <i>W</i> lines	0	1	0	0	0	8
9	Clear Group 1 register		0	1	0	0	1	9
10	Clear Look-at-Me		0	1	0	1	0	10
11	Clear Group 2 register		0	1	0	1	1	11
12	Nonstandard		0	1	1	0	0	12
13	Reserved		0	1	1	0	1	13
14	Nonstandard		0	1	1	1	0	14
15	Reserved		0	1	1	1	1	15
16	Overwrite Group 1 register	Functions using the <i>W</i> lines	1	0	0	0	0	16
17	Overwrite Group 2 register		1	0	0	0	1	17
18	Selective Set Group 1 register		1	0	0	1	0	18
19	Selective Set Group 2 register		1	0	0	1	1	19
20	Nonstandard		1	0	1	0	0	20
21	Selective Clear Group 1 register		1	0	1	0	1	21
22	Nonstandard		1	0	1	1	0	22
23	Selective Clear Group 2 register		1	0	1	1	1	23
24	Disable	Functions not using the <i>R</i> or <i>W</i> lines	1	1	0	0	0	24
25	Execute		1	1	0	0	1	25
26	Enable		1	1	0	1	0	26
27	Test Status		1	1	0	1	1	27
28	Nonstandard		1	1	1	0	0	28
29	Reserved		1	1	1	0	1	29
30	Nonstandard		1	1	1	1	0	30
31	Reserved		1	1	1	1	1	31

The *R* lines serve a few data receivers (typically only one controller) and many data sources.

5.4 Status Information

Status information is conveyed by signals on the Look-at-Me *L*, Busy *B*, Response *Q*, and Command Accepted *X* lines.

5.4.1 Look-at-Me L

The Look-at-Me lines, like the N lines, are individual connections from each normal station to separate contacts at the control station ($L1$ from station 1, etc).

Any module may generate a signal on its individual line L_i to indicate that it requires attention. Modules that occupy more than one station may indicate different demands by signals on the appropriate L lines.

The L signal generated by a module may represent demands for attention originating from more than one Look-at-Me source (LAM source) in the module. A LAM structure by which various demands can be selected and grouped to form the L signal is shown in Fig 11 and described below. All modules that generate L have the mandatory features shown in Fig 11 and may incorporate additional features for more complex demand handling.

Individual bits of the LAM status register are set by the corresponding LAM sources, and are cleared by appropriate commands and by the initialize signal. The outputs (LAM status) may be examined collectively by reading the state of all outputs [Read Group 2 at $A(12)$], or individually by the command Test Status with the appropriate subaddress $A(i)$. Each LAM status should be individually enabled and disabled (for example by a LAM mask) to form the corresponding LAM request. The LAM requests are examined collectively by reading the state of all LAM requests [Read Group 2 at $A(14)$], or individually by the command Test LAM with the appropriate subaddress $A(i)$. The internal Look-at-Me signal (L signal), derived from the OR combination of the LAM requests, is tested by the command Test LAM, with subaddress $A(k)$ distinguishing this from tests of individual LAM requests. Finally, the output of this signal as the Dataway L signal is inhibited while the module is addressed by N , possibly in conjunction with certain F and A codes or groups of codes. (See Section 5.4.1.3.)

SUPPLEMENTARY INFORMATION:

Examples of LAM Logic. Figs K5.4.1A–K5.4.1C are examples of LAM logic in modules. Fig K5.4.1A shows an example of LAM logic for a module with a single source of Look-at-Me. For modules having multiple sources of Look-at-Me, operations on the LAMs may be addressed via subaddresses (as in Fig K5.4.1B) or via bits in the data word associated with the operation (as in Fig K5.4.1C).

5.4.1.1 Look-at-Me: Clear, Disable, and Test

Provision must be made for resetting each bit of the LAM status register individually, either by a Clear Look-at-Me operation $F(10)$ see Section 6.2.3), or by a Selective Clear Group 2 operation $F(23)$ see Sections 5.4.1.2 and 6.3.6). All LAM status bits must be reset collectively by the Initialize signal (see Section 5.5.1).


If the LAM request calls for some specific action (for example, reading the contents of a data register), then the corresponding bit of the LAM status register should also be cleared when the appropriate Dataway operation is performed.

A module that has generated $L = 1$ must not clear the LAM status register until it receives an appropriate command or the Initialize signal.

Each module that generates L should have a means of enabling and disabling the LAM requests. This may be done by loading and clearing a mask register, or by Enable and Disable commands.

All LAM requests that can be disabled by commands must also be disabled by the Initialize signal Z.

A module that generates L must have a means of testing the L signal by a Test Look-at-Me operation [Function code $F(8)$ (see Section 6.2.1), with a subaddress distinguishing this from tests of individual LAM requests]. If there are several LAM sources, the corresponding LAM requests must also be capable of being examined either by Test Look-at-Me operations associated with appropriate subaddresses or by reading a LAM request pattern in a read operation.

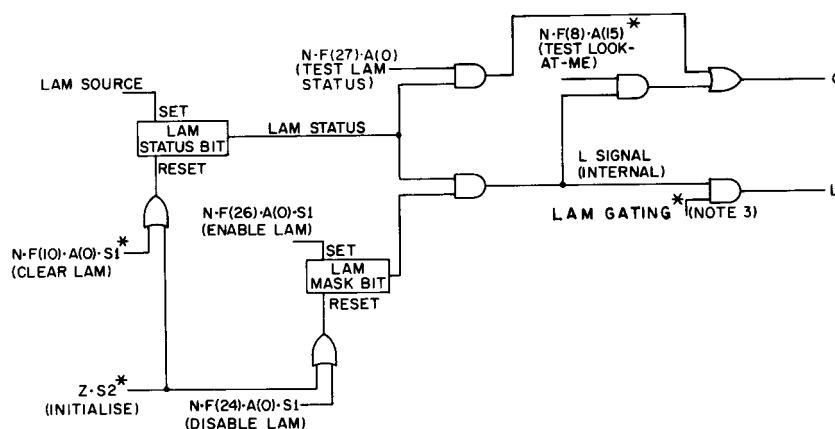

NOTES:

- 1 — Features mandatory for this LAM system shown with an asterisk.
- 2 — Subaddresses may be chosen arbitrarily, for example, to match subaddresses associated with the LAM sources. In this example, $A(15)$ is shown for Test Look-at-Me for uniformity with more complex modules. See Figs K5.4.1A–K5.4.1C
- 3 — Some form of L inhibiting is required. See 5.4.1.3.
- 4 — Except for Z where the use of $S2$ is mandatory, either $S1$ or $S2$ may be used.

Figure K5.4.1A — Example of Single-Source Look-at-Me Logic