

Guidance Document

G1328 Using confined space communication equipment

Issue No.: A1

Issue date: September 2012
Review date: September 2015

MAYOR OF LONDON

 **Documents**
Document Sharing Hub



Contents

1	Purpose	3
2	Scope	3
3	Description of activities	3
3.1	Initial system test	3
3.2	Using the CSI-1100	4
3.3	Battery replacement	4
3.4	Operating notes	4
3.5	Connections diagram	6
4	Responsibilities	7
4.1	Process owner	7
4.2	Equipment user	7
4.3	Tackle stores operative	7
5	SQE considerations	7
5.1	Risk assessments	7
5.2	Personal protective equipment	8
6	References	8
6.1	Documents	8
6.2	Abbreviations	8
6.3	Definitions	8
6.4	Records	9
6.5	Subject matter expert	9
6.6	Document history	9



This preamble must be included where the document could be used by a supplier or contractor to London Underground;

This document must not form part of Contractual terms and conditions between London Underground and Suppliers.

Neither London Underground nor Suppliers are bound to provide any of the items or services or follow any processes described in this document unless they are also required to provide them explicitly by other, Contractually binding, documents.

The information within this document must not be used by London Underground or Suppliers to raise or moderate expectations of delivery by Suppliers or London Underground over and above Contractual requirements.

1 Purpose

This document provides guidelines for using the CSI-110 communication equipment..

2 Scope

This guidance document applies to all maintenance where entry to a confined space is made using the communication equipment.

3 Guidance

CAUTION: EYE PROTECTION MUST BE WORN AT ALL TIMES DURING THE WORKING PROCESS.

3.1 Initial system test

NOTE: Communications equipment must be tested before starting work on-site and at regular intervals during use.

3.1.1 Switch power to ON.

NOTE: The ON/OFF switch also controls the volume for the operator port; the volume should be set to half way after switching the power ON.

3.1.2 Connect the operator accessory (normally the headset) to the OPERATOR port.

3.1.3 Make certain the system is turned on and speak into the microphone, you should be able to hear yourself speak. Adjust the volume as required for your own comfort.

3.1.4 If the low battery warning beeps (5 second intervals) can be heard replace the battery.

3.1.5 Set MODE switch for either TALK BOX or NORMAL operation.

NOTE: The MODE switch controls the entrant port only and has no effect on the operator port.

3.1.6 If the talk box is to be used on the entrant port, set the switch for talk box operation.

3.1.7 For all other communication accessories set the switch for NORMAL operation.