

Infrastructure Plant Manual

Module P509 Trailers and attachments

Technical content authorised by:

Edward Davison, Senior Policy Development Specialist [Plant and T&RS] | 02/03/2013

Technical content endorsed by:

James Allenden, Professional Head [Plant and T&RS] | 02/03/2013

Accepted for publication by:

Mick McManus, National Standards Manager | 02/03/2013



Contents

0.1 Job roles	3
0.2 Risk mitigation	3
1 Application of this module	4
2 Using trailers and attachments	4
2.1 General	4
2.2 Compatibility of trailers and attachments	5
2.3 Coupling and uncoupling of trailers	5
2.4 Coupling and uncoupling of attachments	6
2.5 Attaching and detaching a dozer blade trolley	7
3 Brake test requirements for trailers and attachments	7
3.1 Summary of requirements	7
3.2 Functional brake testing	7
3.3 Maintenance brake testing	8
Table 1 – Examples of typical trailer formations	6
Table 2 – Brake test requirements for trailers and attachments	7

Copyright Network Rail

0.1 Job roles

This module is applicable to the following job roles, you must familiarise yourself with all of the clauses contained within it to understand your personal responsibilities. If you intend to carry out any of these roles you must hold the relevant Sentinel competency:

- Machine Controller
- Machine Operator
- Crane Controller
- COSS
- ES
- Planner
- Maintainer/Fitter
- Plant suppliers
- Machine/trailer convertors
- Trailer manufacturers

0.2 Risk mitigation

This module helps mitigate the following high level risks:

- a) compliance with legislation (LOLER, PUWER, HASAW);
- b) runaway/failure to stop on demand, e.g. OTP running away on a gradient.
- c) damage to assets, e.g. RRV or its load hitting a passing train during ALO operation;
- d) collision, e.g. collision between a RRV and an OTM;
- e) staff injuries, e.g. Operator being trapped between machine and infrastructure or machine and machine.

Copyright Network Rail