

Node Configuration

For approval and authorisation of this document, please refer to the IECC Applications Manual Contents, RT/E/S/10040.

This document is the property of Railtrack. It shall not be reproduced in whole or in part without the written permission of the Railtrack Professional Head of Signalling Asset Management.

**Published and issued by
Director, Asset Management
Railtrack plc
Railtrack House
Euston Square
LONDON
NW1 2EE**

© 1999 RAILTRACK PLC

This page is intentionally blank

Amendment Record

Issue	Date	Description
5	29/10/99	Converted to Word format by AEA Technology Rail. Same as issue 4.1, except for incorporating Appendices A, B, C and D in issue 4.1 into the current document as Sections 4, 5, 6 and 7. No other changes made.

Author	Approved	Date	Authorised	Date
--------	----------	------	------------	------

.....

.....

Contents

1 Introduction	1
1.1 SUMMARY	1
1.2 GENERAL CONVENTIONS	1
2 Locating The Node	2
3 Configuring A Node	4
3.1 RING TEST NODE CONFIGURATION	4
3.2 INITIAL COMMANDS AND RESPONSES	4
3.3 ENTERING CONFIGURATION PARAMETERS	5
4 Configuring Parameters For ‘Dumb’ Nodes	7
5 Configuration Parameters For ‘Intelligent’ Nodes	9
6 VDU Terminal Connections	11
7 Superlink Firmware Sumchecks	12

SAO-IEC-HT-16 Issue 5