



BSI Standards Publication

Electric-electronic interface between chassis-cab and bodywork of refuse collection vehicles (RCVs)

National foreword

This Published Document is the UK implementation of CEN/TR 16596:2013.

The UK participation in its preparation was entrusted to Technical Committee B/508/1, Waste containers and associated lifting devices on refuse collection vehicles.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© The British Standards Institution 2013. Published by BSI Standards Limited 2013

ISBN 978 0 580 82400 5

ICS 43.040.15; 43.160

Compliance with a British Standard cannot confer immunity from legal obligations.

This Published Document was published under the authority of the Standards Policy and Strategy Committee on 30 November 2013.

Amendments issued since publication

Date	Text affected
------	---------------

TECHNICAL REPORT
RAPPORT TECHNIQUE
TECHNISCHER BERICHT

CEN/TR 16596

November 2013

ICS 43.040.15; 43.160

English Version

**Electric-electronic interface between chassis-cab and bodywork
of refuse collection vehicles (RCVs)**

Interface électrique-électronique entre le châssis-cabine et
la superstructure des bennes de collecte des déchets

CAN-Schnittstelle zwischen Fahrgestellen und Aufbau von
Abfallsammelfahrzeugen

This Technical Report was approved by CEN on 24 September 2013. It has been drawn up by the Technical Committee CEN/TC 183.

CEN members are the national standards bodies of Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, Former Yugoslav Republic of Macedonia, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey and United Kingdom.



EUROPEAN COMMITTEE FOR STANDARDIZATION
COMITÉ EUROPÉEN DE NORMALISATION
EUROPÄISCHES KOMITEE FÜR NORMUNG

CEN-CENELEC Management Centre: Avenue Marnix 17, B-1000 Brussels

Contents

Page

Foreword.....	3
Introduction	4
1 Scope	5
2 Normative references	5
3 Terms and definitions	5
4 Electric interface	5
4.1 Objective	5
4.2 Description	6
4.3 Plugs	6
4.4 Pin-out and defined signals	6
4.5 Video cable	6
4.6 Plugs location	7
5 CAN Interface	7
5.1 Objective	7
5.2 SAE J1939/71 messaging for RCV	7
5.3 Management of the information between bodywork and chassis-cab	7
Annex A (normative) Architecture of the electric-electronic interface	23
Annex B (normative) Plugs	24
Annex C (normative) Pin-out and defined signals	25
Annex D (normative) Characteristics of the engine revolution signal	29
Annex E (normative) Characteristics of the driving speed signal	30
Annex F (normative) Configuration of the information: chassis ready	31
Annex G (normative) Control of the beacon	32
Annex H (normative) CAN messages transmitted by bodywork	33
Annex I (normative) CAN messages received by bodywork	43
Bibliography	73

Foreword

This document (CEN/TR 16596:2013) has been prepared by Technical Committee CEN/TC 183 "Waste management", the secretariat of which is held by DIN.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. CEN [and/or CENELEC] shall not be held responsible for identifying any or all such patent rights.

Introduction

On September 29, 2009, CEN/TC 183/WG 2 mandated its PWG 5 to work on a proposal for the CAN communication between the chassis-cab and the bodywork of RCVs. Based on an earlier proposal (PWG 5 from 2002 to 2005), the experts of PWG 5 discussed the possibilities and concluded in the results shown in this document.

To comply with the requirements of the relevant safety Directives and Standards, it is unavoidable to use electronic controls on the RCV chassis-cab and on the bodywork of RCVs because the control devices have to communicate to get the RCV working in proper and safe conditions.

This document contains a proposal for an interface between the chassis-cab and the bodywork in terms of electrical wiring including plugs and positions for the plugs as well as an adequate CAN protocol.

1 Scope

This Technical Report proposes a standardized interface between the chassis-cab and the bodywork of refuse collection vehicles. The solution, initially for vehicles with hard wired interface and CAN interface, is developed into full CAN communication between the bodywork and the chassis-cab.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

EN 1501-1:2011, *Refuse collection vehicles — General requirements and safety requirements — Part 1: Rear loaded refuse collection vehicles*

EN 1501-5:2011, *Refuse collection vehicles — General requirements and safety requirements — Part 5: Lifting devices for refuse collection vehicles*

SAE J1939/71:2010-02, *Vehicle application layer*

3 Terms and definitions

For the purposes of this document, the terms and definitions given in EN 1501-1:2011 and the following apply.

3.1

electric interface

provisions for power supply and control signals to ensure safe connections between the chassis-cab and the bodywork

3.2

electronic interface

provisions for communication between the chassis-cab and the bodywork by means of CanBus

3.3

Electronic Control Unit

ECU

embedded system that controls one or more electrical systems or subsystems in a RCV

4 Electric interface

4.1 Objective

This clause describes the electric interface between all chassis and the bodywork of refuse collection vehicles. Plugs, pin-outs and signals are defined.

The chassis-cab shall be provided with an electric-electronic interface ready to be connected inside the cab and outside the cab. From inside to outside of the cab, there is a defined wiring loom to connect the chassis information and which is also used for information reserved for the bodywork. By this means, the bodywork manufacturer does not need to rework the wiring and can therefore avoid wrong handling and damages on the chassis-cab side.

Annex A shows the architecture of the electric-electronic interface and examples of possible ways the bodybuilder can use it.

4.2 Description

As shown in Annex A, the electrical interface is composed of six plugs each shared into three lines. The plugs shall be marked according to the following format BB_xy, where:

- x represents the line number, $1 \leq x \leq 2$;
- y represents the location of the plugs, $1 \leq y \leq 3$ (1: From the chassis, 2: Inside the cab, 3: Out of the cab).

EXAMPLE The plug BB23 represents the plug out of the cab on line 2.

4.3 Plugs

See Annex B.

The following plugs shall be used:

- BB11 MCP 2.8 Unsealed tab housing 21 ways, Coding C, Blue P/N 3-967630-1 Tyco Corp.
- BB21 MCP 2.8 Unsealed tab housing 18 ways, Coding A, Grey P/N 1-967629-1 Tyco Corp.
- BB12 MCP 2.8 Unsealed receptacle housing 21 ways, Coding C, Blue P/N 6-968975-1 Tyco Corp.
- BB22 MCP 2.8 Unsealed receptacle housing 18 ways, Coding A, Brown P/N 8-968974-1 Tyco Corp.
- BB13 MCP 2.8 Sealed tab housing with flange 21 ways, Coding A, Black P/N 1-2112162-1 Tyco Corp.
- BB23 MCP 1.5 Sealed tab housing 18 ways, Black P/N 1-1564412-1 Tyco Corp.

4.4 Pin-out and defined signals

See Annex C, D, E, F and G.

In case of full CAN-bus operation, line 1 is carrying all signals and energy pins and line 2 is not used.

In case of hard-wired interface operation, line 1 and line 2 are used with the defined pins.

4.5 Video cable

On RCVs, a camera with video-monitor inside the cab is mandatory and a video-cable shall be laid from outside to inside the cab. This cable is depending on the bodywork manufacturer video-system and cannot be standardized.

To prevent dismantling the cab only for this cable, a ductwork including a wire puller to fit the camera-cable shall be provided parallel to the wiring harness as shown in Annex A.

Outside the cab, the end of the ductwork shall be placed accessible close to the plugs BB11 and BB12. Inside the cab, the end of the ductwork shall be placed accessible near the middle of the dashboard.

The inner diameter of the ductwork shall be so that it is possible to lay the camera cable with M12 connector with a minimum of 20 mm.

The ductwork shall be fixed in the chassis-cab so that its radius allows the camera-cable to be easily pulled with the wire puller.

4.6 Plugs location

The plugs BBx1 and BBx2 inside the cab shall be located all together in the electrics compartment/base module and easily accessible.

The plugs BB13 and BB23 outside the cab shall be fixed all together on a plate behind the cab on the left hand side of the frame.

The chassis-cab shall be delivered with the external plugs protected to avoid oxidation of the contacts until they are used.

5 CAN Interface

5.1 Objective

To be compatible whatever the chassis-cab manufacturer, the electrical interface described in Clause 4 shall use the CAN communication with the most common used protocol on industrial vehicles: SAE J1939/71 revised February 2010.

5.2 SAE J1939/71 messaging for RCV

5.2.1 Description

See Annexes H and I.

All the requested information are those described in the SAE J1939/71 (revised February 2010) protocol. Therefore, for the information specific to the RCV some new messages have been created and the corresponding proprietary CAN identifiers have been defined.

Priority classification (PC) of the messages:

- PC1: Mandatory by EN 1501-1;
- PC2: Minimum necessary for correct operation of the bodywork;
- PC3: For complete integration between bodywork and chassis-cab.

5.2.2 Source address

Messages from bodywork to chassis-cab shall be sent with source address XX_h (XX_d).

5.3 Management of the information between bodywork and chassis-cab

5.3.1 Vehicle stopped

Priority classification: PC2.

Most of the hydraulic movements of the bodywork shall be possible only if the RCV is stopped. The RCV stopped condition is internally managed by the RCV's ECU depending on the primary CAN information, see Figure 1:

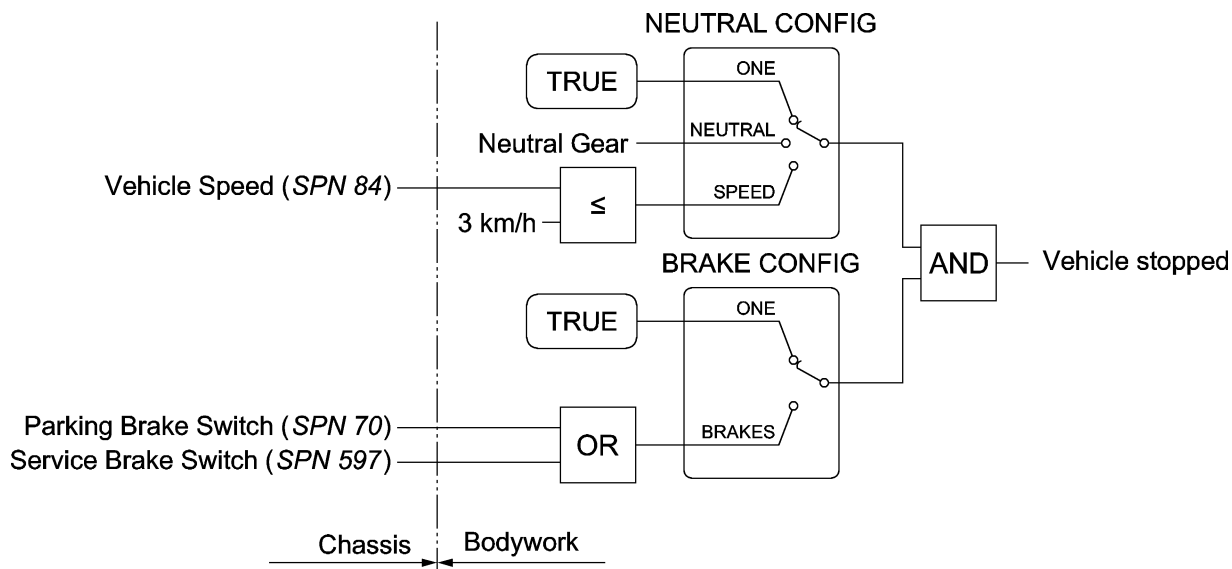


Figure 1 — Primary CAN information

The neutral gear information depends on the gearbox type. For a mechanical gearbox, it depends on the gear neutral switch and the position of the clutch pedal. For an automatic gearbox, the neutral gear information is considered active if it is selected and engaged; see Figure 2:

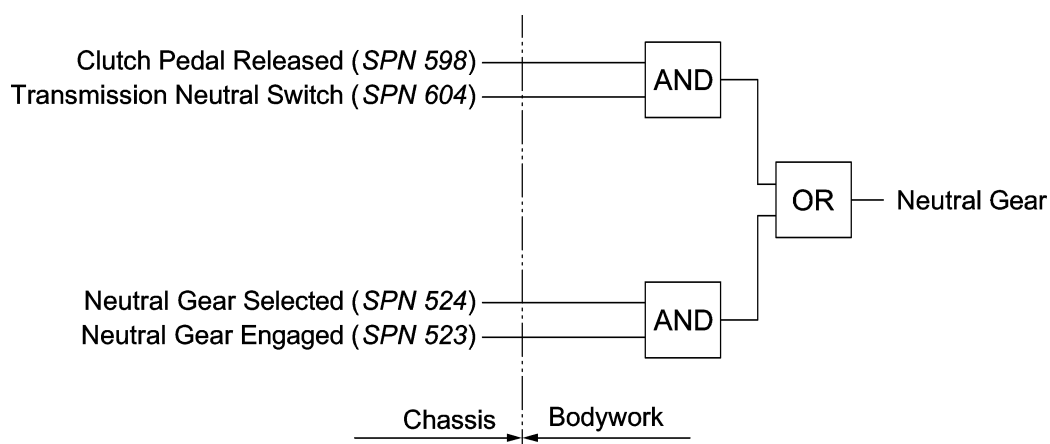


Figure 2 — Neutral gear information

Neutral gear information depends on gearbox type. Messages corresponding to manual gearbox are only available if this type of gearbox is used. Messages corresponding to automated/automatic gearbox are only available on automated/automatic gearbox types. There is no time-out triggering dependant on gearbox type in the RCV.

5.3.2 Vehicle reversing

Priority classification: PC1.

This information is necessary to comply with EN 1501-1 requirements for activation of the:

- external auditory warning (buzzer);
- brakes of the RCV if someone is standing on the footboard when the reverse gear is engaged.

See Figure 3.

 


Figure 3 — Vehicle reversing

The reverse gear information depends on the gearbox type. For mechanical gearbox, it is directly sent depending on a switch state. For automatic gearbox, the reverse gear information is considered active when the reverse gear is selected and engaged; see Figure 4:

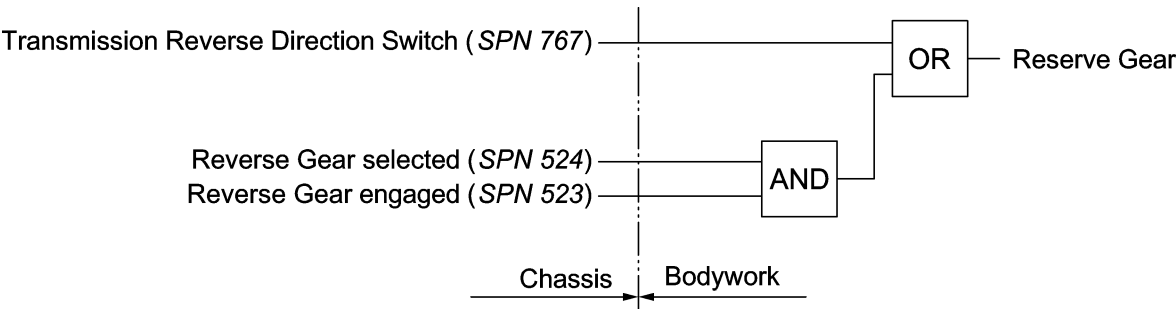


Figure 4 — Reverse gear information

Neutral gear information depends on gearbox type. Messages corresponding to manual gearbox are only available if this type of gearbox is used. Messages corresponding to automated/automatic gearbox are only available on automated/automatic gearbox types. There is no time-out triggering dependant on gearbox type in the RCV.

5.3.3 Vehicle speed

Priority classification: PC1.

This information is necessary to comply with EN 1501-1 requirements. If someone is standing on the footboard and the vehicle speed is greater than 40 km/h, a sound alarm shall be activated to the intention of the driver; see Figure 5.

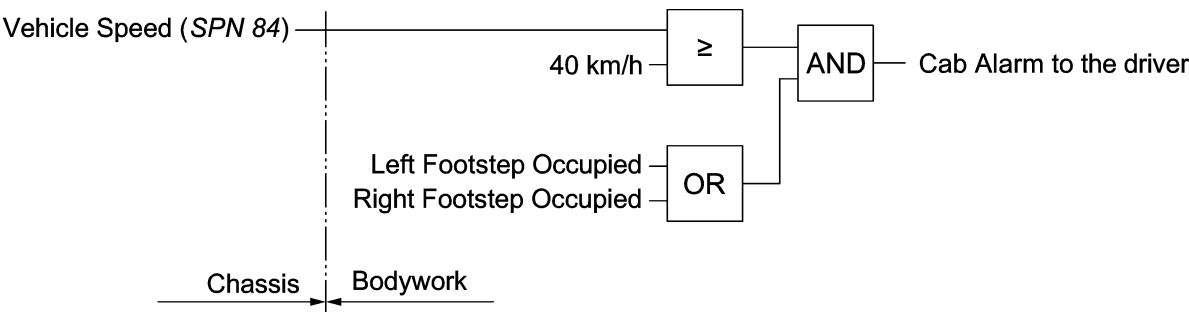


Figure 5 — Vehicle speed

5.3.4 Vehicle distance

Priority classification: PC2.

RCVs generally include a greasing system for the compaction system and lifting devices but also for the chassis-cab itself. In such a case, it is useful to manage the greasing of the chassis-cab depending on the travelled distance; see Figure 6.

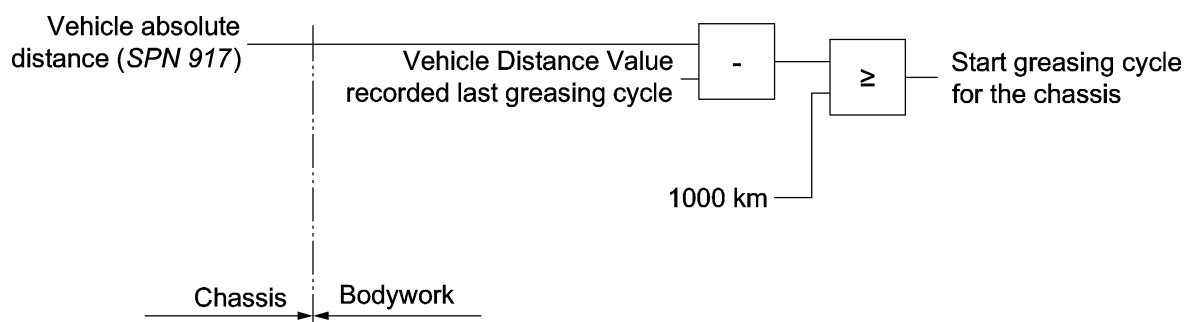


Figure 6 — Vehicle distance

5.3.5 Axles load distribution

Priority classification: PC2.

For RCVs with an important rear overhang, the rear axles can be overloaded at the beginning of the waste collection. To manage this problem, the weight of the axles shall be monitored and if one of them is closed to the upper limit, the ejection panel is moved forward so as to transfer the waste to the front of the body, see Figure 7. When the maximum permissible load is reached, the hydraulics of the RCV can be automatically stopped.

The chassis manufacturer shall specify the accuracy of the system.

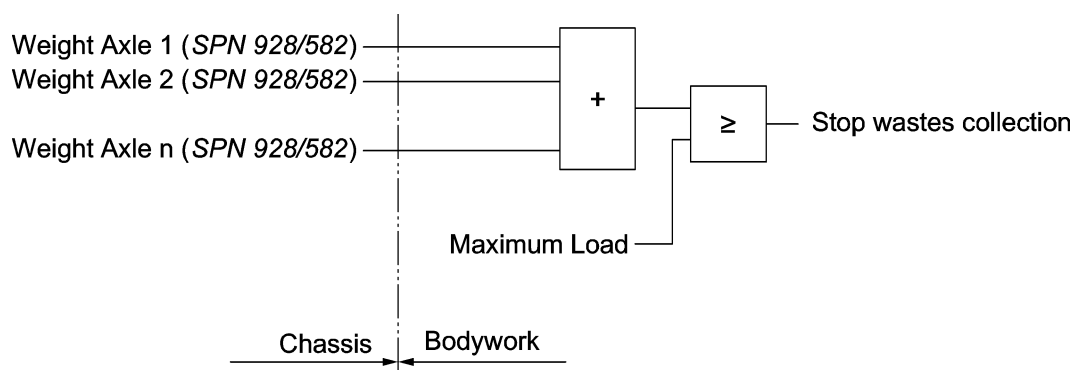


Figure 7 — Axles load distribution

5.3.6 Road speed limitation to 25 km/h / 30 km/h

Priority classification: PC1.

According to EN 1501-1:2011, 5.10.3.3:

“If the footboard(s) is (are) occupied, the forward driving speed shall be limited to 30 km/h / 25 km/h”.

“In order to avoid dangerous situations when driving over 40 km/h, the speed shall not be limited if no detection has occurred during the vehicle acceleration from 6 km/h to 30 km/h.” (managed by the RCV’s ECU).

An additional control [...] shall be provided so that in case of a faulty function of the device(s) or by road traffic emergency, the speed limitation and reversing safety device(s) can be overridden.” (managed by the RCV’s ECU). See Figure 8.

NOTE The speed limitation depends on the orientation of the mounted footboards (see EN 1501–1).

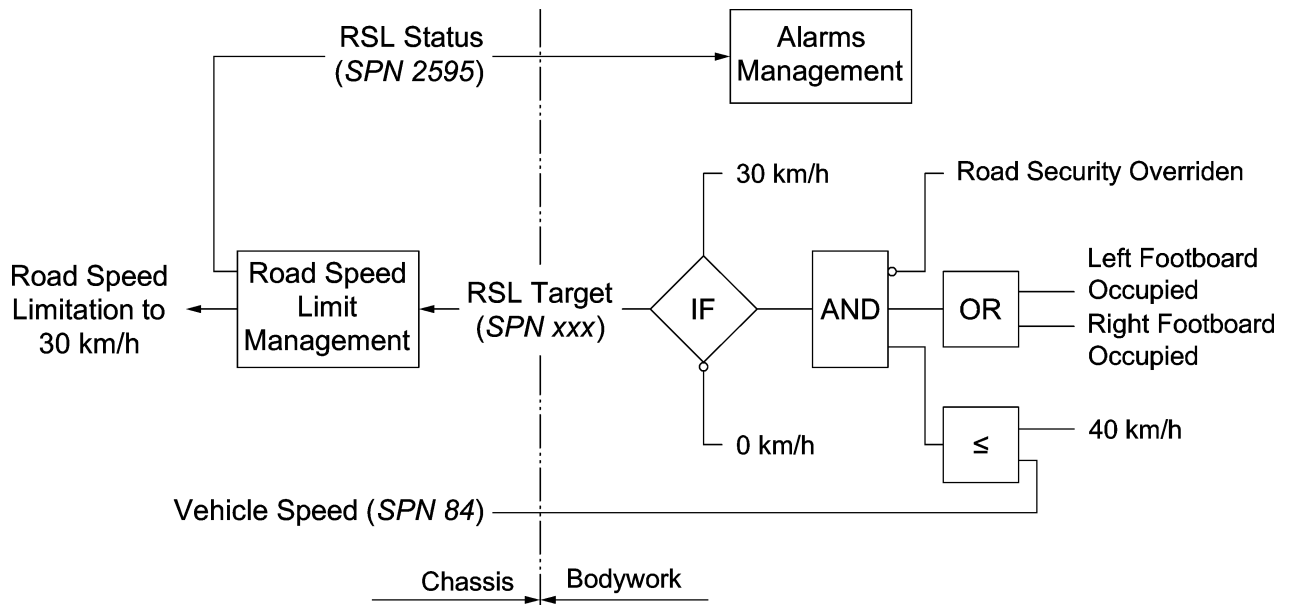


Figure 8 — Road speed limitation to 30 km/h

5.3.7 Road speed limitation to 6 km/h

Priority classification: PC1.

According to EN 1501-5:2011, 5.4:

“If the waste container lifting device is in a position where some parts of it protrude beyond the dimensions of the RCV, the RCV shall not be able to be driven faster than 6 km/h (positioning movement).”

See Figure 9.

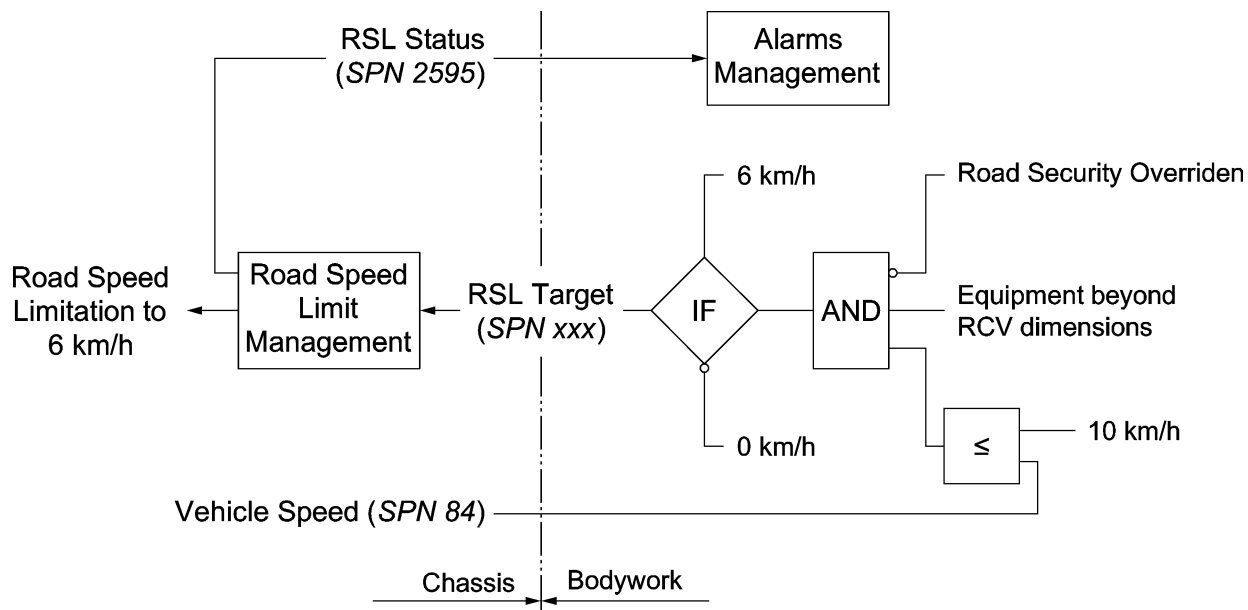


Figure 9 — Road speed limitation to 6 km/h

5.3.8 Brakes system activation

Priority classification: PC1.

According to EN 1501-1:2011, 5.10.3.3:

“If the footboard(s), is (are) occupied... reversing of the rear loaded RCV shall not be possible.”

“The prevention of reversing has to be achieved by activation of the brake system [...]. The fully loaded RCV shall remain stationary on a 10 % slope [...] When, after a prevention of the reversing of the ... RCV, the safety device is no longer detecting a person on a footboard, any further reversing shall be possible only by an intentional re-actuation of the gearbox by the driver, whatever the type of gearbox: manual, automatic, semi-automatic.” (managed by the RCV's ECU).

An additional control shall be provided so that in case of a faulty function of the device(s) or by road traffic emergency, the speed limitation and reversing safety device(s) can be overridden.” (managed by the RCV's ECU).

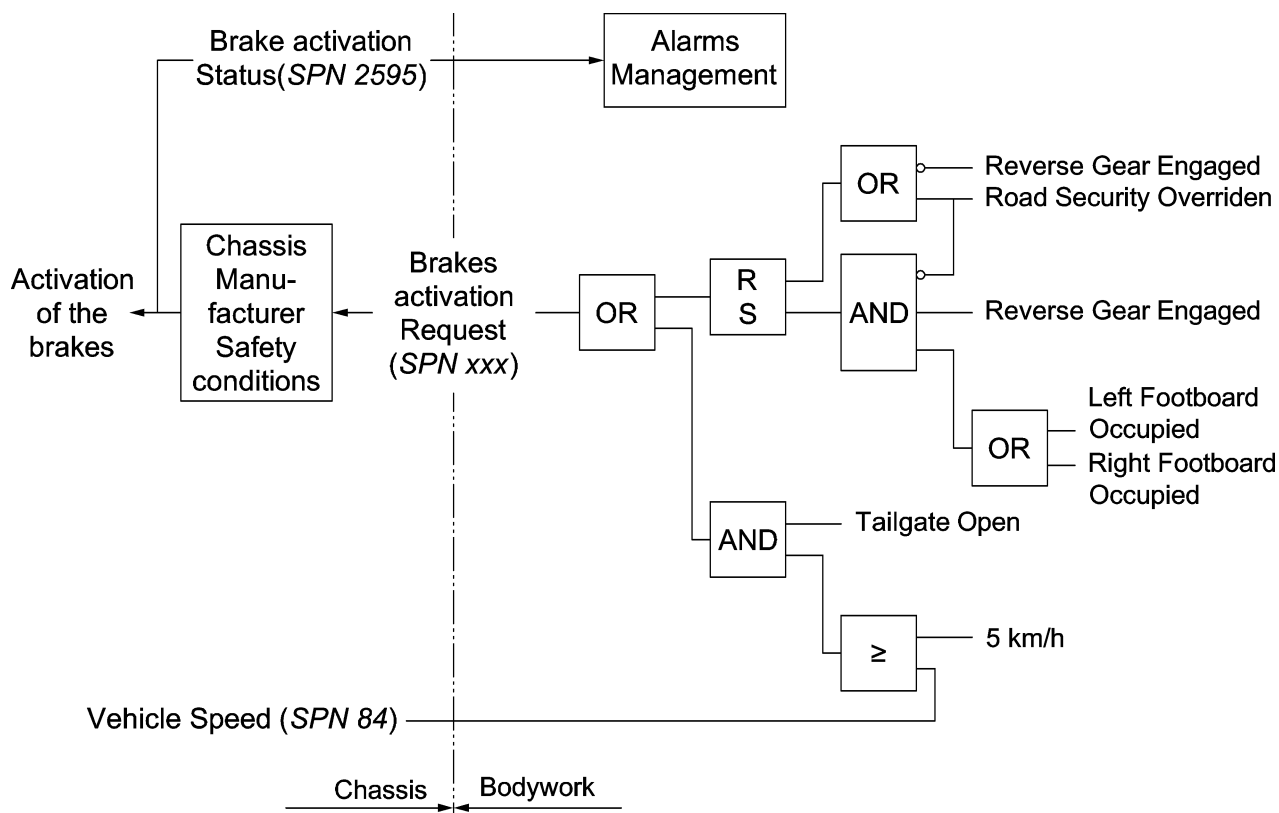


Figure 10 — Brakes system activation

Optionally, the brakes of the chassis-cab can be activated when the tailgate is open to discharge the waste. For example: many drivers leave the location where they just discharged the waste with the tailgate open and crash the tailgate against the top of the entrance gate.

For safety reasons, the brakes activation shall not be possible if the vehicle speed is greater than 6 km/h

The brakes activation status give the information that the chassis-cab has taken in account the brake activation request sent by the bodywork.

See Figure 10.

5.3.9 Power take off (PTO) (All)

Priority classification: PC2.

Usually, RCVs use chassis-cab provided with engine mounted PTO without clutch. If a PTO clutch exists, the preferred management shall be as stated in Figure 11:

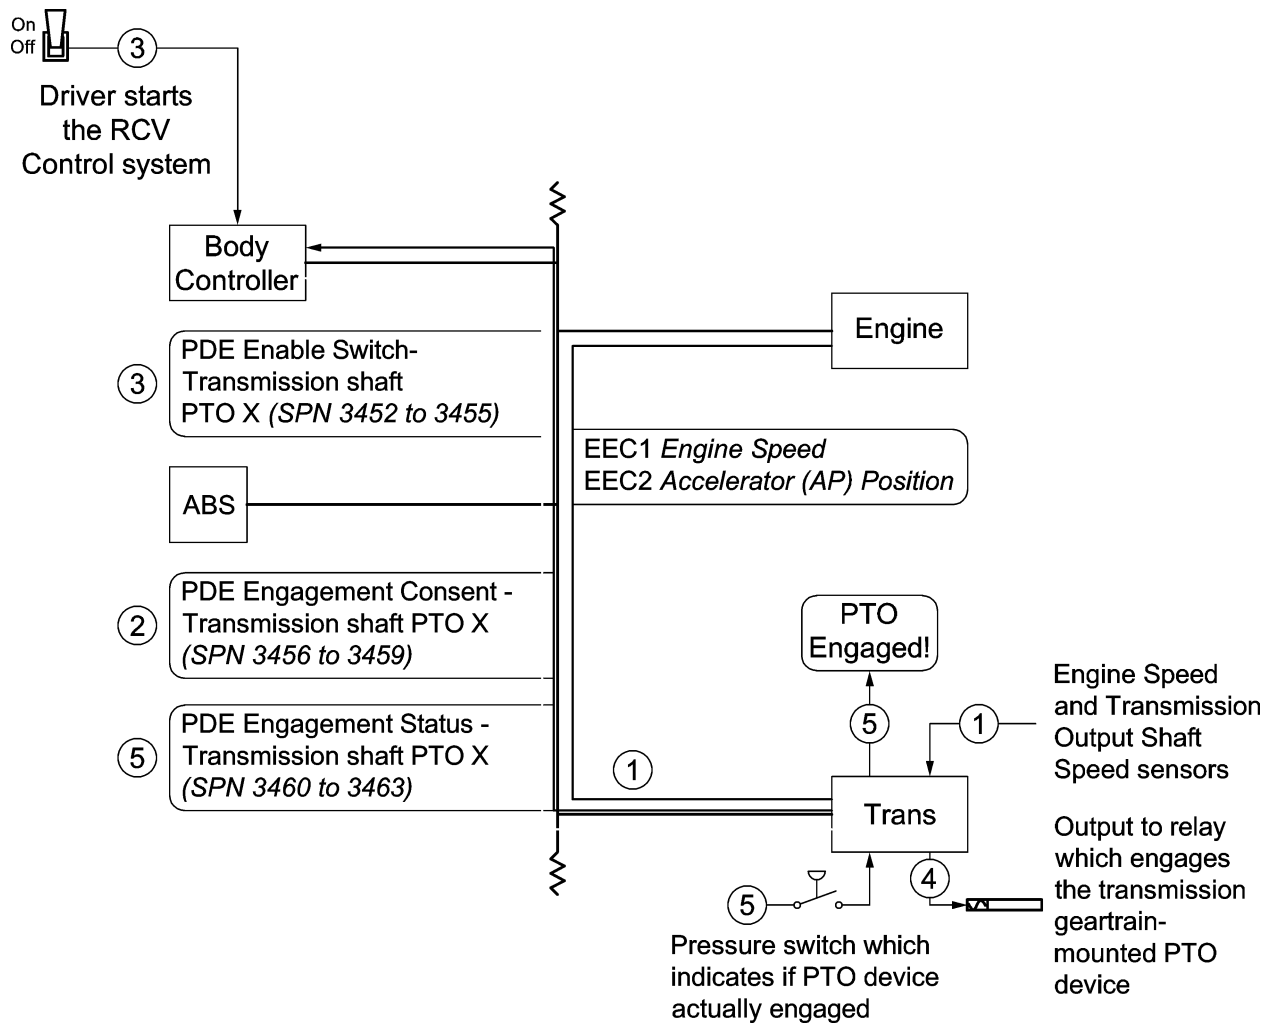


Figure 11 — Power take off (PTO) (All)

- 1) The PTO controller continually monitors the conditions it requires before its PTO drive can be engaged. This may include internal sensors as well as data collected from the network, such as throttle position.
- 2) Regardless of whether the driver has requested PTO engagement, the 'engagement consent' status is continually broadcast by the transmission.
- 3) When the driver starts the RCV's ECU to collect waste, this controller reflects this status in its message broadcast; the transmission controller receives this input.
- 4) If conditions are acceptable, the transmission controller power the circuit to engage the PTO mounted on the transmission.
- 5) The PTO controller monitors the progress of the physical PTO engagement, and reflects this in its broadcast so that the RCV's ECU may use the information.

5.3.10 Speed up

5.3.10.1 Fixed speed up

Priority classification: PC2.

When a hydraulic movement is requested by the RCV, the engine speed shall be increased to get sufficient oil flow. The target rpm value depends on the hydraulic pump and the gear ratio between engine and PTO. Usual targets are between 850 rpm and 1 150 rpm.

The speed up is requested only if the RCV is stopped (see conditions in 5.3.1). As soon as the *Vehicle Stopped* conditions are not fulfilled (or no hydraulic movement is requested), the RCV's ECU no more requests the engine speed governor.

IMPORTANT — To get a fast response of the engine so that the requested oil flow is immediately available, the minimum possible engine speed acceleration shall be 300 rpm/s.

The speed control during hydraulic movement shall have higher priority than the accelerator pedal and the cruise control functions.

See Figure 12.

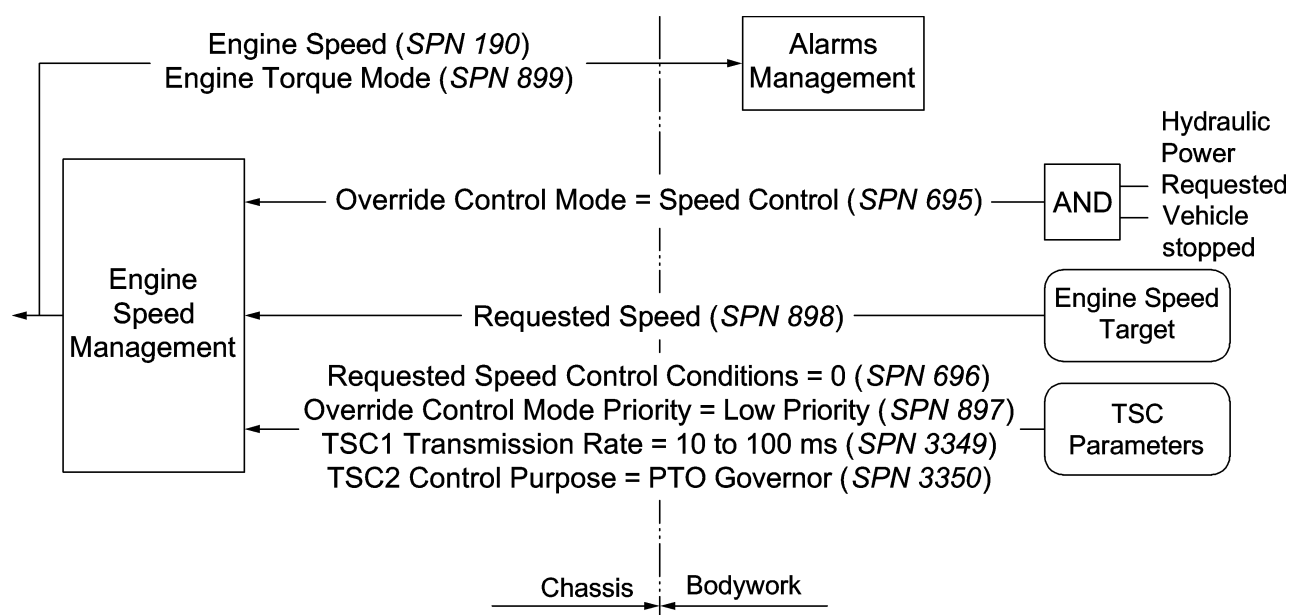


Figure 12 — Fixed speed up

5.3.10.2 Variable speed up

Priority classification: PC2.

With fixed engine speed target, the delivered oil flow is always at its maximum. Sometimes, the requested movement in progress does not need this maximum and the exceeding flow is lost as calories through a relief valve.

To optimise the fuel consumption and also the engine noise, the engine speed target is now computed depending on the exact oil flow the movement in progress needs.

In this mode, the conditions to manage the speed up are still the same as those described for fixed speed up; see Figure 13.

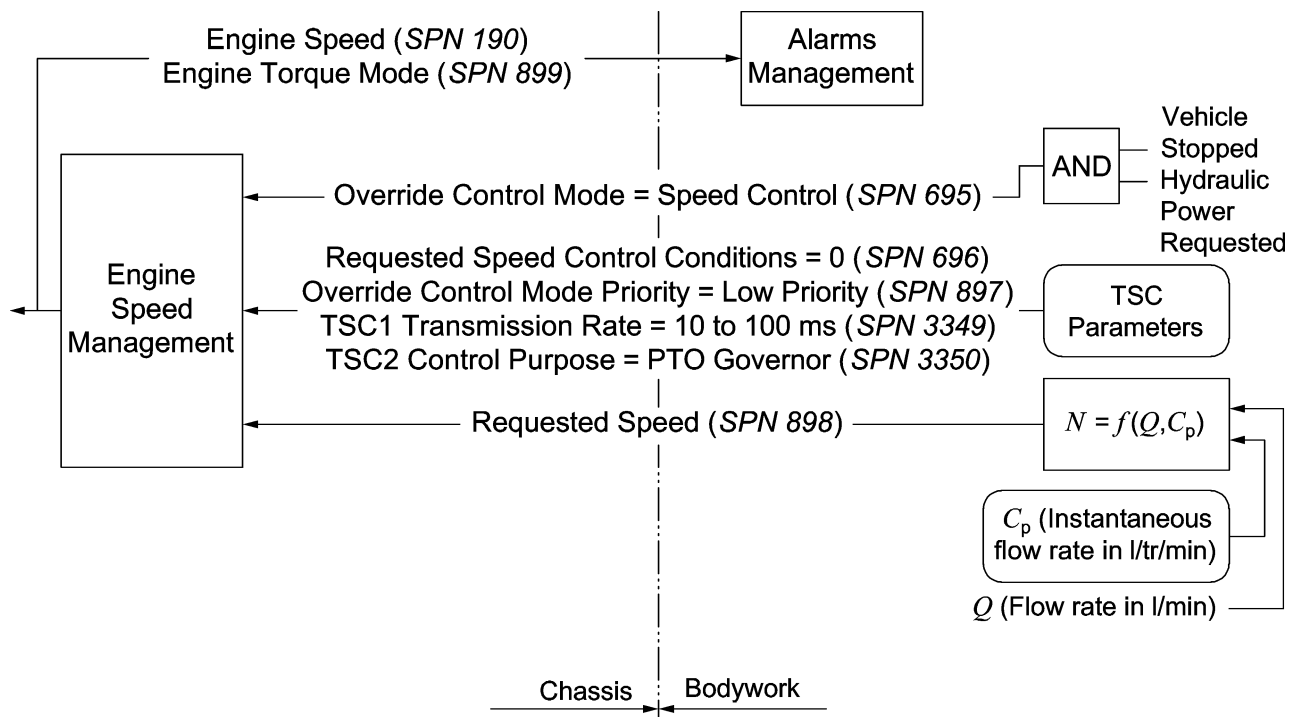


Figure 13 — Variable speed up

5.3.10.3 Limited engine speed

Priority classification: PC2.

When the hydraulic pump cannot run faster than a limited value, the engine speed is controlled so that a maximum speed cannot be exceeded during travelling. If the accelerator pedal is kicked down during travelling, this mode is cancelled; see Figure 14.

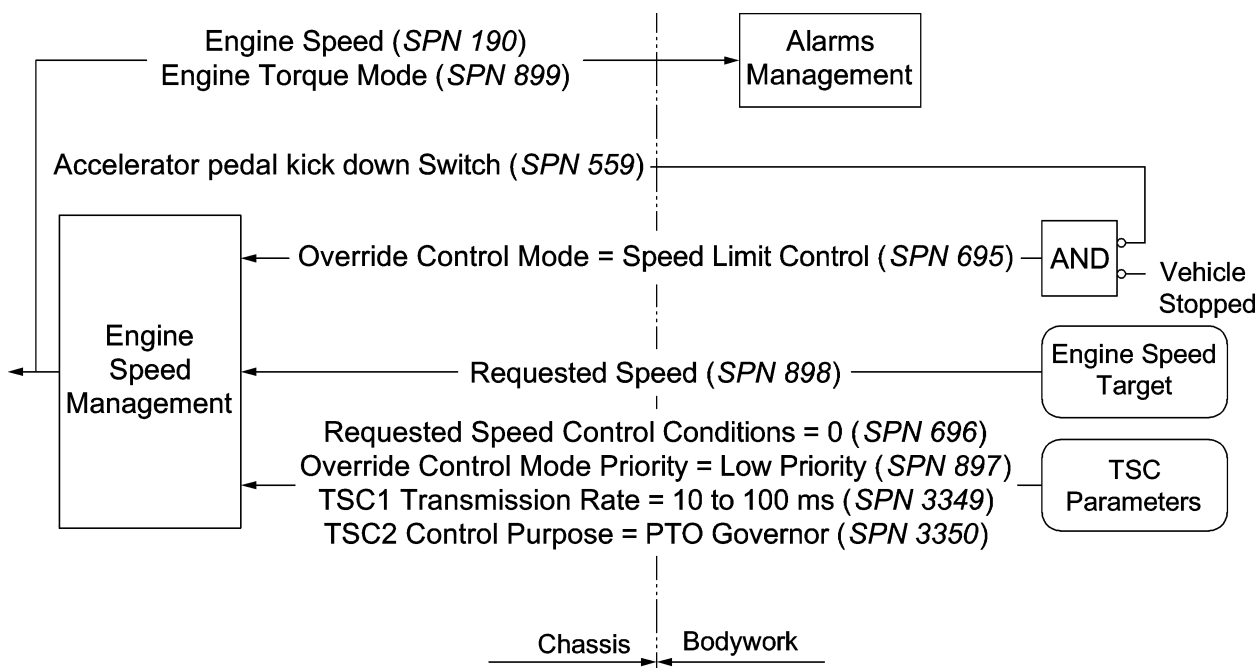


Figure 14 — Limited engine speed

5.3.11 Torque control

5.3.11.1 Torque curve

Priority classification: PC3.

The requested information for torque management is given in Figure 15:

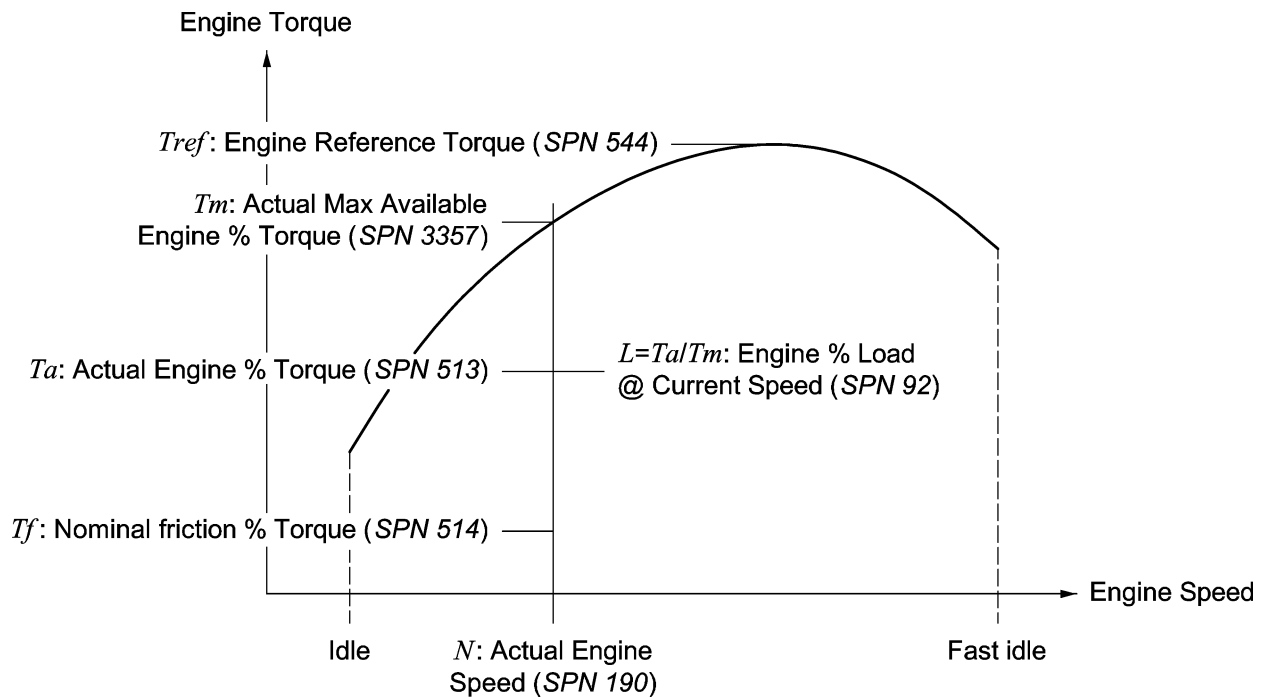


Figure 15 — Requested information for torque management

5.3.11.2 Torque managed by chassis

Priority classification: PC3.

The RCV's ECU can easily compute the *Actual Hydraulic Percent Torque* (T_H) depending on the measured pressure (p) in the circuit, the *Instantaneous Flow Rate* (C_p) of the hydraulic pump and the *Engine Reference Torque*. The value of the requested torque is sent to the engine when a movement is requested.

See Figure 16.

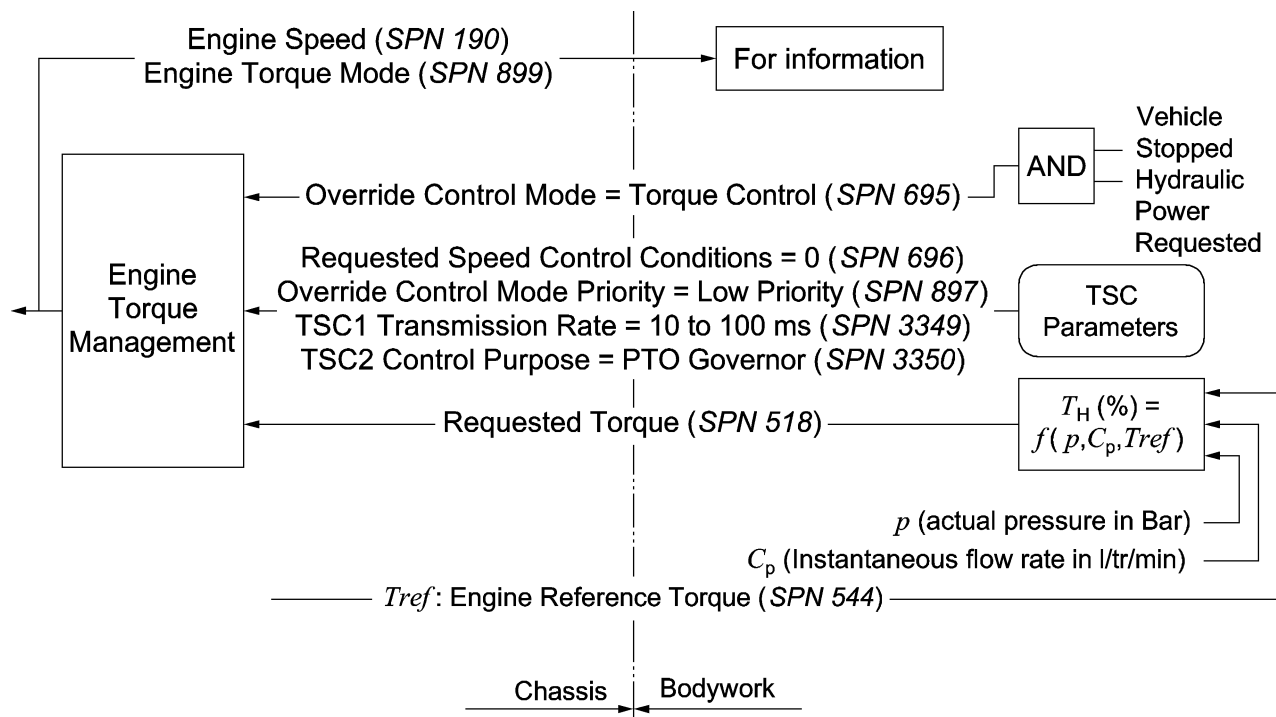


Figure 16 — Torque managed by chassis

5.3.11.3 Managed by RCV

Priority classification: PC3.

First, the engine speed is adjusted to get the sufficient flow rate as described in 5.3.11.2. In parallel the *Torque Difference* (ε_T) between the *Actual Maximum Available Engine Percent Torque* (T_m) and the *Actual Engine Percent Torque* (T_a) is monitored by the RCV's ECU. If the hydraulic load is increasing and the *Torque Difference* (ε_T) becomes close to zero:

- the Instantaneous Flow Rate (C_p) of the hydraulic pump is decreased so that Actual Maximum Available Engine Percent Torque (T_m) is never exceeded;
- the engine speed is readjusted so that the flow rate is kept.

See Figure 17.

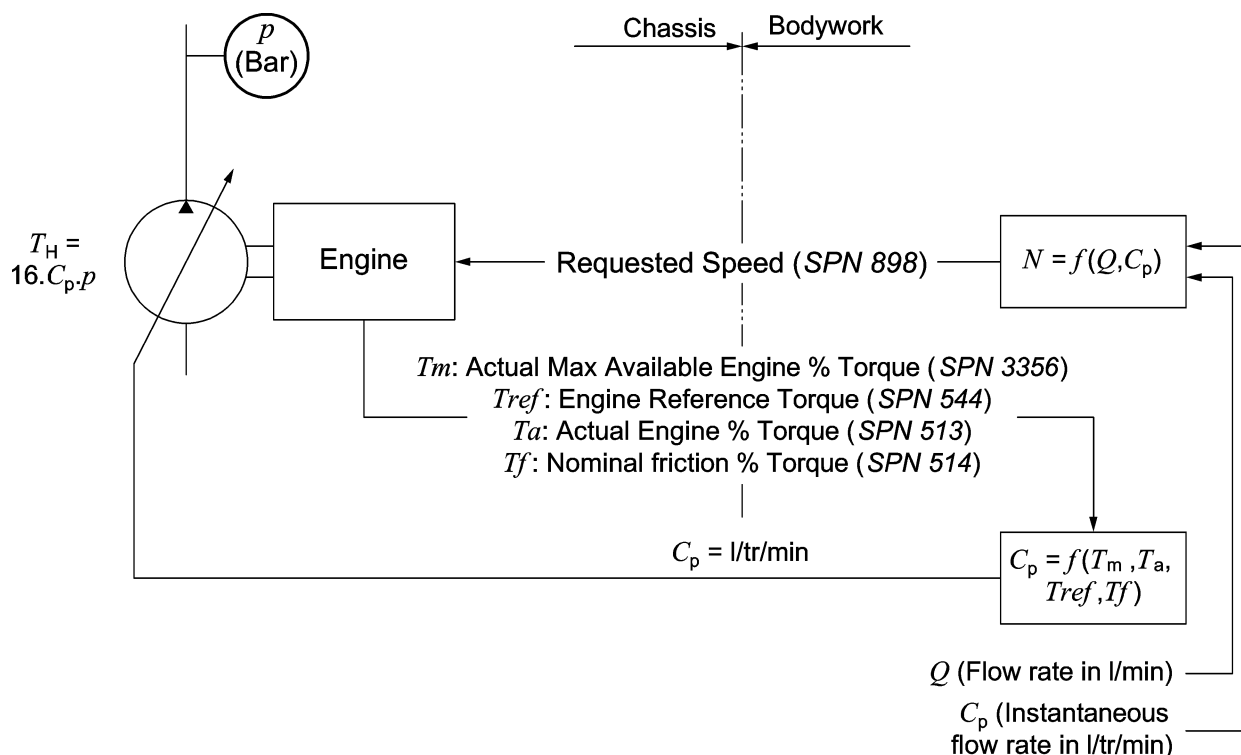


Figure 17 — Torque managed by RCV

5.3.12 Prohibition of air suspension control

Priority classification: PC2.

RCVs for collection of bulky waste may be equipped with two stabilisers at the rear. When these stabilisers are down, the pneumatic suspension may be deflated. When the stabilisers are lifted, the regulation of the pneumatic suspension is not fast enough to keep the vehicle at its nominal level and the rear of the RCV hits the ground. To manage this problem, the regulation of the air suspension is prohibited when the stabilisers are moving down and until they are up again in their travel position.

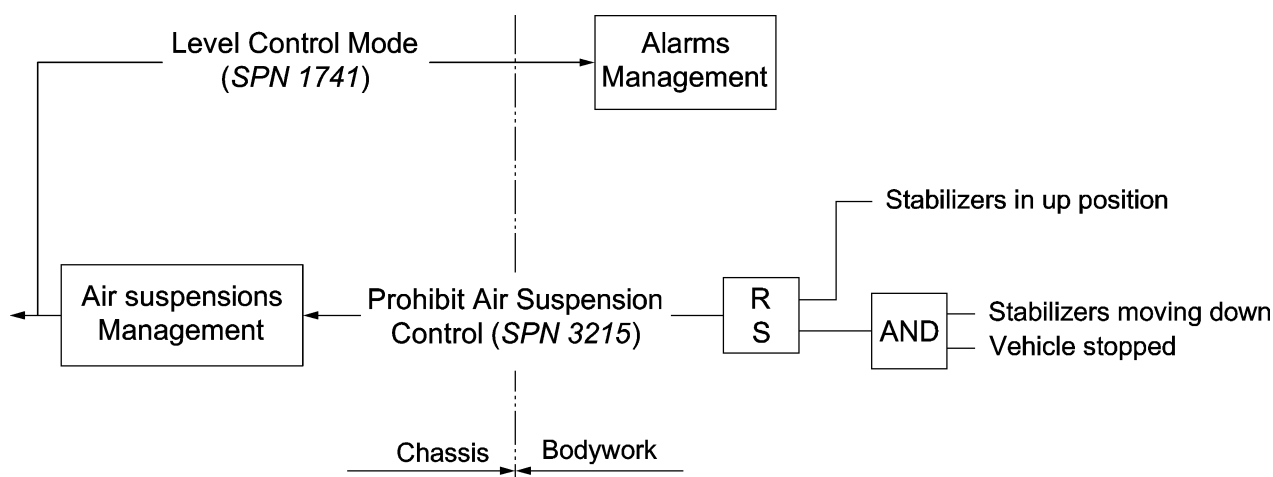


Figure 18 — Prohibition of air suspension control

5.3.13 Air suspension position control

Priority classification: PC2.

The air suspension is kneeled in certain situations below 10 km/h:

- kneeling request front axle (*SPN 1830*);
- kneeling request rear axle (*SPN 1829*);
- nominal level request front Axle (*SPN 1751*);
- nominal level request rear Axle (*SPN 1750*);
- kneeling information (*SPN 1742*);
- nominal level front axle (*SPN 1734*);
- nominal level rear axle (*SPN 1733*).

For RCV with rear lift axle it is necessary to know if the axle is up or down to manage the weight axle load by weighing system between the bodywork and the chassis-cab:

- lift axle 1 position (*SPN 1743*);
- lift axle 2 position (*SPN 1822*).

5.3.14 Fuel consumption

Priority classification: PC3.

This shall be available for users who want statistics and optimisation of the collection tours:

- total used fuel (*SPN 250*);
- fuel level (*SPN 96*);
- engine fuel rate (*SPN 183*);
- catalyst tank level (Add blue) (*SPN 1761*);
- trip PTO moving fuel used (*SPN 1002*);
- trip PTO non-moving fuel used (*SPN 1003*).

5.3.15 Remote start and stop of the engine

Priority classification: PC3.

Used during assembly of the bodywork on the chassis-cab or for stop and start function:

- remote start request;
- remote stop request;
- remote start consent;

- remote stop consent.

The remote start consent and remote stop consent are the information sent from the chassis-cab the bodywork to know if the remote start request and remote stop request are allowed.

The remote start request and remote stop request are sent from the bodywork to the chassis-cab.

5.3.16 Ambient temperature

Priority classification: PC3.

For the operatives standing on the footboards, RCVs are provided with heated handles in winter time. With this information, the heating of the handles can be controlled according to the air ambient temperature:

- ambient air temperature (*SPN 171*).

5.3.17 Lighting

Priority classification: PC3.

Because standard rear lights can be hidden by the operatives when they are standing on the footboards, RCVs use dual lights fitted at the top of the tailgate. Therefore it is useful that these lights are controlled and supervised by CAN.

Lighting command:

- right turn signal lights (*SPN 2369*);
- left turn signal lights (*SPN 2367*);
- right stop light (*SPN 2373*);
- left stop light (*SPN 2371*);
- tractor marker light (*SPN 2377*);
- rear fog lights (*SPN 2389*);
- rotating beacon light (*SPN 2385*).

Lighting status:

- right turn signal lights (*SPN 2370*);
- left turn signal lights (*SPN 2368*);
- right stop light (*SPN 2374*);
- left stop light (*SPN 2372*);
- tractor marker light (*SPN 2378*);
- rear fog lights (*SPN 2390*);
- rotating beacon light (*SPN 2385*).

5.3.18 Other uses

Priority classification: PC3:

- driver's request percent engine torque (*SPN 512*);
- accelerator pedal 1 position (*SPN 91*);
- brake pedal position (*SPN 521*);
- engine % load at current speed (*SPN 92*);
- seconds (*SPN 959*);
- minutes (*SPN 960*);
- hours (*SPN 961*);
- month (*SPN 963*);
- day (*SPN 962*);
- year (*SPN 964*);
- local minutes offset (*SPN 1601*);
- local hour offset (*SPN 1602*);
- driver's door open (*SPN 3413*, *SPN 3416*);
- battery potential (*SPN 158*, *SPN 168*).