

SEMI E88-0302

SPECIFICATION FOR AMHS STORAGE SEM (STOCKER SEM)

This specification was technically approved by the Global Information & Control Committee and is the direct responsibility of the North American Information & Control Committee. Current edition approved by the North American Regional Standards Committee on October 14 and November 27, 2001. Initially available at www.semi.org December 2001; to be published March 2002. Originally published September 1999; previously published November 2001.

1 Purpose

1.1 This standard establishes a Specific Equipment Model (SEM) for AMHS storage equipment (Stocker SEM). The model consists of equipment characteristics and behaviors that are to be implemented in addition to the SEMI E30 fundamental requirements and selected additional capabilities. The intent of this standard is to facilitate the integration of Stocker SEM equipment into an automated (e.g., semiconductor fabrication and flat panel display) factory. This document accomplishes this by defining an operational model for Stocker SEM equipment as viewed by a factory automation controller (Host). This definition provides a standard host interface and equipment operational behavior (e.g., control, state models, and data reports). Several topics require additional activity that are within the scope of this standard: queuing, parallel interface for carrier transfer (SEMI E23), stocker controller architecture, and scheduling and transport of the transfer unit.

2 Scope

2.1 The scope of this standard is limited to the usage and description of AMHS storage equipment (Stocker) as perceived by a SEMI Equipment Communications Standard 2 (SECS-II) host that complies with the GEM model (as specified in Section 13). It defines the view of the equipment through the SECS communication link. It does not define the internal operation of the equipment. It includes a specific transfer command state model and stocker controller state model as the basis for all equipment of this class.

2.2 This document assumes that the GEM fundamental requirements and selected additional capabilities (as specified in Section 13) have been implemented on the Stocker SEM equipment. It expands the GEM standard requirements and capabilities in the areas of state models (stocker controller, transfer command, carrier and stocker crane state models), collection events, alarm documentation, remote commands, data item variables, and material movement.

2.3 This standard does not purport to address safety issues, if any, associated with its use. It is the responsibility of the users of this standard to establish

appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.

3 Limitations

3.1 SEMI Standards Alignment

3.1.1 The GEM (SEMI E30) model was used as the basis for Stocker SEM requirements definition in alignment with existing AMHS SEM Specifications.

3.2 AMHS Storage Equipment Description

3.2.1 This standard is targeted at the different types/configurations of 300 mm AMHS storage equipment. The term Stocker SEM equipment refers to all the types of AMHS storage equipment. The equipment types may have fundamental mechanical differences.

3.2.2 Stocker (configuration)

3.2.2.1 AMHS automated storage and retrieval device used to provide temporary storage of carriers. At a minimum, a stocker must provide manual (PGV) carrier load/unload access. Additionally, any number of physical interfaces may exist to connect the stocker with Interbay and/or Intrabay Transport Systems.

4 Referenced Standards

4.1 SEMI Standards

SEMI E4 — SEMI Equipment Communications Standard 1 Message Transfer (SECS-I)

SEMI E5 — SEMI Equipment Communications Standard 2 Message Content (SECS-II)

SEMI E23 — Specification for Cassette Transfer Parallel I/O Interface

SEMI E30 — Generic Model for Communications and Control of SEMI Equipment (GEM)

SEMI E37 — High-Speed SECS Message Services (HSMS) Generic Services

SEMI E37.1 — High-Speed SECS Message Services Single-Session Mode (HSMS-SS)

SEMI E84 — Specification for Enhanced Carrier Handoff Parallel I/O Interface

4.2 Other References

Harel, D., "Statecharts: A Visual Formalism for Complex Systems," Science of Computer Programming 8 (1987) 231-274.¹

NOTE 1: As listed or revised, all documents cited shall be the latest publications of adopted standards.

5 Terminology

5.1 Abbreviations and Acronyms

5.1.1 *AMHS* — Automated Material Handling System

5.1.2 *BP* — Buffer Port

5.1.3 *FOUP* — Front Opening Unified Pod

5.1.4 *GEM* — Generic Equipment Model

5.1.5 *IBSEM* — InterBay/IntraBay Specific Equipment Model

5.1.6 *ITS* — Interbay or Intrabay Transport System

5.1.7 *LP* — Loading Port

5.1.8 *OP* — Output Port

5.1.9 *PGV* — Person Guided Vehicle

5.1.10 *SC* — Stocker Controller

5.1.11 *TCP/IP* — Transmission Control Protocol/Internet Protocol

5.1.12 *TSC* — Transport System Controller

5.2 Definitions

5.2.1 *Automated Material Handling System* — an automated system to store and transport materials within the factory.

5.2.2 *automation* — the capability of managing material and data within the factory.

5.2.3 *bidirectional load port* — a load port used for loading and unloading carriers.

5.2.4 *buffer* — a set of one or more locations for holding carriers at the production equipment.

5.2.5 *buffer port* — special buffer port location on a stocker output shuttle. Contains carrier presence sensors so that the host can be notified when a carrier is situated at this position.

5.2.6 *carrier* — a container with one or more fixed positions for holding substrates. Examples of carriers include FOUPs and open cassettes.

5.2.7 *carrier ID* — a readable and unique identifier for the carrier.

5.2.8 *FOUP* — a closed carrier for holding wafers.

5.2.9 *host* — the factory computer system, or an intermediate system, that represents the factory and the user to the equipment. Refers system that controls or supervises the Stocker Controller (SC) throughout this document.

5.2.10 *independent port* — a load port on the stocker that is dedicated to input or output. It is considered that the carriers can only be transferred in one direction.

5.2.11 *interbay transport system* — a transport system used to move work-in-process between stockers in different parts of the factory.

5.2.12 *Intrabay Transport System* — a transport system dedicated to one or more bays in the factory and responsible for transferring carriers to and from production equipment. ITS consists of the physical units of the system (e.g., vehicles, nodes, docking stations), the low-level unit controllers, and a system-level controller. ITS excludes factory floor storage systems (stockers), but includes any short-term storage integral to the system, such as storage locations within an overhead track system that are accessible only to units of the particular ITS.

5.2.13 *load port* — the interface location on the equipment where carriers are transferred.

5.2.14 *loading port* — user or vehicle accessible port location on a stocker output shuttle. Contains carrier presence sensors so that the host can be notified when a carrier is situated at this position.

5.2.15 *output port* — stocker crane accessible port location on a stocker output shuttle. Contains carrier presence sensors so that the host can be notified when a carrier is situated at this position.

5.2.16 *process equipment* — equipment used to make semiconductor devices. This excludes metrology and material handling equipment.

5.2.17 *production equipment* — equipment used to produce semiconductor devices, including wafer sorting, process, and metrology equipment and excluding material handling equipment.

5.2.18 *Stocker Controller* — stocker Equipment Controller that communicates with the host and represents the system as the equipment.

5.2.19 *stocker crane* — stocker transfer agent specialized for the movement of carriers between shelves and input and output port locations.

¹ Elsevier Science, P.O. Box 945, New York, NY 10159-0945, <http://www.elsevier.nl/homepage/browse.htm>

5.2.20 *stocker equipment* — an individual stocker viewed as a single piece of equipment, with distributed components and distributed control, as illustrated in Figure 1. The stocker controller communicates with the host using HSMS and GEM and represents the system as an equipment. The factory may require more than one type of stocker.

5.2.20.1 Communications with transport system equipment may require a low-level handshake with a transport unit directly involved in the transfer of material (such as a vehicle or a docking station on an overhead track).

5.2.20.2 Communications between the various stocker units and controllers are proprietary to the supplier.

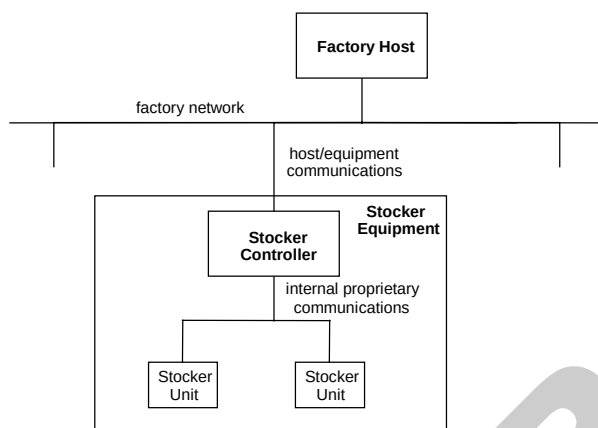


Figure 1
Example of Stocker Equipment

5.2.21 *stocker shelf* — locations within the stocker equipment to store carriers. These locations exclude load ports.

5.2.22 *stocker unit* — a physical component of the stocker system, such as a stocker crane, ID reader, wafer sensor, shuttle port, etc.

5.2.23 *swapping port* — a load port on the stocker capable of handling single load and unload of carriers or simultaneous replace of carriers.

5.2.24 *transfer agent* — a component of equipment specialized to the movement of transfer objects from place to place within a factory. May be of different types with widely-differing characteristics. Examples are fixed-arm robots, robot arms on fixed tracks, overhead gantries or even systems containing a heterogeneous collection of other transfer agents. Humans may also act as transfer agents.

5.2.25 *transfer completed port* — the destination port specified in a transfer command.

5.2.26 *transfer port* — point on the transport system at which a change of equipment ownership of the carrier occurs.

5.2.27 *transfer unit* — the element of movement (assemblage of carriers) of the ITS that consists of a maximum number of carriers allowed in a specific transfer command:

- AA is the maximum number of carriers allowed for acquire at the transfer source.
- BB is the maximum number of carriers allowed for deposit at the transfer destination.
- CC is the maximum number of carriers allowed for transfer in one transport vehicle.

5.2.27.1 The maximum size of the transfer unit is the minimum of AA, BB, and CC.

5.2.27.2 For purposes of the Stocker SEM, the transfer unit is limited to one carrier.

5.2.28 *transport system* — the component of AMHS that moves material from one part of the factory to another.

5.2.29 *transport unit* — a physical component of a transport system, such as a vehicle, node, or docking unit.

5.2.30 *zone* — a logical assignment referencing a set of one or more locations. A stocker can have several logical zone assignments. For example, a specific stocker may have 2 zones defined as LEFT_ZONE and RIGHT_ZONE. The assignment of zones is specific to the Stocker SEM equipment supplier and it may be desirable for the supplier to remain flexible in the assignment of zones so that it could be configured to meet the specific requirements of different users. A specific zone may only contain shelf locations or ports, but not both.

6 Overview and Assumptions

NOTE 2: This section has been included as background information to help clarify requirements.

6.1 Destination Control (to Shelf or to Output Port)

6.1.1 The destination is controlled by Host when the carrier is input to the stocker (i.e., the carrier enters the stocker domain). The destination of the transfer command is required. It would be invalid for the Host to issue a transfer command to the SC without including a valid destination.

6.1.2 Output to the Interbay Output Port

6.1.2.1 The destination for a transfer command to move a carrier to an interbay output port must be a loading port. It is the responsibility of the Host to

ensure that sufficient capacity exists in the destination stocker when delivering from a source stocker to a destination stocker (i.e., an interbay move). For example, it would be the responsibility of the Host to check the remaining capacity of the destination stocker prior to issuing the transfer command to send the carrier to the interbay output port of the source stocker.

6.1.3 *Output to the Intrabay Output Port*

6.1.3.1 The destination for a transfer command to move a carrier to an intrabay output port must be a loading port.

6.1.4 *Store to the Stocker Shelf*

6.1.4.1 The specific stocker shelf location is to be controlled by the Stacker Controller (SC). The Host does not specify a shelf ID in a transfer command. The Host sends the transfer command with a destination of a generic "SHELF".

6.1.4.2 The carrier is stored to a stocker shelf temporarily when the Host requested output port destination is occupied. This is the responsibility of the Stacker Controller. The carrier count of the stocker is incremented due to this temporary storage (i.e., the current capacity decreases).

6.2 *Quantity Control in the Stacker (Capacity Planning)*

6.2.1 The number of carriers in the stocker is controlled by the Host. A list of carrier database entries in the specified stocker's SC database will be available to the Host upon request via a remote command.

6.3 *Number of Stacker Cranes*

6.3.1 No Limitation. Host does not control the stocker crane directly.

6.4 *Port Type*

6.4.1 The independent input port and the independent output port are required for the Stacker SEM. The swapping type is considered as an independent port.

6.5 *Plural Sets of Input/Output Ports*

6.5.1 Plural sets of Input/Output ports connected to the interbay or intrabay transport system must be considered. (This would be considered a Multi-loop

type interface connection to the stocker.) Examples of plural sets of interfaces are as follows:

- Main Loop/Sub Loop,
- Right-handed rotation/Left-handed rotation, and
- Double Track (i.e., Stacked Track).

6.6 *Carrier ID Reader*

- Manual Input Port: Carrier ID Reader is mandatory.
- Automated Input Port: Carrier ID Reader is a customer option.
- Carrier ID Reader at any output port: Carrier ID Reader is a customer option.

6.6.1 The intrabay automated input port is sometimes used as the manual Input Port. If one port is used for both an automated and a manual, the Carrier ID Reader is mandatory for this port. If there is a Carrier ID Reader, the scenario for a stocker transfer without a Carrier ID Reader is not applicable.

6.7 *Tag*

6.7.1 Same assumptions as Carrier ID Reader.

6.8 *Vertical Floor to Floor Transportation System*

6.8.1 Out of scope of Stacker SEM.

6.9 *Carrier Exchanger/Gas Purger*

6.9.1 Out of scope of Stacker SEM.

6.10 *Robot Arm in the Passive Type Stacker*

6.10.1 No assumption is made regarding the passive type stocker.

6.11 *Empty or Not Empty Carriers*

6.11.1 No assumption is made regarding empty and not empty carriers.

6.12 *Monitor/Dummy*

6.12.1 No assumption.

6.13 *Operation Mode*

6.13.1 No assumption.

6.14 Transfer Completed Port

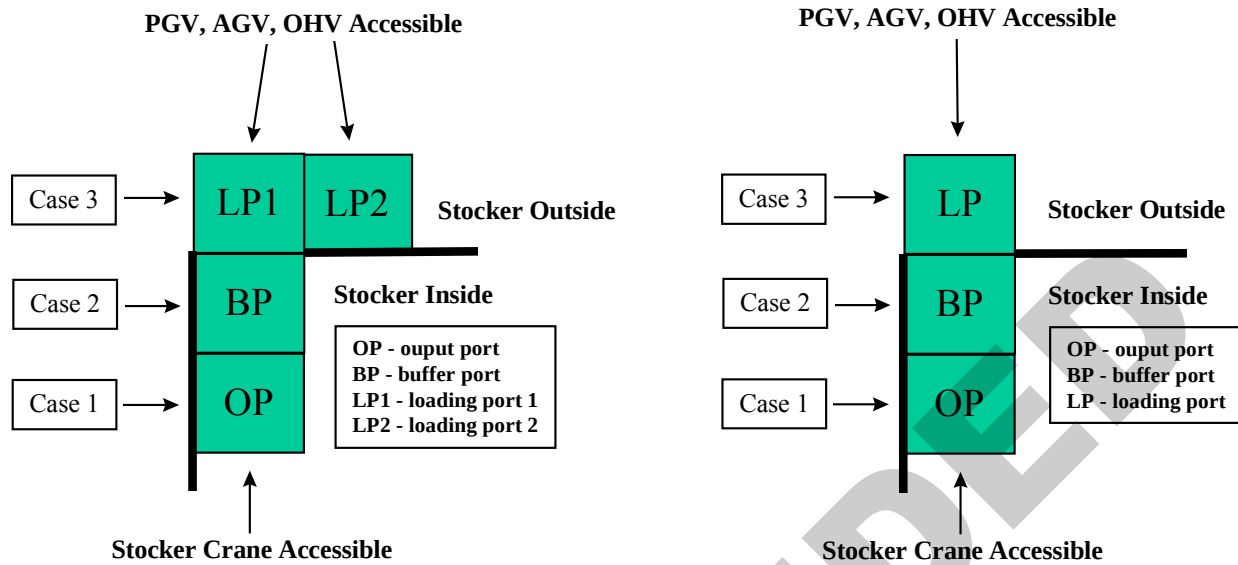


Figure 2
Output Shuttle Examples: L-Shaped Shuttle on Left, I-Shaped Shuttle on Right

6.14.1 The Transfer Completed Port is always the LoadingPort (LP) specified in the transfer command. If the end user desires that the Host issue a transfer to the TSC prior to the carrier arriving at the LP, the states defined in the Stoker Carrier State Model may be utilized.

7 Communication Requirements

7.1 It is required that any Stoker SEM compliant equipment follow the Communications State Model in SEMI E30. In addition, Stoker SEM compliant equipment shall support either SEMI E37 and SEMI E37.1 or SEMI E4.

8 State Models

8.1 State Model Requirements

8.1.1 The state models included in this standard are a requirement for Stoker SEM equipment. This standard requires implementation of all SEMI E30 state models (such as control, communication, on-line/off-line, etc. according to the GEM capabilities required per Section 13). A state model consists of a state model diagram, state definitions, and a state transition table. All state transitions in this standard, unless otherwise specified, shall correspond to collection events.

8.1.2 A state model is the host's view of the equipment, and does not necessarily describe the internal equipment operation. All Stoker SEM state model transitions shall be mapped sequentially into the appropriate internal equipment events that satisfy the requirements of those transitions. In certain implementations, the equipment may enter a state and have already satisfied all of the conditions required by the Stoker SEM state model for transition to another state. The equipment makes the required transition without any additional actions in this situation.

8.1.3 Some equipment may need to include additional substates other than those in this standard. Additional substates may be added, but shall not change the Stoker SEM defined state transitions. All expected transitions between Stoker SEM states shall occur.

8.2 SC State Model

8.2.1 SC State Model Requirements

8.2.1.1 The purpose of the SC state model is to provide information to the host regarding the overall status of the stoker system. The SC state model is valid when the SEMI E30 (GEM) state is ON-LINE. The SC state model is **not** valid when the SEMI E30 (GEM) state is OFF-LINE. Since a stoker may consist of many components (e.g.,

stocker crane, conveyor, ID reader, etc.), it may be possible to continue ON-LINE operation when the operation mode of some stocker components (as viewed by the SC) is a manual state. The details of what happens when individual components of the stocker enter a manual state are specific to the Stocker SEM equipment supplier. When the SEMI E30 Control state changes from OFF-LINE to ON-LINE, the SC State Model is started from the SC INIT state.

8.2.2 SC State Model

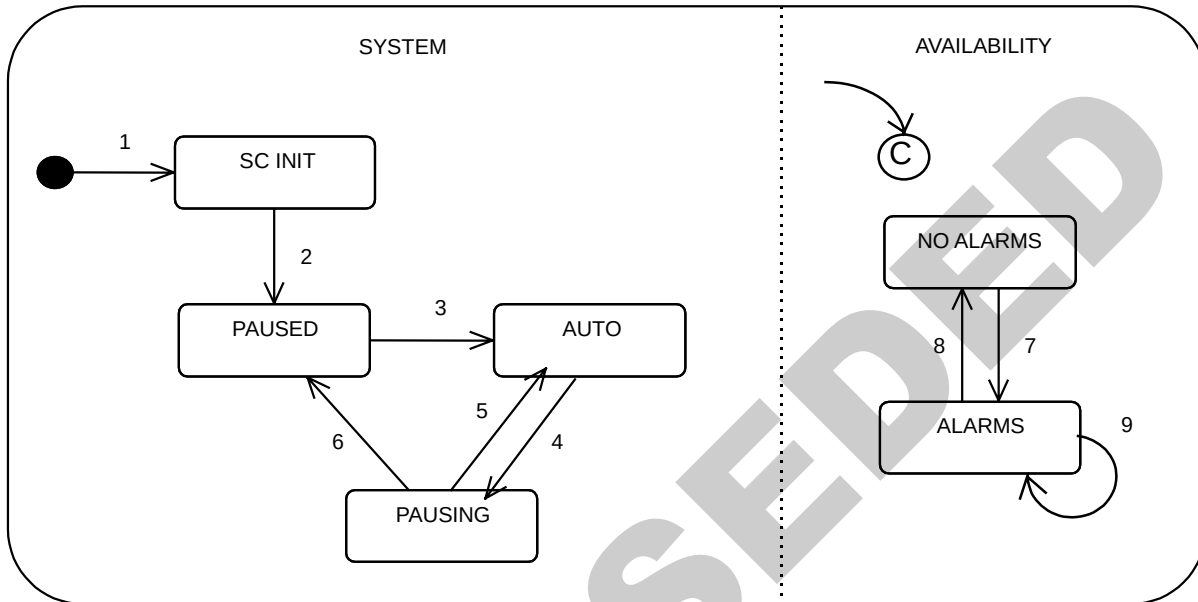


Figure 3
Generic Stocker SEM SC State Model Diagram

8.2.3 SC State Definitions

8.2.3.1 SC INIT — SC initialization of stocker components is occurring. This is a non-operational state. No commands from the host will be acknowledged, queued or processed. The system will not move out of this state if there are carriers moving on any of the stocker units controlled by the SC. Such devices must be manually or automatically recovered before transitioning to the next state.

8.2.3.2 PAUSING — A system PAUSE command has been received and is being processed. All carriers that are currently moving will continue until complete. Carriers that are currently moving may continue to move but they must not begin another movement. TRANSFER commands are accepted and queued. All status requests will be processed. The RESUME, INSTALL, REMOVE, and LOCATE commands will also be processed.

8.2.3.3 PAUSED — No carriers are in the process of moving on any of the stocker units controlled by the SC. TRANSFER commands are accepted and queued. All status requests will be processed. The RESUME, INSTALL, REMOVE, and LOCATE commands will also be processed.

8.2.3.4 AUTO — Stocker is in the normal operational state. Commands are actively processed.

8.2.3.5 NO ALARMS — There are no alarms present in the system.

8.2.3.6 ALARMS — There are one or more alarms present in the system.

8.2.4 SC State Transition Table

Table 1 SC State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comments
1	none	SC Initiation	SC INIT	S6F11 SCAutoInitiated	System runs through its startup sequence.
2	SC INIT	System started up successfully. All carrier movement stopped.	PAUSED	S6F11 SCPaused	System ready.
3	PAUSED	RESUME command	AUTO	S6F11 SCAutoCompleted	System will now execute remote commands.
4	AUTO	PAUSE command	PAUSING	S6F11 SCPauseInitiated	Carriers that are not moving remain there. Carriers that are moving must stop at the next logical stopping point.
5	PAUSING	All carrier movement has completed.	PAUSED	S6F11 SCPauseCompleted	System will accept and queue new commands but will not execute them. No new movement will occur. Outstanding moves/commands will remain NOT ACTIVE.
6	PAUSING	RESUME command	AUTO	S6F11 SCAutoCompleted	System will now execute remote commands.
7	NO ALARMS	Alarm Set	ALARMS	S6F11 AlarmSet	
8	ALARMS	All Alarms cleared.	NO ALARMS	S6F11 AlarmCleared	
9	ALARMS	Alarm Set	ALARMS	S6F11 AlarmSet	Alarm occurs when there is already an outstanding alarm.

8.3 TRANSFER Command State Model

8.3.1 TRANSFER Command State Model Requirements

8.3.1.1 The TRANSFER command state model serves as the SEMI E30 Processing State Model. The purpose of the TRANSFER command state model is to provide information to the host regarding the control of the TRANSFER command. The TRANSFER command allows the host to manage carrier movement and scheduling. The control of each TRANSFER command must independently support the TRANSFER command state model.

8.3.2 TRANSFER Command State Model Diagram

8.3.2.1 The TRANSFER command state model is detailed for Stocker SEM equipment in Figure 4.

8.3.3 TRANSFER Command State Definitions

8.3.3.1 QUEUED — SC has acknowledged and queued the TRANSFER command. TRANSFER command has not been initiated.

8.3.3.2 ACTIVE — The carrier is involved in the physical aspect of the TRANSFER command. It is denoted by the time spanned by command initiation to command completion.

8.3.3.3 TRANSFERRING (ACTIVE sub-state) — The transfer command is actively being executed by the stocker.

8.3.3.4 PAUSED (ACTIVE sub-state) — The Transfer command is not actively being executed by the stocker. This may be due to an internal equipment error that does not immediately terminate the Transfer command unsuccessfully. This would allow the Host or Operator the opportunity to retry the transfer.

8.3.3.5 CANCELING — The TRANSFER command cancel procedure is being performed to terminate a transfer command which never entered the ACTIVE state (currently QUEUED). This state is entered via a CANCEL remote command.

8.3.3.6 ABORTING — The TRANSFER command abort procedure is being performed to terminate a transfer command which has entered the ACTIVE state. This state can only be entered via an ABORT remote command. An unsuccessful transfer command completion will ultimately result from this state.

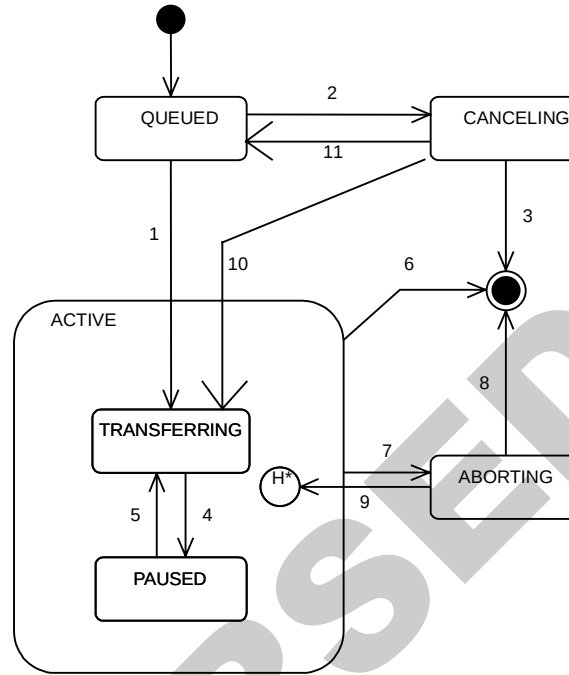


Figure 4
Generic Stocker SEM TRANSFER Command State Model Diagram

8.3.4 TRANSFER Command State Transition Table

Table 2 Transfer Command State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comments
1	QUEUED	The TRANSFER command has been initiated by the SC.	TRANSFER-RING	S6F11 TransferInitiated	
2	QUEUED	Host sends CANCEL command for a specified TRANSFER command to SC.	CANCELING	S6F11 TransferCancel-Initiated	TRANSFER command is to be removed from the TRANSFER command queue.
3	CANCELING	The cancel procedure for the TRANSFER command has completed by the stocker and the SC.	None	S6F11 TransferCancel-Completed	The carrier will still be situated at the transfer source location. The carrier may now be included in a future transfer.
4	TRANSFER-RING	The SC pauses execution of the TRANSFER command due to an anomaly condition.	PAUSED	S6F11 TransferPaused for a specific CommandID	It is an important distinction to make that the TRANSFER command is paused and not just the transfer agent. The Stocker Controller state will be ALARM.

Transition #	Previous State	Trigger	New State	Actions	Comments
5	PAUSED	The SC resumes execution of the TRANSFER command since the anomaly condition has been cleared.	TRANSFER-RING	S6F11 TransferResumed for a specific CommandID	If this was the only remaining stocker alarm, the Stocker Controller state will transition to NO ALARMS.
6	ACTIVE	The TRANSFER command has completed by the stocker and SC (either successfully or unsuccessfully).	None	S6F11 TransferCompleted sent to Host with appropriate ResultCode ResultCode = 0 if successful ResultCode is nonzero if unsuccessful	Carrier(s) could be located at any location or port located along the path of the transfer, if the TRANSFER command completed unsuccessfully. Supplier Option — The location of the carrier(s) associated with an unsuccessful transfer command must be a legal SourcePort for a new TRANSFER command.
7	ACTIVE	Host sends ABORT command for a specified TRANSFER command to SC.	ABORTING	S6F11 TransferAbort-Initiated	
8	ABORTING	The abort procedure for the TRANSFER command has completed by the stocker and SC.	None	S6F11 TransferAbort-Completed	Carrier could be located at any location or port located along the path of the ACTIVE transfer. Supplier Option — The location of the carrier associated with the aborted transfer command must be a legal SourcePort for issuing a new TRANSFER command.
9	ABORTING	TRANSFER command cannot be aborted.	ACTIVE	S6F11 TransferAbort-Failed	TRANSFER command could not be aborted due to the physical state of the equipment. Such conditions must be documented by the Stocker SEM equipment Supplier.
10	CANCELING	Transport system is unable to cancel the TRANSFER command because the transfer is now ACTIVE.	TRANSFER-RING	S6F11 TransferInitiated	
11	CANCELING	Transport system is unable to cancel the TRANSFER command and it is still queued.	QUEUED	S6F11 TransferCancel-Failed	

8.4 Stocker Carrier State Model

8.4.1 Stocker Carrier State Model Requirements

8.4.1.1 The purpose of the stocker carrier state model is to provide information to the host regarding carrier tracking (the Host will not control carriers) while the carrier is in the domain of the stocker. The carrier is in the domain of the stocker when it is in storage or transport internal to the stocker or on a stocker interface port (manual, interbay, or intrabay). The equipment shall track each carrier in compliance with the Stocker Carrier State Model.

8.4.2 Stocker Carrier State Model

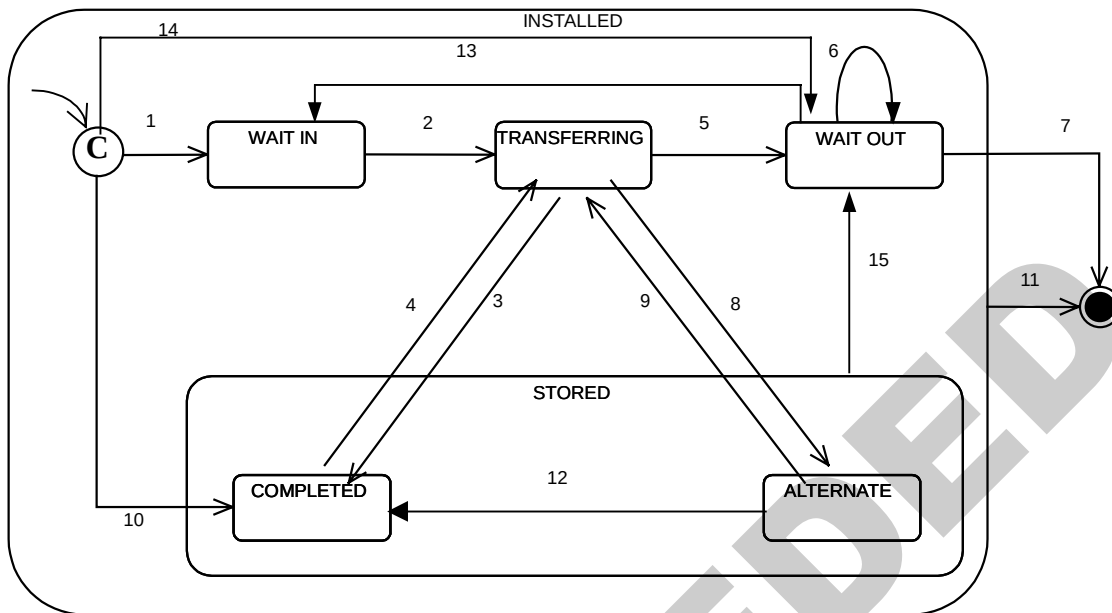


Figure 5
Generic Stocker SEM Carrier State Model Diagram

8.4.3 Stocker Carrier State Definitions

8.4.3.1 INSTALLED — Carrier in stocker database.

8.4.3.2 WAIT IN (INSTALLED sub-state) — Carrier at an internal input location in the stocker ready to be moved to a storage or output location.

8.4.3.3 WAIT OUT (INSTALLED sub-state) — Carrier is at an Output, Buffer, or Loading Port.

8.4.3.4 TRANSFERRING (INSTALLED sub-state) — Carrier moving between locations in the stocker.

8.4.3.5 STORED (INSTALLED sub-state) — Carrier is sitting at a storage location.

8.4.3.6 COMPLETED (STORED sub-state) — The carrier is stored at a shelf location as a result of completing a transfer for which this shelf represents the destination of the transfer command.

8.4.3.7 ALTERNATE (STORED sub-state) — The carrier is temporarily stored at a shelf location. The transfer command completion is pending until the destination becomes available.

8.4.4 Stocker Carrier State Transition Table

Table 3 Stocker Carrier State Transition Table

Transition #	Previous State	Trigger	New State	Action	Comments
1	none	Carrier is registered into stocker.	WAIT IN	S6F11 CarrierWaitIn	
2	WAIT IN	Stocker is executing a TRANSFER command for the carrier.	TRANSFER-RING	S6F11 Carrier-Transferring	
3	TRANSFER-RING	Completion of a TRANSFER command with a DEST of internal stocker storage.	COMPLETED	S6F11 CarrierStored	Carrier is at an internal storage destination.
4	COMPLETED	Stocker is executing a TRANSFER command for the carrier.	TRANSFER-RING	S6F11 Carrier-Transferring	
5	TRANSFER-RING	Carrier has arrived at the output port.	WAIT OUT	S6F11 CarrierWaitOut	
6	WAIT OUT	Carrier has advanced (automatically) on a port beyond the output port.	WAIT OUT	S6F11 CarrierWaitOut	
7	WAIT OUT	Carrier is removed from the stocker domain (removed from the output LP).	None	S6F11 CarrierRemoved	
8	TRANSFER-RING	The destination of the move command is occupied.	ALTERNATE	S6F11 CarrierStoredAlt	SC is waiting for the Destination to become available.
9	ALTERNATE	The port becomes available and transfer command is first in queue.	TRANSFER-RING	S6F11 CarrierResumed	Carrier continues with move to the Destination.
10	None	Carrier entry is created or modified in the SC database.	COMPLETED	S6F11 CarrierInstall-Completed	Could be due to an INSTALL remote command.
11	INSTALLED	Carrier entry is removed from the SC database.	None	S6F11 CarrierRemove-Completed	Could be due to a REMOVE remote command.
12	ALTERNATE	Transfer command is Aborted	COMPLETED	S6F11 CarrierStored	
13	WAIT OUT	Carrier on a bi-directional port is ready to be moved to a storage or output location.	WAIT IN	S6F11 CarrierWaitIn	Examples of a trigger could be the operator pressing a button or the host issuing a transfer command for the carrier.
14	None	The result of ID read at an output port that did not match the expected ID.	WAITOUT	S6F11 CarrierInstall-Completed	

Transition #	Previous State	Trigger	New State	Action	Comments
15	STORED	The result of ID read at an output port that did not match the expected ID.	WAITOUT	S6F11 CarrierInstall-Completed	

8.5 Stoker Crane State Model

8.5.1 Stoker Crane State Model Requirements

8.5.1.1 The purpose of the stoker crane state model is to provide information to the host for use of stoker crane information and metric tracking (i.e., the Host will not control the stoker crane). If it is possible for the stoker to continue operation while the stoker crane is not operational then the Stoker Crane State Model will retain its current state and the SC State Model will be ALARM. When the stoker crane becomes operational again, the state of the Stoker Crane State Model will transition to the new state. Whether it is possible to continue operation while the stoker crane is not operational is specific to the stoker SEM equipment supplier. If a single stoker contains multiple stoker cranes, each stoker crane must comply with the stoker crane state model. The Host should not be dependent on any events from the stoker crane state model.

8.5.2 Stoker Crane State Model

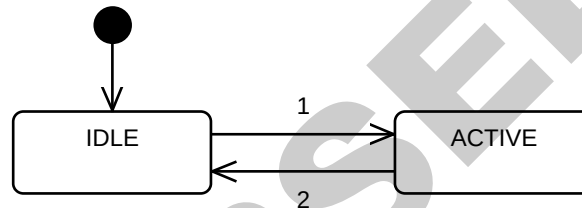


Figure 6
Generic Stoker SEM Stoker Crane State Model Diagram

8.5.3 Stoker Crane State Definitions

8.5.3.1 IDLE — The stoker crane is not performing Host or SC initiated work.

8.5.3.2 ACTIVE — The stoker crane is busy performing Host or SC initiated work.

8.5.4 Stoker Crane State Transition Table

Table 4 Stoker Crane State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comments
1	IDLE	Crane is requested to perform host or SC initiated work.	ACTIVE	S6F11 CraneActive	
2	ACTIVE	Crane completes host or SC initiated work.	IDLE	S6F11 CraneIdle	

8.6 Port Transfer State Model

8.6.1 Port Transfer State Model Requirements

8.6.1.1 The purpose of the port state model is to provided information to the host for the use in accessing ports. This may permit the host and stoker to utilize ports that are in service while avoiding the use of ports that are not in service.

8.6.2 Port Transfer State Model

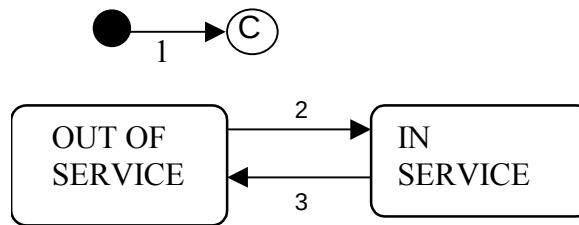


Figure 7
Port State Model Diagram

8.6.3 Port Transfer State Definitions

8.6.3.1 OUT OF SERVICE — Transfer to/from this port is disabled and the port should not be used in any Transfer command issued by the host. If a command is issued by the host which uses this port, it will not be rejected simply because the port is in this state.

8.6.3.2 IN SERVICE — Transfer to/from this port is enabled.

8.6.3.3 Port Transfer State Transition Table

Table 5 Port Transfer State Transition Table

Transition #	Previous State	Trigger	New State	Action	Comments
1	None	System reset.	OUT OF SERVICE Or IN SERVICE	S6F11 PortOutOfService Or S6F11 PortInService	The new state is based on the current status of the port or the state prior to system reset.
2	OUT OF SERVICE	The equipment has determined that the port can be utilized for transfers.	IN SERVICE	S6F11 PortInService	
3	IN SERVICE	The equipment has determined that the port should not be used for transfers.	OUT OF SERVICE	S6F11 PortOutOfService	This could be the result of an alarm condition.

9 Collection Event List

9.1 This section identifies data collection events and defines (Stream 6) reporting levels for variable data items. The host can use the report definition scenario defined in SEMI E30 to define reports at Stocker SEM defined levels. The intent of this section is to demonstrate that certain suggested data is available at specific events. The collection events are grouped according to whether or not they are associated with a state change (according to the state models defined within this document).

9.2 Requirements

9.2.1 This standard requires all collection events listed in the SEMI E30 standard (according to the GEM capabilities required per Section 14). There are cases where specific collection event names are designated for GEM defined collection events. Such collection event names are denoted by “Y” in the GEM column.

9.3 State Transition Collection Event Table

Table 6 State Transition Collection Event Table

Collection Event Name	From State	To State	Required DVVAL's	GEM
SC STATE TRANSITION EVENTS				
AlarmCleared	ALARMS	NO ALARMS	CommandID ErrorID StockerUnitInfo	Y
AlarmSet	NO ALARMS ALARMS	ALARMS ALARMS	CommandID ErrorID StockerUnitInfo RecoveryOptions	Y
SCAutoCompleted	PAUSED PAUSING	AUTO AUTO	N/A	N
SCAutoInitiated	None	SC INIT	N/A	N
SCPauseCompleted	PAUSING	PAUSED	N/A	N
SCPausd	SC INIT	PAUSED	N/A	N
SCPauseInitiated	AUTO	PAUSING	N/A	N
TRANSFER COMMAND STATE TRANSITION EVENTS				
TransferAbortCompleted	ABORTING	None	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferAbortFailed	ABORTING	ACTIVE	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferAbortInitiated	ACTIVE	ABORTING	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferCancelCompleted	CANCELING	None	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferCancelFailed	CANCELING	QUEUED	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferCancelInitiated	QUEUED	CANCELING	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferCompleted	ACTIVE	None This event will occur when the carrier arrives at the transfer completed port. The TRANSFER command DEST is an LP if transferring to an output of the stocker.	CommandID CarrierID CarrierLoc ResultCode CarrierZoneName	N

<i>Collection Event Name</i>	<i>From State</i>	<i>To State</i>	<i>Required DVVAL's</i>	<i>GEM</i>
TransferInitiated	QUEUED CANCELING	TRANSFERRING TRANSFERRING	CommandID CarrierID CarrierLoc CarrierZoneName Dest	N
TransferPaused	TRANSFERRING	PAUSED	CommandID CarrierID CarrierLoc CarrierZoneName	N
TransferResumed	PAUSED	TRANSFERRING	CommandID CarrierID CarrierLoc CarrierZoneName	N
STOCKER CARRIER STATE TRANSITION EVENTS				
CarrierInstallCompleted	None	COMPLETED	CarrierID CarrierLoc CarrierZoneName	N
CarrierRemoveCompleted	INSTALLED	None	CarrierID CarrierLoc CarrierZoneName	N
CarrierRemoved	WAIT OUT	None	CarrierID HandoffType	N
CarrierResumed	ALTERNATE	TRANSFERRING	CommandID CarrierID CarrierLoc CarrierZoneName Dest	N
CarrierStored	TRANSFERRING	COMPLETED	CarrierID CarrierLoc CarrierZoneName	N
CarrierStoredAlt	TRANSFERRING	ALTERNATE	CommandID CarrierID CarrierLoc CarrierZoneName Dest	N
CarrierTransferring	WAIT IN COMPLETED	TRANSFERRING TRANSFERRING	CarrierID CarrierLoc CarrierZoneName	N
CarrierWaitIn	None	WAIT IN	CarrierID CarrierLoc CarrierZoneName	N
CarrierWaitOut	TRANSFERRING WAIT OUT	WAIT OUT WAIT OUT	CarrierID CarrierLoc CarrierZoneName PortType	N
ZoneCapacityChange	Any State or None	Any State or None	ZoneData	N
STOCKER CRANE STATE TRANSITION EVENTS				
CraneActive	IDLE	ACTIVE	CommandID StockerCraneID	N

<i>Collection Event Name</i>	<i>From State</i>	<i>To State</i>	<i>Required DVVAL's</i>	<i>GEM</i>
CraneIdle	ACTIVE	IDLE	CommandID StockerCraneID	N
PORT TRANSFER STATE TRANSITION EVENTS				
PortInService	None OUT OF SERVICE	IN SERVICE	PortID	
PortOutOfService	None IN SERVICE	OUT OF SERVICE	PortID	

9.4 Non-Transition Collection Event Table

Table 7 Non-Transition Collection Event Table

<i>Collection Event Name</i>	<i>Event Description</i>	<i>Required DVVAL's or Reports</i>
CarrierIDRead	A carrier identification has been performed by the stocker system. It was deemed unnecessary to represent this simple event with a state model. This event is always sent to the Host immediately following the actual ID read by the stocker.	CarrierID CarrierLoc IDReadStatus
CarrierLocateCompleted	A LOCATE remote command has completed.	CarrierLocations
IDReadError	All carriers related to an ID error situation have been dispositioned. This event occurs automatically when the stocker places the carrier that experienced the ID error to the pickup port (See Section 13.3.3).	CarrierID CarrierLoc IDReadStatus
OperatorInitiatedAction	The operator initiated an action from the Stocker Controller.	CommandID CommandType CarrierID Source Dest Priority

10 Variable Data Items

10.1 The purpose of this section is to define the list of variable data item requirements for Stocker SEM equipment. Values of these variables will be available to the host via collection event reports and host status queries.

10.2 Requirements

- All variable data items and data item restrictions defined in SEMI E30 are required on Stocker SEM equipment (according to the GEM capabilities required per Section 13).
- All variable data items in the Stocker SEM Variable Data Item Dictionary for specific equipment classifications are required for Stocker SEM equipment. The data item restrictions are also required.
- Some SV's in the Variable Data Item Dictionary are referenced by an "i" subscript (e.g., CarrierID_i). The "i" subscript denotes a specific instance of the SV. This is necessary since there is usually more than one instance of such an SV active in the system at the same time (e.g., if there are 20 carriers active at the same time then "i" could range from 1 to 20 for CarrierID_i). Variable Data Items containing the "i" subscript should not have Variable ID's assigned to them.

10.2.1 Variable data items are documented in the Stocker SEM Variable Data Item Dictionary using the following format:

<i>Variable Name</i>	<i>Type</i>	<i>Description</i>	<i>Class</i>	<i>Format</i>	<i>Comments</i>
----------------------	-------------	--------------------	--------------	---------------	-----------------

Where:

- Variable Name:** A unique name for the variable data item.
- Type:** CV – meaning common variables, variables that are general to all vehicles.
CSV – meaning configuration specific variables.
- Description:** If class is DVVAL, then the description shall contain a statement of when data is valid in terms of Stocker SEM events.
- Class:** The data type of the item.
- Format:** <SECS Message Language (SML) mnemonic>acceptable formats are SEMI E5 lists, ASCII, floating point, unsigned integer or signed integer. A description of “ANY”, indicates that only the above formats are acceptable and is left to the supplier to decide.
- Comments:** Any additional information pertinent to the variable name.

10.3 Variable Data Item Types

10.3.1 Equipment Constants (ECV) — The value can be changed by the host using S2F15. The operator may have the ability to change some or all of the values. The value of an equipment constant may be queried at any time by the host using the S2F13/14 transaction or Stream 6 reports.

10.3.2 Status Variables (SV) — The values are valid at all times. A SV may not be changed by the host or operator, but may be changed by the equipment. A host or operator command may change an equipment status thus changing a SV. The value of status variables may be queried by the host at any time using the S1F3/4 or Stream 6 reports.

10.3.3 Data Variables (DVVAL) — These are variables which are valid upon the occurrence of a specific collection event, and may or may not be valid at other times depending upon the equipment. An attempt to read a variable data item when it’s invalid will not result in an error, but the data reported may not have relevant meaning.

10.3.4 Variable Data (V) — This is a class of variable data which includes all the previously defined types of variables.

10.4 Variable Data Item Dictionary

Table 8 Variable Data Item Dictionary

Variable Name	Type	Description	Class	Format	Comments
ActiveCarriers	CV	List current status of all carrier information in the SC database.	SV	L,n 1. <CarrierInfo ₁ > . . n. <CarrierInfo _n >	
ActiveTransfers	CV	List current status of all ACTIVE TRANSFER commands.	SV	L,n 1. <TransferCommand ₁ > . . n. <TransferCommand _n >	
ActiveZones	CV	List current status associated with all zones being used by the SC.	SV	L,n 1. <ZoneData ₁ > . . n. <ZoneData _n >	