

NR/SIG/10665/Mod 023		
Point Operating Equipment – RCPL & In-Bearer Clamp Lock Service A (NR/ROSE/PO-A1/1)		
Issue No. 01	Issue Date: 07/12/13	Compliance Date: 01/03/14

Service A

Remote Condition Monitoring

If the points that you have requested to work on are fitted with Remote Condition Monitoring check that the asset has been placed into maintenance mode prior to commencing work.

Prior to commencing work it is recommended that the previous current traces are made available from the Remote Condition Monitoring system and checked for any abnormalities.

Also on completion of the work it is recommended that new traces are recorded and viewed so they can be compared with the traces produced before the maintenance activity.



Caution

When requesting permission from the signaller to work on a set of points, ask the signaller to operate points in both directions to verify and prevent any confusion on the set of points you have requested.




Warning

DO NOT lubricate the Cam Follower Pivot Pin.

DO NOT lubricate the Insulated Drive Lock Slide / Drive Bracket Coupling.



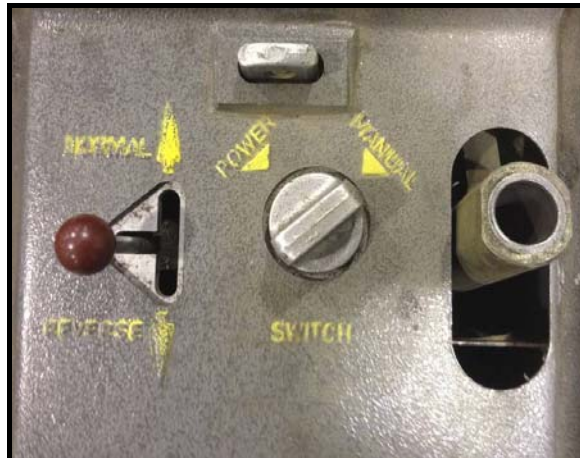

Turn the control switch on the Power Pack to Manual.

NOTE

The following maintenance must be completed with the points in both the NORMAL & REVERSE position.

Switch Rail Bracket Assembly (Open Switch Rail)

1.0 **Clean**

All exposed components.

2.0 **Check**

2.1 Pivot Pin is free to rotate.

2.2 Lock Arm Bush is Free to rotate on the Detector Lug and Lock Arm.

