

SEMI E82-1106 (Reapproved 0318) SPECIFICATION FOR INTERBAY/INTRABAY AMHS SEM (IBSEM)

This Standard was technically approved by the Information & Control Global Technical Committee. This edition was approved for publication by the global Audits and Reviews Subcommittee on August 18, 2017. Available at www.semiviews.org and www.semi.org in March 2018; originally published in 1999; previously published June 2012.

1 Purpose

1.1 This Standard establishes a Specific Equipment Model (SEM) for interbay and intrabay AMHS transport equipment (IBSEM). The model consists of equipment characteristics and behaviors that are to be implemented in addition to the SEMI E30 fundamental requirements and selected additional capabilities. The intent of this Standard is to facilitate the integration of IBSEM equipment into an automated (e.g., semiconductor fabrication and flat panel display) factory. This Document accomplishes this by defining an operational model for IBSEM equipment as viewed by a factory automation controller (Host). This definition provides a standard host interface and equipment operational behavior (e.g., control, state models, data reports, and reporting levels). Several topics require additional activity that are within the scope of this Standard: traffic management characteristics (queuing), parallel interface for carrier transfer (SEMI E23), transport system controller architecture, and delivery of the transfer unit.

2 Scope

2.1 The scope of this Standard is limited to the usage and description of interbay and intrabay AMHS transport equipment (OHT, OHS, RGT, AGT, DWC) as perceived by a SEMI Equipment Communications Standard 2 (SECS-II) host that complies with the GEM model (as specified in § 13). It defines the view of the equipment through the SECS communication link. It does not define the internal operation of the equipment. It includes a specific transfer command state model and transport system controller state model as the basis for all equipment of this class.

2.2 This Document assumes that the GEM fundamental requirements and selected additional capabilities (as specified in § 13) have been implemented on the IBSEM equipment. It expands the GEM standard requirements and capabilities in the areas of state models (TSC, transfer command, vehicle and carrier state models), collection events, alarm documentation, remote commands, data item variables, and material movement.

NOTICE: SEMI Standards and Safety Guidelines do not purport to address all safety issues associated with their use. It is the responsibility of the users of the Documents to establish appropriate safety and health practices, and determine the applicability of regulatory or other limitations prior to use.

3 Limitations

3.1 Evaluation of SEMI E32 (MMM)

3.1.1 The concepts defined in SEMI E32 were analyzed and included where applicable to the IBSEM, but the GEM model was used as the basis for IBSEM requirements definition.

3.2 Interbay and Intrabay AMHS Transport Equipment Types

3.2.1 This Standard is targeted at the different types of 300 mm and interbay and intrabay AMHS transport equipment. The term 'IBSEM equipment' refers to all types of transport equipment. The equipment types have fundamental mechanical differences:

3.2.1.1 *Overhead Hoist Transport (OHT)* — An overhead rail guided transport system positioned for vertical access to SEMI E15.1 compliant ports.

3.2.1.2 *Over Head Shuttle (OHS)* — An overhead rail guided transport system (monorail) positioned for access to stocker automated interbay input and output ports. The OHS vehicle may or may not contain a transfer agent.

3.2.1.3 *Rail Guided Transport (RGT)* — A ground-based rail guided transport system positioned for access to SEMI E15.1 compliant ports.

3.2.1.4 *Automated Guided Transport (AGT)* — A ground-based transport system with automated guidance (i.e., no rail guidance). Automated guidance system allows vehicles to access SEMI E15.1 compliant ports.

3.2.1.5 *Direct WIP Conveyor (DWC)* — An overhead transport system, based on direct WIP roller conveyers. No vehicles are used for point to point delivery. The conveyers are positioned for vertical access to SEMI E15.1 ports.

3.2.2 Transport vehicles may contain zero or more internal buffers for carrier transport. If mechanically feasible, the transport system may acquire or deposit carriers simultaneously. If transported in a safe manner, carrier transport may occur while occupying the acquire/deposit transfer port(s) of the transport vehicle (e.g., a single position hoist vehicle). In the context of this Standard, a ‘vehicle’ on a DWC is defined as a single carrier in the transport system.

3.3 *Physical Layout Limitations*

3.3.1 The equipment controlled by a single TSC must allow for a carrier to be transported from any given source port to any destination port via a single transfer command without the assistance of an external device (manual or automated). In other words, if a source port and a destination port are controlled by a TSC, there must not exist a physical or logical barrier that prevents a carrier from being moved between the two ports. This assumes that the type of carrier (FOUP, Reticle Pod, etc.) is permitted at the source and destination ports.

4 Referenced Standards and Documents

4.1 *SEMI Standards and Safety Guidelines*

SEMI E4 — SEMI Equipment Communications Standard 1 Message Transfer (SECS-I)

SEMI E5 — Specification for SEMI Equipment Communications Standard 2 Message Content (SECS-II)

SEMI E23 — Specification for Cassette Transfer Parallel I/O Interface

SEMI E30 — Specification for the Generic Model for Communications and Control of Manufacturing Equipment (GEM)

SEMI E32 — Material Movement Management (MMM)

SEMI E37 — High-Speed SECS Message Services (HSMS) Generic Services

SEMI E84 — Specification for Enhanced Carrier Handoff Parallel I/O Interface

4.2 *Other Documents*

Harel, D., “Statecharts: A Visual Formalism for Complex Systems.” Science of Computer Programming 8 (1987): pp. 231–74.¹

NOTICE: Unless otherwise indicated, all documents cited shall be the latest published versions.

5 Terminology

5.1 *Abbreviations and Acronyms*

5.1.1 *AGT* — automated guided transport

5.1.2 *AMHS* — automated material handling system

5.1.3 *DWC* — direct WIP conveyor

5.1.4 *FOUP* — front opening unified pod

5.1.5 *GEM* — generic equipment model

5.1.6 *ITS* — interbay or intrabay transport system

5.1.7 *OHS* — overhead shuttle

5.1.8 *OHT* — overhead hoist transport

5.1.9 *PGV* — person guided vehicle

5.1.10 *RGT* — rail guided transport

¹ Elsevier Science, P.O. Box 945, New York, NY 10159-0945, USA; <http://www.elsevier.nl>

5.1.11 *TCP/IP* — Transmission Communication Protocol/Internet Protocol

5.1.12 *TSC* — transport system controller

5.2 Definitions

5.2.1 *active vehicle* — a vehicle in the transport system that contains a robot or other transfer agent for providing the acquiring (loading) and depositing (unloading) actions.

5.2.2 *buffer* — a set of one or more locations for holding carriers at the production equipment.

5.2.3 *carrier* — a container with one or more fixed positions for holding substrates. Examples of carriers include FOUPs and open cassettes.

5.2.4 *FOUP* — a closed carrier for holding wafers.

5.2.5 *host* — the factory computer system, or an intermediate system, that represents the factory and the user to the equipment. Refers to the system that controls or supervises the transport system controller (TSC) throughout this Document.

5.2.6 *internal buffer* — locations within the equipment to store carriers. These locations exclude load ports.

5.2.7 *internal transfer port* — a specific type of ‘transfer port’, which is internal to a single TSC domain. As an example, this location may be used to transfer carriers among different vehicles in a single TSC domain.

5.2.8 *load port* — the interface location on the equipment where carriers are delivered.

5.2.9 *open cassette* — an open structure that holds one or more wafers.

5.2.10 *passive vehicle* — a vehicle in the transport system that does not contain a robot or other transfer agent for providing the acquiring (loading) and depositing (unloading) actions. The vehicle simply contains a position(s) to carry the transfer unit. The loading and unloading action must be accomplished at the load or unload port by a different system (e.g., stocker port robot).

5.2.11 *process equipment* — equipment used to make semiconductor devices. This excludes metrology and material handling equipment.

5.2.12 *production equipment* — equipment used to produce semiconductor devices, including wafer sorting, process, and metrology equipment and excluding material handling equipment.

5.2.13 *storage buffer* — a set of one or more locations for storing carriers in the transport system.

5.2.14 *transfer port* — point on the transport system at which a change of equipment ownership of the carrier occurs. See also *internal transfer port*.

5.2.15 *transfer unit* — the element of movement (assemblage of carriers) of the ITS that consists of a maximum number of carriers allowed in a specific transfer command:

- AA is the maximum number of carriers allowed for acquire at the transfer source.
- BB is the maximum number of carriers allowed for deposit at the transfer destination.
- CC is the maximum number of carriers allowed for transfer in one transport vehicle.
- The maximum size of the transfer unit is the minimum of AA, BB, and CC.

5.2.16 *transport system (TS)* — a transport system dedicated to one or more bays in the factory and responsible for transferring carriers to production equipment, from production equipment, from production equipment to production equipment or from stocker to stocker. TS consists of the physical units of the system (e.g., vehicles, nodes, docking stations), the low-level unit controllers, and a system-level controller. TS excludes factory floor storage systems (stockers), but includes any short-term storage integral to the system, such as storage locations within an overhead track system that are accessible only to units of the particular TS.

5.2.17 *transport system controller (TSC)* — interbay or intrabay TSC that communicates with the factory host and represents the system as the equipment.

5.2.18 *transport system equipment* — an individual transport system viewed as a single piece of equipment, with distributed components and distributed control. The TS controller communicates with the host using HSMS and GEM and represents the system as an equipment. The factory may require more than one type of transport system.

5.2.19 *transport unit* — a physical component of a transport system, such as a vehicle, node, or docking unit.

5.2.20 *virtual destination* — a destination which represents a group of ports.

6 Communication Requirements

6.1 It is required that any IBSEM compliant equipment follow the Communications State Model in SEMI E30. In addition, IBSEM compliant equipment shall support either the High-speed SECS Message Services Single-Session Mode (SEMI E37 and SEMI E37.1, HSMS and HSMS-SS) communication standard or SEMI Equipment Communications Standard 1 Message Transfer (SEMI E4, SECS-I) communication standard.

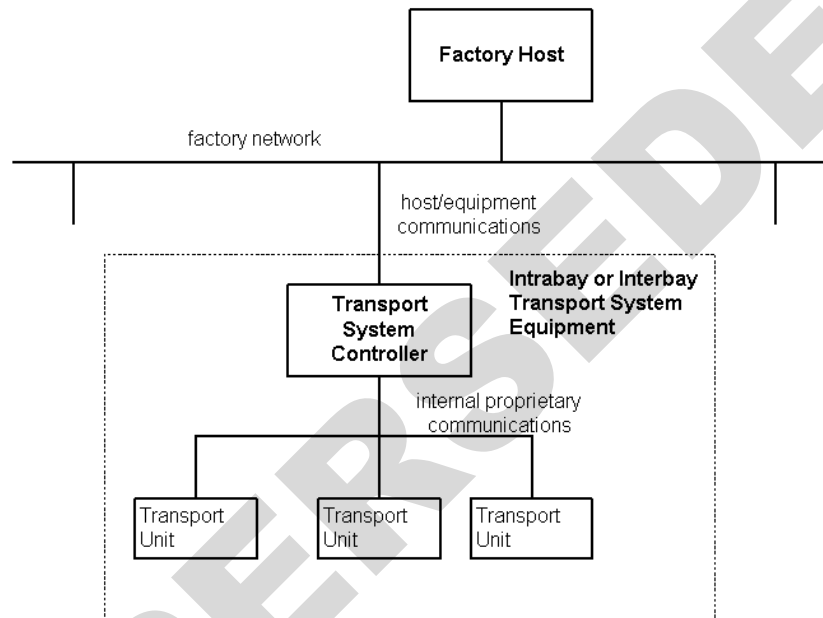


Figure 1
Example of Transport System Equipment

7 State Models

7.1 State Model Requirements

7.1.1 The state models included in this Standard are a requirement for IBSEM equipment. This Standard requires implementation of all SEMI E30 state models (such as control, communication, on-line/off-line, etc. according to the GEM capabilities required per § 13). A state model consists of a state model diagram, state definitions, and a state transition table. All state transitions in this Standard, unless otherwise specified, shall correspond to collection events.

7.1.2 A state model is the host's view of the equipment, and does not necessarily describe the internal equipment operation. All IBSEM state model transitions shall be mapped into the appropriate internal equipment events that satisfy the requirements of those transitions. In certain implementations, the equipment may enter a state and have already satisfied all of the conditions required by the IBSEM state model for transition to another state. The equipment makes the required transition without any additional actions in this situation.

7.1.3 Some equipment may need to include additional substates other than those in this Standard. Additional substates may be added, but shall not change the IBSEM defined state transitions. All expected transitions between IBSEM states shall occur.

7.2 TSC State Model

7.2.1 TSC State Model Requirements

7.2.1.1 The purpose of the Transport System state model is to provide information to the host regarding the overall status of the Transport System. The TSC state model is valid when the SEMI E30 (GEM) state is ON-LINE. The TSC state model is **not** valid when the SEMI E30 (GEM) state is OFF-LINE. Since a transport system may consist of many components (e.g., vehicle, robot arm, ID reader, etc.), it may be possible to continue ON-LINE operation when the operation mode of some transport components (as viewed by the TSC) is a manual state. The details of what happens when individual components of the transport system enter a manual state are specific to the IBSEM equipment supplier. When the SEMI E30 Control state changes from OFF-LINE to ON-LINE, the TSC State Model is started from the TSC INIT state.

7.2.2 TSC State Model

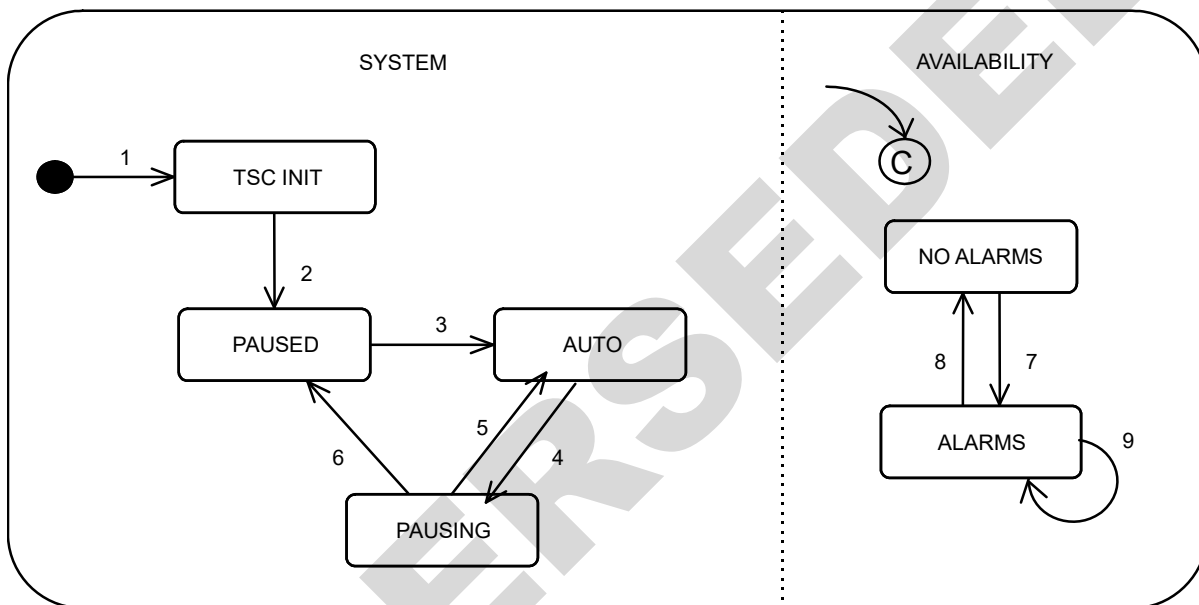


Figure 2
Generic IBSEM TSC State Model Diagram

7.2.3 TSC State Definitions

7.2.3.1 **TSC INIT** — TSC initialization of TS components is occurring. This is a nonoperational state. No commands from the host will be processed or queued. The system will not move out of this state if there are vehicles actively loading or unloading carriers at ports. These vehicles must be manually or automatically recovered before moving on to the next state.

7.2.3.2 **PAUSING** — A system PAUSE command has been received and is being processed. All vehicles that are currently loading or unloading will continue until the load/unload is complete. Vehicles that are currently moving may continue to move but they must not begin a load or unload. TRANSFER commands are accepted and queued. All status requests will be processed. The RESUME command will also be processed.

7.2.3.3 **PAUSED** — No vehicles are in the process of loading or unloading a carrier at a port, but vehicles may still be moving. TRANSFER commands are accepted and queued. All status requests will be processed. The RESUME command will also be processed.

7.2.3.4 **AUTO** — System is in the normal operational state. Commands are actively processed.

7.2.3.5 **NO ALARMS** — There are no alarms present in the system.

7.2.3.6 **ALARMS** — There are one or more alarms present in the system, but the TSC is still capable of normal processing since several components may remain unaffected by the alarm situation.

7.2.4 TSC State Transition Table

Table 1 TSC State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comments
1	None	TSC Initiation.	TSC INIT	S6F11 TSCAutoInitiated	System runs through its startup sequence.
2	TSC INIT	System started up successfully. All loads and unloads are complete.	PAUSED	S6F11 TSCPaused	System ready.
3	PAUSED	TSC is resumed.	AUTO	S6F11 TSCAutoCompleted	System will now perform all commands. Stopped Vehicles will resume normal motion.
4	AUTO	TSC is requested to pause.	PAUSING	S6F11 TSCPauseInitiated	Vehicles that are stopped stay stopped. Vehicles that are moving stop at the next logical point without proceeding.
5	PAUSING	TSC is resumed.	AUTO	S6F11 TSCAutoCompleted	System will now perform all commands. Stopped Vehicles will resume normal motion.
6	PAUSING	All carrier loads and unloads are completed. No new acquires or deposits will occur. Outstanding acquires and deposits will complete.	PAUSED	S6F11 TSCPauseCompleted	System will accept and queue new commands but will not execute them.
7	NO ALARMS	Alarm Set.	ALARMS	S6F11 AlarmSet	System can process normally for transport components that are unaffected by the alarm.
8	ALARMS	Last remaining alarm cleared.	NO ALARMS	S6F11 AlarmCleared	
9	ALARMS	Alarm Set.	ALARMS	S6F11 AlarmSet	Alarm occurs when there is already an outstanding alarm.

7.3 TRANSFER Command State Model

7.3.1 TRANSFER Command State Model Requirements

7.3.1.1 The TRANSFER command state model serves as the SEMI E30 Processing State Model. The purpose of the TRANSFER command state model is to provide information to the host regarding the control of the TRANSFER command. The TRANSFER command allows the host to manage interbay or intrabay delivery and scheduling. The control of each TRANSFER command must independently support the TRANSFER command state model.

7.3.1.2 The TRANSFER command can specify as DESTPORT, a virtual name which corresponds to a group of physical ports. The transport system must have knowledge of the status of the ports to implement this feature. For instance if the ports are part of the transport system domain, the transport system will deliver to any of the physical ports that are available. The transport system may buffer carriers while waiting for a port to become available, and

then deliver to the first of the ports that becomes available. In the TransferCompleted event CarrierLoc will specify the actual port delivered to. This feature is optional and not required for compliance.

7.3.1.3 A TRANSFER command can specify a storage buffer for DESTPORT and SOURCEPORT. If the SOURCEPORT is a storage buffer, the carrier must already be installed in the controller so that its specific location is known. This feature is optional and not required for compliance.

7.3.1.4 A TRANSFER command can be issued for carriers before they are INSTALLED in the transport system, and for carriers that are already in the domain of the transport system. The TRANSFER command can complete successfully without the carrier being removed from the transport system domain.

7.3.2 TRANSFER Command State Model Diagram

7.3.2.1 The TRANSFER command state model is detailed for IBSEM equipment in Figure 3.

7.3.3 TRANSFER Command State Definitions

7.3.3.1 **NOT ACTIVE** — The transfer unit is not involved in the physical aspect of the TRANSFER command.

7.3.3.2 **QUEUED (NOT ACTIVE substate)** — TSC has acknowledged and queued the TRANSFER command. TRANSFER command has not been initiated.

7.3.3.3 **WAITING (NOT ACTIVE substate)** — TRANSFER command has been initiated. For Vehicle based systems: A vehicle is on its way to the source location to acquire the transfer unit.

7.3.3.4 **ACTIVE** — The transfer unit is involved in the physical aspect of the TRANSFER command.

7.3.3.5 **TRANSFERRING (ACTIVE substate)** — The transfer command is actively being executed by the transport equipment.

7.3.3.6 **PAUSED (ACTIVE substate)** — The transfer command is not actively being executed by the transport equipment.

7.3.3.7 **CANCELING** — The TRANSFER command cancel procedure is being performed to terminate a transfer command which never entered the ACTIVE state (either QUEUED or WAITING). This state is entered via a CANCEL remote command.

7.3.3.8 **ABORTING** — The TRANSFER command abort procedure is being performed to terminate a transfer command which has entered the ACTIVE state. This state can only be entered via an ABORT remote command.

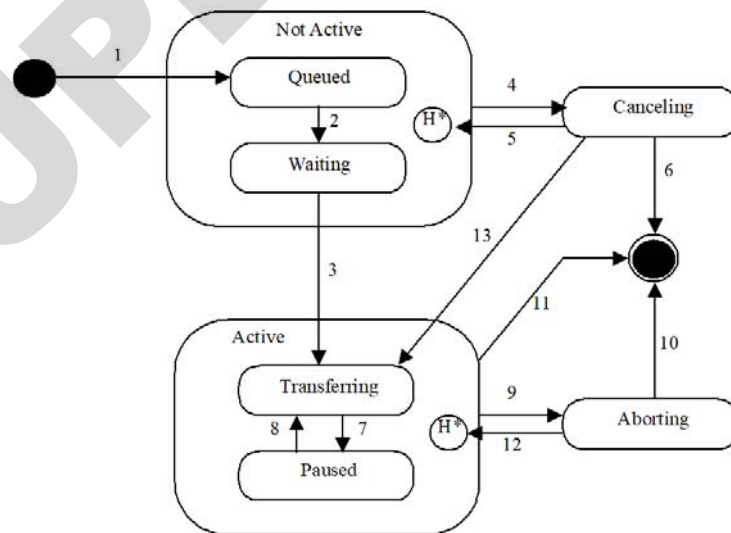


Figure 3
Generic IBSEM TRANSFER Command State Model Diagram

7.3.4 TRANSFER Command State Transition Table

Table 2 Transfer Command State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comments
1	None	The Host generated TRANSFER command is successfully acknowledged by the TSC.	QUEUED		
2	QUEUED	The TRANSFER command has been initiated by the TSC.	WAITING	S6F11 Transfer-Initiated	Transport vehicle is dispatched to acquire the transfer unit.
3	WAITING	The acquire of the first carrier of the transfer unit begins.	TRANSFERRING	S6F11 Transferring	
4	NOT ACTIVE	Host issued cancel for the TRANSFER command is accepted by the TSC.	CANCELING	S6F11 TransferCancel-Initiated	A CANCEL remote command was issued to terminate a TRANSFER command that has not entered the physical aspect of the command.
5	CANCELING	Transport system is unable to cancel the TRANSFER command.	Previous NOT ACTIVE substate	S6F11 TransferCancel-Failed	The ability of the equipment to successfully complete a cancel of the TRANSFER command is specific to the IBSEM equipment supplier.
6	CANCELING	The cancel procedure for the TRANSFER command has completed by the transport system and TSC.	None	S6F11 TransferCancel-Completed	The transfer unit will still be situated at the transfer source location. The carriers in the transfer unit may now be included in a future transfer (either AMHS or PGV based).
7	TRANSFERRING	The TSC pauses execution of the TRANSFER command due to an anomaly condition.	PAUSED	S6F11 TransferPaused	It is an important distinction to make that the TRANSFER command is paused even though the vehicle may not be.
8	PAUSED	The TSC resumes execution of the TRANSFER command since the anomaly condition has been cleared.	TRANSFERRING	S6F11 Transfer-Resumed	
9	ACTIVE	Host initiates an abort of a TRANSFER command.	ABORTING	S6F11 TransferAbort-Initiated	An ABORT remote command was issued to terminate a TRANSFER command.

Transition #	Previous State	Trigger	New State	Actions	Comments
10	ABORTING	The abort procedure for the TRANSFER command has completed by the transport system and TSC.	None	S6F11 TransferAbort-Completed	Transfer unit could be located at any location or port located along the path of the ACTIVE transfer. The location of the carrier(s) associated with the aborted transfer command must be legal SourcePort(s) for issuing a new TRANSFER command.
11	ACTIVE	The TRANSFER command has completed by the transport system and TSC (either successfully or unsuccessfully).	None	S6F11 TransferCompleted sent to Host with appropriate ResultCode ResultCode = 0 if successful ResultCode Not = 0 if unsuccessful	Carrier(s) could be located at any location or port located along the path of the transfer if the TRANSFER command completed unsuccessfully. The location of the carrier(s) associated with an unsuccessful transfer command must be legal SourcePort(s) for a new TRANSFER command.
12	ABORTING	Transport system is physically unable to abort the TRANSFER command.	Previous ACTIVE substate	S6F11 TransferAbort-Failed	The ability of the equipment to successfully complete an ABORT of the TRANSFER command is specific to the IBSEM equipment supplier.
13	CANCELING	Transport system is unable to cancel the TRANSFER command because the transfer is now ACTIVE.	TRANSFERRING	S6F11 Transferring	The ability of the equipment to successfully complete a cancel of the TRANSFER command is specific to the IBSEM equipment supplier.

7.4 Vehicle State Model

7.4.1 Vehicle State Model Requirements

7.4.1.1 The purpose of the vehicle state model is to provide information to the host for use of transport vehicle information and metric tracking (i.e., the Host will not control vehicles). Each vehicle must individually comply with the vehicle state model. Implementation of this state model, along with associated events and variables, is not a requirement for Transport Systems which do not have vehicles. An example of such a Transport System is a DWC. The Host should not be dependent on any events from the vehicle state model.

7.4.2 Vehicle State Model

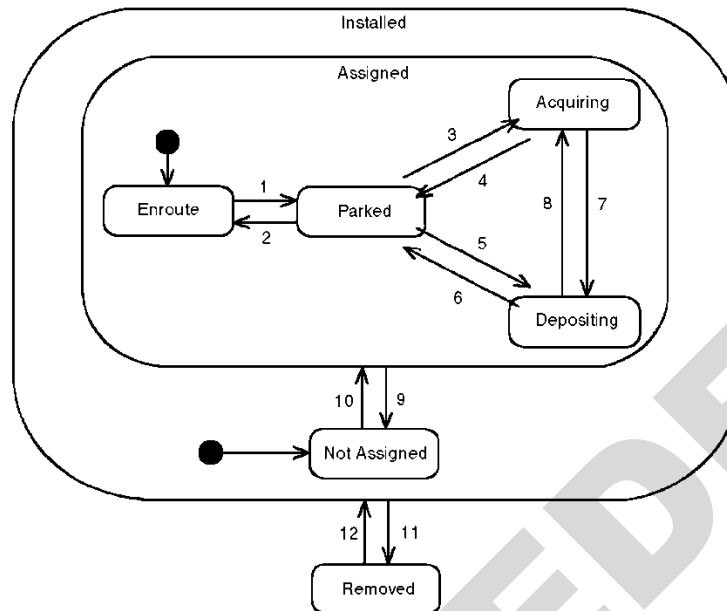


Figure 4
Generic IBSEM Vehicle State Model Diagram

7.4.3 Vehicle State Definitions

7.4.3.1 *INSTALLED* — The vehicle is available or being used for TRANSFER commands. All enabled collection events and alarms will be sent to the Host for vehicles in this state.

7.4.3.2 *REMOVED* — The vehicle is not available for Host initiated TRANSFER commands. No collection events or alarms will be sent to the Host for vehicles in this state.

7.4.3.3 *ASSIGNED (INSTALLED substate)* — Vehicle is allocated to a TRANSFER command.

7.4.3.4 *NOT ASSIGNED (INSTALLED substate)* — Vehicle is not allocated to a TRANSFER command. The vehicle may contain a carrier as the result of a command being aborted.

7.4.3.5 *ENROUTE (ASSIGNED substate)* — The vehicle is on its way to a transfer port. This is the default entry into the ASSIGNED state since it must be entered for the host to track vehicle metrics completely and adequately.

7.4.3.6 *PARKED (ASSIGNED substate)* — This state occurs when the vehicle is in the following conditions:

- After the arrival of the vehicle is completed and before the action of the transfer agent is started.
- After the action of the transfer agent has completed and before the departure of the vehicle.
- After continuous actions of the transfer agent (e.g., acquire/acquire and deposit/deposit) are completed.

7.4.3.7 *ACQUIRING (ASSIGNED substate)* — The vehicle is currently involved in carrier acquire (one or more carriers possible depending on vehicle limitations).

7.4.3.8 *DEPOSITING (ASSIGNED substate)* — The vehicle is currently involved in carrier deposit (one or more carriers possible depending on vehicle limitations).

7.4.4 Vehicle State Transition Table

Table 3 Vehicle State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comment
1	ENROUTE	Vehicle arrives at a transfer port associated with an ACTIVE transfer command.	PARKED	S6F11 VehicleArrived	TransferPort may be an <i>internal transfer port</i> .
2	PARKED	Vehicle departs a transfer port associated with an ACTIVE transfer command.	ENROUTE	S6F11 VehicleDeparted	TransferPort may be an <i>internal transfer port</i> .
3	PARKED	The carrier handoff parallel I/O starts for the vehicle to acquire (load) the transfer unit.	ACQUIRING	S6F11 VehicleAcquire-Started	If the vehicle is a passive type then the acquire occurs by the robot on the other equipment loading the transfer unit to the vehicle.
4	ACQUIRING	The carrier handoff parallel I/O completes for the vehicle to acquire (load) the transfer unit.	PARKED	S6F11 VehicleAcquire-Completed	
5	PARKED	The carrier handoff parallel I/O starts for the vehicle to deposit (unload) the transfer unit.	DEPOSITING	S6F11 VehicleDeposit-Started	If the vehicle is a passive type then the deposit occurs by the robot on the other equipment unloading the transfer unit from the vehicle.
6	DEPOSITING	The carrier handoff parallel I/O completes for the vehicle to deposit (unload) the transfer unit.	PARKED	S6F11 VehicleDeposit-Completed	
7	ACQUIRING	The carrier handoff parallel I/O completes for the vehicle to acquire (load) the transfer unit and starts for the vehicle to deposit (unload) the carrier.	DEPOSITING	S6F11 VehicleDeposit-Started	Carrier Replace See scenario for an example.
8	DEPOSITING	The carrier handoff parallel I/O completes for the vehicle to deposit (unload) the transfer unit and starts for the vehicle to acquire (load) the carrier.	ACQUIRING	S6F11 VehicleAcquire-Started	Carrier Replace See scenario for an example.
9	ASSIGNED	Vehicle is no longer being utilized for the specified command.	NOT ASSIGNED	S6F11 Vehicle-Unassigned	This could be the result of the command being completed or aborted. It could also be the result of the TSC scheduling algorithms assigning this vehicle to another command and/or another vehicle being assigned to this command.

Transition #	Previous State	Trigger	New State	Actions	Comment
10	NOT ASSIGNED	Vehicle is allocated to a TRANSFER command.	ASSIGNED	S6F11 VehicleAssigned	
11	INSTALLED	Vehicle is removed from use of transfer commands.	REMOVED	S6F11 VehicleRemoved	
12	REMOVED	Vehicle is installed for use of transfer commands.	INSTALLED	S6F11 VehicleInstalled	

7.5 IBSEM Carrier State Model

7.5.1 IBSEM Carrier State Model Requirements

7.5.1.1 The purpose of the carrier state model is to provide information to the host regarding carrier tracking (the Host will not control carriers). Each carrier must comply with the carrier state model.

7.5.2 IBSEM Carrier State Model



Figure 5
Generic IBSEM Carrier State Model Diagram

7.5.3 Carrier State Definitions

7.5.3.1 **INSTALLED** — The carrier is in the physical domain of the TSC.

7.5.4 Carrier State Transition Table

Table 4 Carrier State Transition Table

Transition #	Previous State	Trigger	New State	Actions	Comments
1	None	The carrier enters the physical domain of the TSC.	INSTALLED	S6F11 CarrierInstalled	
2	INSTALLED	The carrier is removed from the physical domain of the TSC.	None	S6F11 CarrierRemoved	

7.6 Port Transfer State Model

7.6.1 Port Transfer State Model Requirements

7.6.1.1 The purpose of the port transfer state model is to provided information to the host for the use in accessing ports. This may permit the host and stocker to utilize ports that are in service while avoiding the use of ports that are not in service.

7.6.2 Port Transfer State Model

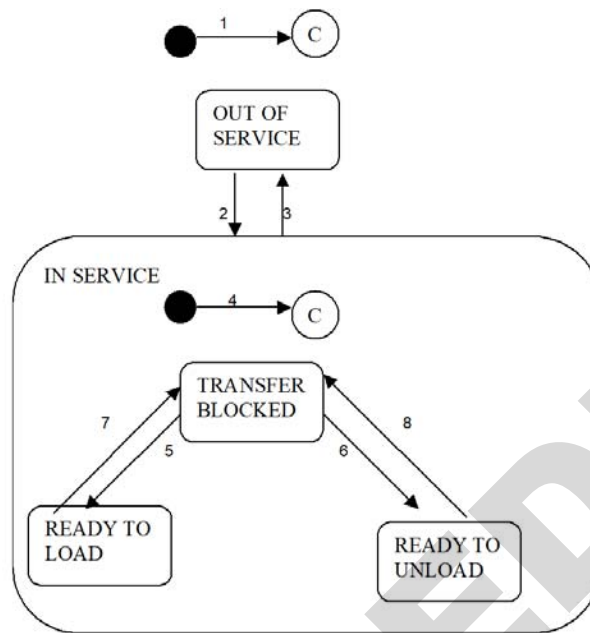


Figure 6
Port State Model Diagram

7.6.3 Port Transfer State Definitions

7.6.3.1 OUT OF SERVICE — Transfer to/from this port is disabled and the port should not be used in any Transfer command issued by the host. If a command is issued by the host which uses this port, it will not be rejected simply because the port is in this state.

7.6.3.2 IN SERVICE — Transfer to/from this port is enabled.

7.6.3.3 The following are **optional** substates of the **IN SERVICE** state to provide information to the host for the use in accessing ports. The information is generally obtained by the TSC via a low-level interface with the connected equipment. The connected equipment should generally, though not required, follow the Load Port Transfer State Model defined in SEMI E87. If these states are implemented, they are **not required** for every port.

7.6.3.3.1 TRANSFER BLOCKED — The state is neither **READY TO LOAD** nor **READY TO UNLOAD**.

7.6.3.3.2 READY TO LOAD — The port is able to accept (be loaded with) a carrier from the IBSEM equipment.

7.6.3.3.3 READY TO UNLOAD — The port is able to have a carrier removed (unloaded) by the IBSEM equipment.

7.6.4 Port Transfer State Transition Table

Table 5 Port Transfer State Transition Table

Transition #	Previous State	Trigger	New State	Action	Comments
1	None	System reset.	OUT OF SERVICE Or IN SERVICE	S6F11 PortOutOfService Or S6F11 PortInService	The new state is based on the current status of the port or the state prior to system reset.
2	OUT OF SERVICE	The equipment has determined that the port can be utilized for transfers.	IN SERVICE	S6F11 PortInService	
3	IN SERVICE	The equipment has determined that the port should not be used for transfers.	OUT OF SERVICE	S6F11 PortOutOfService	This could be the result of an alarm condition.
4	None	System Reset.	TRANSFER BLOCKED READY TO LOAD READY TO UNLOAD	S6F11 PortTransferBlocked S6F11 PortReadyToLoad S6F11 PortReadyToUnload	The new state is based on the current status of the port.
5	TRANSFER BLOCKED	Port ready for carrier delivery.	READY TO LOAD	S6F11 PortReadyToLoad	
6	TRANSFER BLOCKED	Port ready for carrier removal.	READY TO UNLOAD	S6F11 PortReadyToUnload	
7	READY TO LOAD	No carrier transfer allowed.	TRANSFER BLOCKED	S6F11 PortTransferBlocked	
8	READY TO UNLOAD	No carrier transfer allowed.	TRANSFER BLOCKED	S6F11 PortTransferBlocked	

8 Collection Event List

8.1 This section identifies data collection events and defines (Stream 6) suggested associated variable data items. The host can use the report definition scenario defined in SEMI E30 to define reports at IBSEM defined levels. The intent of this section is to demonstrate that certain suggested data is available at specific events.

8.2 Requirements

8.2.1 This Standard requires all collection events listed in the SEMI E30 Standard (according to the GEM capabilities required per § 13).

8.2.2 Collection Event Table

Table 6 Collection Event Table (State Transition Based)

Collection Event Name	From State	To State	Required DVVALs
TSC STATE TRANSITION EVENTS			
AlarmCleared	ALARMS	NO ALARMS	CommandID VehicleInfo
AlarmSet	NO ALARMS ALARMS	ALARMS ALARMS	CommandID VehicleInfo
TSCAutoCompleted	PAUSED PAUSING	AUTO AUTO	N/A

<i>Collection Event Name</i>	<i>From State</i>	<i>To State</i>	<i>Required DVVALs</i>
TSCAutoInitiated	None	TSC INIT	N/A
TSCPauseCompleted	PAUSING	PAUSED	N/A
TSCPaused	TSC INIT	PAUSED	N/A
TSCPauseInitiated	AUTO	PAUSING	N/A
TRANSFER COMMAND STATE TRANSITION EVENTS			
TransferAbortCompleted	ABORTING	None	CommandID TransferCompleteInfo
TransferAbortFailed	ABORTING	ACTIVE (History)	CommandID
TransferAbortInitiated	ACTIVE	ABORTING	CommandID
TransferCancelCompleted	CANCELING	None	CommandID
TransferCancelFailed	CANCELING	NOT ACTIVE (History)	CommandID
TransferCancelInitiated	NOT ACTIVE	CANCELING	CommandID
TransferCompleted	ACTIVE	None	CommandInfo TransferCompleteInfo ResultCode
TransferInitiated	QUEUED	WAITING	CommandID
TransferPaused	TRANSFERRING	PAUSED	CommandID
TransferResumed	PAUSED	TRANSFERRING	CommandID
Transferring	WAITING CANCELING	TRANSFERRING TRANSFERRING	CommandID
VEHICLE STATE TRANSITION EVENTS			
VehicleArrived	ENROUTE	PARKED	VehicleID TransferPortList
VehicleAcquireStarted	PARKED DEPOSITING	ACQUIRING ACQUIRING	VehicleID TransferPort CarrierID (If Multi-position vehicles) TransferPortList CarrierIDList
VehicleAcquireCompleted	ACQUIRING	PARKED	VehicleID TransferPort CarrierID (If Multi-position vehicles) TransferPortList CarrierIDList
VehicleAssigned	NOT ASSIGNED	ASSIGNED	VehicleID CommandID
VehicleDeparted	PARKED	ENROUTE	VehicleID TransferPortList
VehicleDepositStarted	PARKED ACQUIRING	DEPOSITING DEPOSITING	VehicleID TransferPort CarrierID (If Multi-position vehicles) TransferPortList CarrierIDList
VehicleDepositCompleted	DEPOSITING	PARKED	VehicleID TransferPort CarrierID (If Multi-position vehicles) TransferPortList CarrierIDList

<i>Collection Event Name</i>	<i>From State</i>	<i>To State</i>	<i>Required DVVALs</i>
VehicleInstalled	REMOVED	INSTALLED	VehicleID
VehicleRemoved	INSTALLED	REMOVED	VehicleID
VehicleUnassigned	ASSIGNED	NOT ASSIGNED	VehicleID CommandID
CARRIER STATE TRANSITION EVENTS			
CarrierInstalled	None	INSTALLED	VehicleID CarrierID CarrierLoc CommandID
CarrierRemoved	INSTALLED	None	VehicleID CarrierID CarrierLoc CommandID
PORT TRANSFER STATE TRANSITION EVENTS			
PortInService	None OUT OF SERVICE	IN SERVICE	PortID
PortOutOfService	None IN SERVICE	OUT OF SERVICE	PortID
PortTransferBlocked	Any	TRANSFER BLOCKED	PortID
PortReadyToLoad	Any	READY TO LOAD	PortID
PortReadyToUnload	Any	READY TO UNLOAD	PortID

8.3 Non-Transition Collection Event Table

Table 7 Non-Transition Collection Event Table

<i>Collection Event Name</i>	<i>Event Description</i>	<i>Required DVVALs</i>
CarrierIDRead	A carrier identification has been performed by the transport system. This event is not required for systems which do not support readers.	VehicleID CarrierID CarrierLoc IDReadStatus
OperatorInitiatedAction	The operator initiated an action from the Transport System Controller. The related State Transition Events defined in Table 6 shall be required after this 'OperatorInitiatedAction' event.	CommandID CommandType CarrierID SourcePort DestPort Priority
UnitStatusCleared	An Informational Status has been cleared on a 'transport unit'. This event is not required for compliance with the specification but shall be generated for every UnitStatusOccurred event that is generated with a UnitStatusClearable value of 'Y'.	UnitID, UnitStatusID, UnitStatusText, UnitLocation, VehicleState, VehicleLocation The Vehicle variables are only required if a vehicle based system is being implemented.
UnitStatusOccurred	An Informational Status occurred on a 'transport unit'. The supplier determines when and what 'status' information is to be supplied to the host. This event is not required for compliance with the specification.	UnitID, UnitStatusID, UnitStatusText, UnitStatusClearable, UnitLocation, VehicleState, VehicleLocation The Vehicle variables are only required if a vehicle based system is being implemented.

9 Variable Data Items

9.1 The purpose of this section is to define the list of variable data item requirements for IBSEM equipment. Values of these variables will be available to the host via collection event reports and host status queries.

9.2 Requirements

- All variable data items defined in GEM and data item restrictions defined in SEMI E30 are required on IBSEM equipment (according to the GEM capabilities required per § 13).
- All variable data items in the IBSEM Variable Data Item Dictionary for specific equipment classifications are required for IBSEM equipment. The data item restrictions are also required.
- Some SVs in the Variable Data Item Dictionary are referenced by an 'I' subscript (e.g., CarrierID_i). The 'i' subscript denotes a specific instance of the SV. This is necessary since there is usually more than one instance of such an SV active in the system at the same time (e.g., if there are 20 carriers active at the same time then 'i' could range from 1 to 20 for CarrierID_i). Variable Data Items containing the 'i' subscript should not have Variable IDs assigned to them.
- All variable data items with a format of ASCII (A) shall be limited to printable characters in the decimal range of 32 to 126 with the exception of the following non-permitted characters: '*' (decimal 42), '\' (decimal 92).

9.2.1 Variable data items are documented in the IBSEM Variable Data Item Dictionary using the following format:

Variable Name	Type	Description	Class	Format	Comment
---------------	------	-------------	-------	--------	---------

where:

- Variable Name: A unique name for the variable data item.
- Type: CV – meaning common variables, variables that are general to all vehicles; CSV – meaning configuration specific variables.
- Description: If class is DVVAL, then the description shall contain a statement of when data is valid in terms of IBSEM events.
- Class: The data type of the item.
- Format: < SECS Message Language (SML) mnemonic > acceptable formats are SEMI E5 lists, ASCII, floating point, unsigned integer or signed integer. A description of 'ANY' indicates that only the above formats are acceptable and is left to the supplier to decide.
- Comments: Any additional information pertinent to the variable name.

9.3 Variable Data Item Types

9.3.1 *Equipment Constants (ECV)* — The value can be changed by the host using S2F15. The operator may have the ability to change some or all of the values. The value of equipment constant may be queried at any time by the host using the S2F13/14 transaction or Stream 6 reports.

9.3.2 *Status Variables (SV)* — The values are valid at all times. A SV may not be changed by the host or operator, but may be changed by the equipment. A host or operator command may change an equipment status thus changing a SV. The value of status variables may be queried by the host at any time using the S1F3/4 or Stream 6 reports.

9.3.3 *Data Variables (DVVAL)* — These are variables which are valid upon the occurrence of a specific collection event, and may or may not be valid at other times depending upon the equipment. An attempt to read a variable data item when it's invalid will not result in an error, but the data reported may not have relevant meaning.

9.3.4 *Variable Data (V)* — This is a class of variable data which includes all the previously defined types of variables.

9.4 Variable Data Item Dictionary

Table 8 Variable Data Item Dictionary

Variable Name	Type	Description	Class	Format	Comment
ActiveCarriers	CV	List current status of all INSTALLED carriers.	SV	L,n 1. <CarrierInfo ₁ > . . n. <CarrierInfo _n >	
ActiveTransfers	CV	List current status of all ACTIVE TRANSFER commands.	SV	L,n 1. <TransferCommand ₁ > . . n. <TransferCommand _n >	
ActiveVehicles	CV	List current status of all vehicles available or being used for TRANSFER commands.	SV	L,n 1. <VehicleInfo ₁ > . . n. <VehicleInfo _n >	
CarrierID	CV	ID of the carrier being moved. CarrierID must be unique for each carrier within the TSC.	DVVAL	A[1–64]	If an Id is created by the equipment (not obtained via an id reader, the host interface, or the user interface) it must be of the following format: UNKNOWNEqNameSeq where: UNKNOWN are the exact characters 'UNKNOWN' EqName is the value of the EqName ECV (truncated if required) Seq is a unique sequence identifier determined by the vendor.
CarrierID _i	CV	ID of the i th carrier.	SV	A[1–64]	See comment for CarrierID.
CarrierIDList	CV	The Ids of the Carriers being moved.	DVVAL	L,n 1.<CarrierID ₁ > . . n.<CarrierID _n >	'n' is the number of carriers being simultaneously transferred.
CarrierInfo	CV	All database information associated with a particular carrier generating an event.	DVVAL	L,3 1. <CarrierID> 2. <VehicleID> 3. <CarrierLoc>	
CarrierInfo _i	CV	All database information associated with the i th carrier.	SV	L,3 1. <CarrierID _i > 2. <VehicleID _i > 3. <CarrierLoc _i >	