



Designation: D 6001 – 96 (Reapproved 2002)

Standard Guide for Direct-Push Water Sampling for Geoenvironmental Investigations¹

This standard is issued under the fixed designation D 6001; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This guide covers a review of methods for sampling ground water at discrete points or in increments by insertion of sampling devices by static force or impact without drilling and removal of cuttings. By directly pushing the sampler, the soil is displaced and helps to form an annular seal above the sampling zone. Direct-push water sampling can be one time, or multiple sampling events. Methods for obtaining water samples for water quality analysis and detection of contaminants are presented.

1.2 Direct-push methods of water sampling are used for ground-water quality studies. Water quality may vary at different depths below the surface depending on geohydrologic conditions. Incremental sampling or sampling at discrete depths is used to determine the distribution of contaminants and to more completely characterize geohydrologic environments. These investigations are frequently required in characterization of hazardous and toxic waste sites.

1.3 Direct-push methods can provide accurate information on the distribution of water quality if provisions are made to ensure that cross-contamination or linkage between water bearing strata are not made. Discrete point sampling with a sealed (protected) screen sampler, combined with on-site analysis of water samples, can provide the most accurate depiction of water quality conditions at the time of sampling. Direct-push water sampling with exposed-screen sampling devices may be useful and are considered as screening tools depending on precautions taken during testing. Exposed screen samplers may require development or purging depending on sampling and quality assurance plans. Results from direct-push investigations can be used to guide placement of permanent ground-water monitoring wells and direct remediation efforts. Multiple sampling events can be performed to depict conditions over time. Use of double tube tooling, where the outer

push tube seals the hole, prevents the sampling tools from coming in contact with the formation, except at the sampling point.

1.4 Field test methods described in this guide include installation of temporary well points, and insertion of water samplers using a variety of insertion methods. Insertion methods include: (1) soil probing using combinations of impact, percussion, or vibratory driving with or without additions of smooth static force; (2) smooth static force from the surface using hydraulic penetrometer or drilling equipment, and incremental drilling combined with direct-push water sampling events. Under typical incremental drilling operations, samplers are advanced with assistance of drilling equipment by smooth hydraulic push, or mechanical impacts from hammers or other vibratory equipment. Methods for borehole abandonment by grouting are also addressed.

1.5 Direct-push water sampling is limited to soils that can be penetrated with available equipment. In strong soils damage may result during insertion of the sampler from rod bending or assembly buckling. Penetration may be limited, or damage to samplers or rods can occur in certain ground conditions, some of which are discussed in 4.6. Information in this procedure is limited to sampling of saturated soils in perched or saturated ground-water conditions.

1.6 This guide does not address installation of permanent water sampling systems such as those presented in Practice D 5092.

1.7 Direct-push water sampling for geoenvironmental exploration will often involve safety planning, administration, and documentation.

1.8 *This guide does not purport to address all aspects of exploration and site safety. It is the responsibility of the user of this guide to establish appropriate safety and health practices and determine the applicability of regulatory limitations before its use.*

1.9 *This guide offers an organized collection of information or a series of options and does not recommend a specific course of action. This document cannot replace education or experience and should be used in conjunction with professional judgment. Not all aspects of this guide may be applicable in all*

¹ This guide is under the jurisdiction of ASTM Committee D18 on Soil and Rock and is the direct responsibility of Subcommittee D18.21 on Ground Water and Vadose Zone Investigations.

Current edition approved Aug. 10, 1996. Published January 1997.

circumstances. This ASTM standard is not intended to represent or replace the standard of care by which the adequacy of a given professional service must be judged, nor should this document be applied without consideration of a project's many unique aspects. The word "Standard" in the title of this document means only that the document has been approved through the ASTM consensus process.

2. Referenced Documents

2.1 ASTM Standards:

- D 653 Terminology Relating to Soil, Rock, and Contained Fluids²
 - D 2488 Practice for Description and Identification of Soils (Visual-Manual Procedure)²
 - D 3441 Test Method for Mechanical Cone Penetration Tests of Soil²
 - D 4448 Guide for Sampling Ground-Water Monitoring Wells³
 - D 4750 Test Method for Determining Subsurface Liquid Levels in a Borehole or Monitoring Well (Observation Well)²
 - D 5088 Practices for Decontamination of Field Equipment Used at Nonradioactive Waste Sites²
 - D 5092 Practice for Design and Installation of Ground Water Monitoring Wells in Aquifers²
 - D 5229 Practice for Decommissioning Monitoring Wells⁴
 - D 5254 Practice for Minimum Set of Data Elements to Identify a Ground-Water Site²
 - D 5314 Guide for Soil Gas Monitoring in the Vadose Zone²
 - D 5434 Guide for Field Logging of Subsurface Explorations of Soil and Rock²
 - D 5474 Guide for Selection of Data Elements for Ground-Water Investigation²
 - D 5521 Guide for Development of Ground-Water Monitoring Wells in Granular Aquifers²
 - D 5730 Guide for Site Characterization for Environmental Purposes With Emphasis on Soil, Rock, the Vadose Zone and Ground Water²
 - D 5778 Test Method for Performing Electronic Friction Cone and Piezocone Penetration Tests²
- ### 2.2 Drilling Methods:
- D 5781 Guide for the Use of Dual-Wall Reverse-Circulation Drilling for Geoenvironmental Exploration and the Installation of Subsurface Water-Quality Monitoring Devices⁴
 - D 5782 Guide for the Use of Direct Air-Rotary Drilling for Geoenvironmental Exploration and the Installation of Subsurface Water-Quality Monitoring Devices⁴
 - D 5783 Guide for the Use of Direct Rotary Drilling with Water-Based Drilling Fluid for Geoenvironmental Exploration and the Installation of Subsurface Water-Quality Monitoring Devices⁴
 - D 5784 Guide for the Use of Hollow-Stem Augers for Geoenvironmental Exploration and the Installation of Subsurface Water-Quality Monitoring Devices⁴

D 5875 Guide for the Use of Cable-Tool Drilling and Sampling Methods for Geoenvironmental Explorations and Installation of Subsurface Water-Quality Monitoring Devices⁴

D 5876 Guide for the Use of Direct Rotary Wireline Casing Advancement Drilling Methods for Geoenvironmental Exploration and the Installation of Subsurface Water-Quality Monitoring Devices⁴

2.3 Soil Sampling:

D 1586 Test Method for Penetration Test and Split-Barrel Sampling of Soils²

D 1587 Practice for Thin-Walled Tube Sampling of Soils for Geotechnical Purposes²

D 3550 Practice for Thick Wall, Ring-Lined, Split Barrel, Drive Sampling of Soils²

D 4700 Guide for Soil Sampling from the Vadose Zone²

3. Terminology

3.1 Terminology used within this guide is in accordance with Terminology D 653 with the addition of the following:

3.2 Definitions in accordance with Practice D 5092.

3.3 *bailer*—a hollow tubular receptacle used to facilitate removal of fluid from a well or borehole.

3.4 *borehole*—a circular open or uncased subsurface hole created by drilling.

3.5 *casing*—pipe, finished in sections with either threaded connections or beveled edges to be field welded, which is installed temporarily or permanently to counteract caving, to advance the borehole, or to isolate the interval being monitored, or combination thereof.

3.6 *caving; sloughing*—the inflow of unconsolidated material into a borehole that occurs when the borehole walls lose their cohesive strength.

3.7 *centralizer*—a device that helps in the centering of a casing or riser within a borehole or another casing.

3.8 *jetting*—when applied as a drilling method, water is forced down through the drill rods or riser pipe and out through the end openings. The jetting water then transports the generated cuttings to the ground surface in the annulus of the drill rods or casing and the borehole. The term jetting may also refer to a well development technique.

3.9 *PTFE tape*—joint sealing tape composed of polytetrafluoroethylene.

3.10 *well screen*—a filtering device used to retain the primary or natural filter pack; usually a cylindrical pipe with openings of uniform width, orientation, and spacing.

3.11 Definitions of Terms Specific to This Standard:

3.11.1 *assembly length*—length of sampler body and riser pipes.

3.11.2 *bentonite*—the common name for drilling fluid additives and well construction products consisting mostly of naturally occurring sodium montmorillonite. Some bentonite products have chemical additives that may affect water quality analyses (see 9.3.3).

3.11.3 *direct-push sampling*—sampling devices that are directly inserted into the soil to be sampled without drilling or borehole excavation.

² Annual Book of ASTM Standards, Vol 04.08.

³ Annual Book of ASTM Standards, Vol 11.04.

⁴ Annual Book of ASTM Standards, Vol 04.09.

3.11.4 *drill hole*—a cylindrical hole advanced into the subsurface by mechanical means; also, known as borehole or boring.

3.11.5 *effective screen length*—the length of a screen open or exposed to water bearing strata.

3.11.6 *effective seal length*—the length of soil above the well screen that is in intimate contact with the riser pipe and prevents connection of the well screen with ground water from other zones.

3.11.7 *grab sampling*—the process of collecting a sample of fluid exposed to atmospheric pressure through the riser pipe with bailers or other methods that may include pumping; also known as batch sampling.

3.11.8 *incremental drilling and sampling*—insertion method where rotary drilling and sampling events are alternated for incremental sampling. Incremental drilling is often needed to penetrate harder or deeper formations.

3.11.9 *in situ testing devices*—sensors or samplers, used for obtaining mechanical or chemical test data, that are typically pushed, rotated, or driven from the surface or below the bottom of a borehole following completion of an increment of drilling.

3.11.10 *intermittent sampling devices*—usually barrel-type samplers driven or pushed below the bottom of a borehole following completion of an increment of drilling.

3.11.11 *percussion driving*—insertion method where rapid hammer impacts are performed to insert the sampling device. The percussion is normally accompanied with application of static down force.

3.11.12 *push depth*—the depth below a ground surface datum that the end or tip of the direct-push water sampling device is inserted.

4. Summary of Guide

4.1 Direct-push water sampling consists of pushing a protected well screen to a known depth, opening the well screen over a known interval, and sampling water from the interval. A well point with an exposed screen can also be pushed with understanding of potential cross-contamination effects and purging requirements considered. A sampler with constant outside diameter is inserted directly into the soil by hydraulic jacking or hammering until sufficient riser pipe is seated into the soil to ensure a seal. Protected well screens can be exposed by retraction of riser pipes. While the riser is seated in the soil, water samples can be taken, and water injection or pressure measurements may be performed.

5. Significance and Use

5.1 Direct-push water sampling is an economical method for obtaining discrete ground-water samples without the expense of permanent monitoring well installation (1–4).⁵ This guide can be used to profile potential ground-water contamination with depth by performing repetitive sampling events. Soils to be sampled must be permeable to allow filling of the sample in a relatively short time. The zone to be sampled can be isolated by matching well screen length to obtain discrete

samples of thin aquifers. Use of these sampling techniques will result in more detailed site characterization of sites containing multiple aquifers. By inserting a protected sampling screen in direct contact with soil and with watertight risers, initial well development (Guide D 5521) and purging of wells may not be required for the first sampling event. Discrete water sampling, combined with knowledge of location and thickness of target aquifers, may better define conditions in thin multiple aquifers than monitoring wells with screened intervals that can intersect and allow for intercommunication of multiple aquifers (2,4,5,7,8,11). Direct-push sampling performed without knowledge of the location and thickness of target aquifers can result in sampling of the wrong aquifer or penetration through confining beds.

5.2 For sites that allow surface push of the sampling device, discrete water sampling is often performed in conjunction with the cone penetration test (Test Method D 5778) (2–9), which is often used for stratigraphic mapping of aquifers, and to delineate high-permeability zones. In such cases, direct-push water sampling is normally performed close to cone holes. In complex alluvial environments, thin aquifers may vary in continuity such that water sampling devices may not intersect the same layer at equivalent depths as companion cone penetrometer holes.

5.3 Water sampling chambers may be sealed to maintain in situ pressures and to allow for pressure measurements and permeability testing (4,7,10). Sealing of samples under pressure may reduce the possible volatilization of some organic compounds. Field comparisons may be used to evaluate any systematic errors in sampling equipments and methods. Comparison studies may include the need for pressurizing samples, or the use of vacuum to extract fluids more rapidly from low hydraulic conductivity soils (8.1.5.3).

5.4 Degradation of water samples during handling and transport can be reduced if discrete water sampling events with protected screen samplers are combined with real time field analysis of potential contaminants. In limited studies, researchers have found that the combination of discrete protected screen sampling with onsite field analytical testing provide accurate data of aquifer water quality conditions at the time of testing (2,4). Direct-push water sampling with exposed screen sampling devices, which may require development or purging, are considered as screening tools depending on precautions that are taken during testing.

5.5 A well screen may be pushed into undisturbed soils at the base of a drill hole and backfilled to make permanent installed monitoring wells. Procedures to complete direct-push wells as permanent installations are similar to those given in Practice D 5092. These procedures allow for permanent sealing of riser pipe in the borehole. Some state or local regulations may not allow for certain types of direct-push installations as permanent monitoring wells depending on the application. Sometimes, where temporary well screens are inserted at the top of the ground water table, sealing an annulus may not be necessary.

5.6 In difficult driving conditions, penetrating to the required depth to ensure sealing of the sampler well screen may not be possible. If the well screen cannot be inserted into the

⁵ The boldface numbers in parentheses refer to a list of references at the end of this guide.



soil with an adequate seal, the water-sampling event would require sealing in accordance with Practice D 5092 to isolate the required aquifer. Selection of the appropriate equipment and methods to reach required depth at the site of concern should be made in consultation with experienced operators or manufacturers. If there is no information as to the subsurface conditions, initial explorations consisting of penetration-resistance tests, such as Test Method D 1586, or actual direct-push testing trials can be performed to select the appropriate testing system.

5.6.1 Typical penetration depths for a specific equipment configuration depend on many variables. Some of the variables are the driving system, the diameter of the sampler and riser pipes, and the resistance of the materials.

5.6.2 Certain subsurface conditions may prevent sampler insertion. Penetration is not possible in hard rock and usually not possible in softer rocks such as claystones and shales. Coarse particles such as gravels, cobbles, and boulders may be difficult to penetrate or cause damage to the sampler or riser pipes. Cemented soil zones may be difficult to penetrate depending on the strength and thickness of the layers. If layers are present that prevent direct push from the surface, the rotary or percussion drilling methods (Guides D 5781, D 5782, D 5783, and D 5784, D 5785, D 5786, and see 2.2) can be employed to advance a boring through impeding layers to reach testing zones.

5.6.3 Driving systems are generally selected based on required testing depths and the materials to be penetrated. For systems using primarily static reaction force to insert the sampler, depth will be limited by the reaction weight of the equipment and penetration resistance of the material. The ability to pull back the rod string is also a consideration. Impact or percussion soil probing has an advantage of reducing the reaction weight required for penetration. Penetration capability in clays may be increased by reducing rod friction by enlarging tips or friction reducers. However, over reaming of the hole may increase the possibility of rod buckling and may allow for communication of differing ground-water tables. Hand-held equipment is generally used on very shallow investigations, typically less than 5-m depth, but depths on the order of 10^1 m have been reached in very soft lacustrine clays. Intermediate size driving systems, such as small truck-mounted hydraulic-powered push and impact drivers, typically work within depth ranges from 5 to 30 m, but can reach depths on the order of 10^2 m. Heavy static-push cone penetrometer vehicles, such as 20-ton trucks, typically work within depth ranges from 15 to 45 m, and also reach depth ranges on the order of 10^2 m in soft ground conditions. Drilling methods (Guides D 5781, D 5782, D 5783, D 5784, D 5785, D 5786, and also see 2.2) using drilling and incremental sampling are frequently used in all depth ranges and can be used to reach depths on the order of 10^3 m.

NOTE 1—Users and manufacturers cannot agree on depth ranges for different soil types. Users should consult with experienced producers and manufacturers to determine depth capability for their site conditions.

5.7 Combining multiple-sampling events in a single-sample chamber without decontamination (Practices D 5088) is generally unacceptable. In this application, purging of the chamber

should be performed to ensure isolation of the sampling event. Purging should be performed by removing several volumes of fluid until new chemical properties have been stabilized or elements are flushed with fluid of known chemistry. Purging requirements may depend upon the materials used in the sampler and the sampler design.

6. Apparatus

6.1 *General*—A direct-push sampling system consists of a tip; well screen; chambers, if present; and riser pipes extending to the surface. Direct-push water sampling equipment can be grouped into two classes, either with a sealed protected screen or exposed screen. Samplers with sealed screens depend on the seal to avoid exposure of the sampling interval to soil or water from other layers. They can be considered as accurate point-source detectors. They are normally decontaminated between sampling events. Exposed-screen samplers may require purging and development and as such are considered as screening devices for profiling relative degrees of contamination.

6.1.1 *Exposed-Screen Samplers*—Some direct-push samplers may consist of a simple exposed well screen and riser pipe that allows grab sampling with bailers or pumps. An example of this arrangement is the simple push or well point shown in Fig. 1. (12). The practice of jetting well points is often not acceptable due to the large quantities of water used for insertion and the resulting potential for disturbance and dilution in the aquifer. If water is used for insertion, knowing the chemical constituents in the water may be necessary. Bias may be possible if an exposed-screen sampler is pushed through multiple contaminated layers. If exposed-screen well points are pushed through predrilled holes the screen and riser may fill with water present in the drill hole and require purging before sampling.

6.1.1.1 Another form of an exposed-screen sampler has been incorporated into cone penetrometer bodies (6). The cone penetrometers have sample chambers with measurement devices such as temperature and conductivity. Some cone penetrometers have been equipped with pumps for drawing in water samples into sample chambers or to the surface. Samplers equipped with chambers and subjected to multiple sampling events may require purging between sampling events. Although several of these designs have been proposed, they have not been successful in production practice. This is because of lengthy and time consuming purging requirements. In most cases, purging requirements and the depths of testing may be such that single-sampling events without cone penetrometers may be more economical than multiple-sampling events requiring purging.

6.1.2 *Sealed-Screen Samplers*—Protected well screen and simple riser pipes for grab sampling are also deployed. An example is shown in Fig. 2 (13). This simple well screen arrangement allows for grab sampling through the riser pipe without purging or development if there is no leakage at the screen seals and riser pipes. Fig. 3 shows a schematic of a direct-push water sampler with a protected screen and with the ability to work in the grab sampling mode or by allowing water to enter a sample chamber in the sampler body (1). Most simple sample chambers allow for flow through the chamber. When flow through chambered samplers is required, it

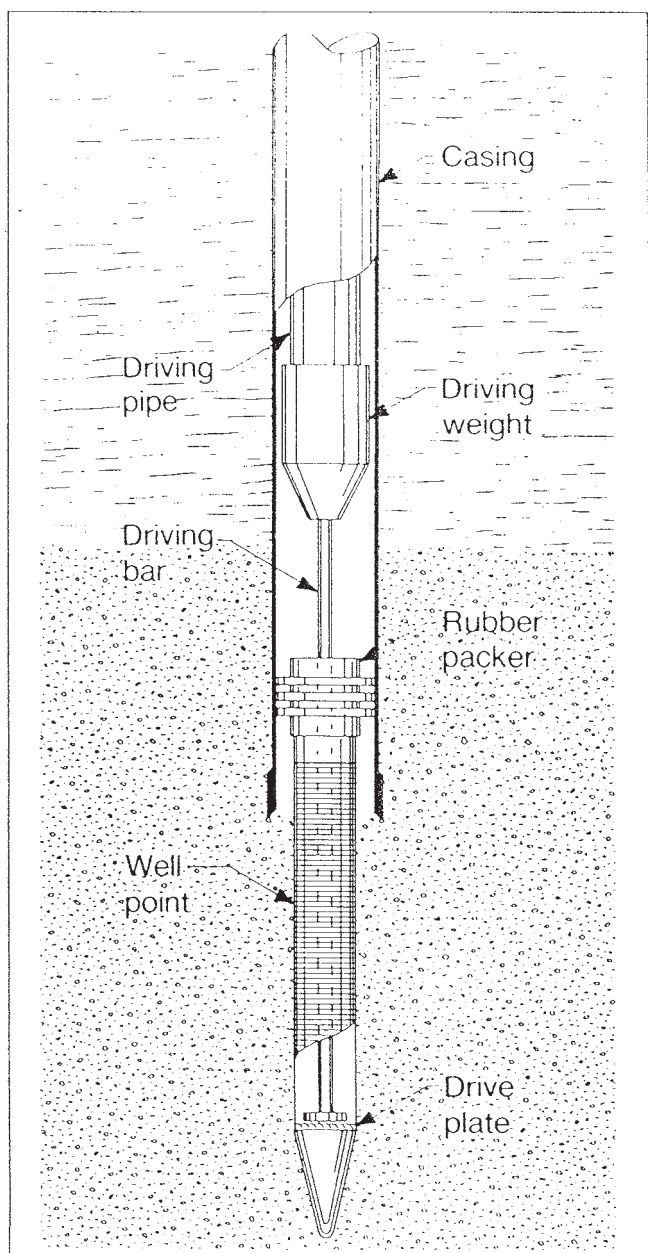


FIG. 1 Exposed-Screen Sampler—Well Point Driven Below the Base of a Borehole (12)

possible that the ground water from the test interval can fill into the rods above the chamber. In those cases, it may be advisable to add water of known chemistry into the rods prior to opening the screen. Some protected-screen samplers have sample chambers designed to reduce volume and pressure changes in the sample to avoid possible volatilization of volatile compounds (4,7,10). The need for pressurization is dependent on the requirements of the investigation program and should be evaluated by comparison studies in the field with simpler systems allowing the sample to equalize at atmospheric pressure. There are different approaches to pressurizing the sample chamber including use of inert gas pressure or using sealed systems. An example of a sealed vial-septum system is shown in Fig. 4 (4). In the sealed vial system, a septum is punctured

with a hypodermic needle connected to a sealed vial. With this approach the vial will contain both a liquid and gas at aquifer pressure. The sealed vial-septum system has been used in an exposed-screen mode.

6.1.3 Materials of Manufacture—The choice of materials used in the construction of direct-push water sampling devices should be based on the knowledge of the geochemical environment to be sampled and how the materials may interact with the sample by means of physical, chemical, or biological processes. Due to the nature of insertion of these devices, the sampler body is typically comprised of steel, stainless steel, or metals of other alloys. The type of metal should be selected based on possible interaction effects with the fluid to be sampled. Well-screen materials can be selected from a variety of materials. Materials commonly used for well-screen elements include steel, stainless steel, rigid polyvinyl chloride (PVC), polytetrafluorethylene (PTFE), polyethylene (PE), polypropylene (PP), and brass. Sample chambers, pumps, and connector lines are also constructed with a variety of materials. Evaluating the possible interaction of materials that will be exposed to the water during the sampling event is important.

6.2 Sampler Body—The sampler body consists of a tip, and a barrel that consists of well screen, a protective sleeve if used, and a sampling chamber if used, with a connector assembly to attach to riser pipes. The sampler is normally constructed of steel to withstand insertion forces. The sampler barrel should be of constant outside diameter to ensure intimate contact with the soil to be tested. Protective sleeves shall be equipped with O-rings to prevent the ingress of water before the sampling event.

6.2.1 Expendable Sampler Tips—Some sampler tips are expendable and are left in the ground after the sampling event. The tip should be equipped with an O-ring seal to the sampler sleeve to prevent leakage into the riser pipe until the sampling depth is reached.

6.2.1.1 Sampler tips are designed so that upon pull back of the sampler body and riser pipe, the tip is disconnected from the sampler. The required diameter, and the ability to expend the tip successfully, depends on the soils to be penetrated. The tip diameter can be set equal to, or slightly less than, the sampler body. If there are problems with tip retraction, tips can be designed with a diameter of 1 to 3 mm ($\frac{1}{8}$ to $\frac{1}{16}$ in.) larger than the sampler body. The use of an enlarged diameter with a larger shoulder or tip may help in reaching greater depths because it acts as a friction reducer. An enlarged tip should not leave too large an annulus above the sampler body and riser pipes as to maintain a seal above the well screen and to prevent potential cross contamination.

6.2.1.2 Most sampler tips are made of steel to withstand pushing forces. With some samplers, after the sampling event, the tip may remain in the ground and the hole may be grouted. The user should consider if leaving the tips below the ground will adversely affect surrounding ground-water chemistry depending on site conditions.

6.2.2 Well Screen—Many materials for well screens are available for direct-push samplers. The material of manufacture should be selected with consideration of chemical composition of the ground water to be sampled and possible