


Basic Concepts in Sterilization Processes Verification, Validation, And Qualification

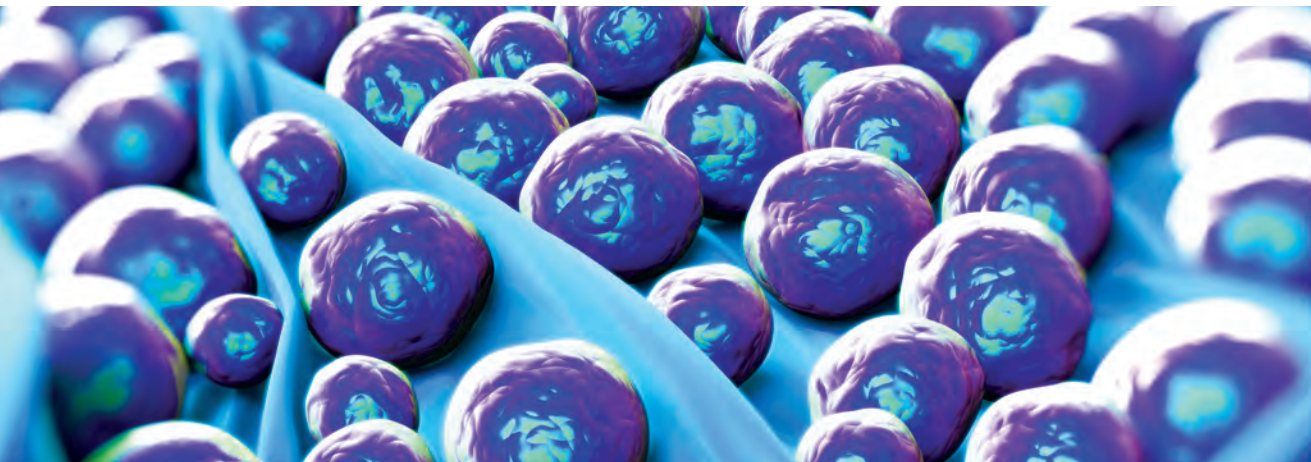

Donna Swenson

Basic Concepts in Sterilization Processes Verification, Validation, And Qualification

Donna Swenson

This publication is intended to be a helpful information resource,
and reflects the expert advice and views of the author.
It is not to be construed as an interpretation of AAMI standards,
nor does it constitute legal or regulatory advice.

Published by

Association for the Advancement of Medical Instrumentation
4301 N. Fairfax Drive, Suite 301
Arlington, VA 22203-1633
www.aami.org

© 2014 by the Association for the Advancement of Medical Instrumentation

All Rights Reserved

Publication, reproduction, photocopying, storage, or transmission, electronically or otherwise, of all or any part of this document without the prior written permission of the Association for the Advancement of Medical Instrumentation is strictly prohibited by law. It is illegal under federal law (17 U.S.C. § 101, *et seq.*) to make copies of all or any part of this document (whether internally or externally) without the prior written permission of the Association for the Advancement of Medical Instrumentation. Violators risk legal action, including civil and criminal penalties, and damages of \$100,000 per offense. For permission regarding the use of all or any part of this document, complete the reprint request form at www.aami.org or contact AAMI at 4301 N. Fairfax Drive, Suite 301, Arlington, VA 22203-1633. Phone: +1-703-525-4890; Fax: +1-703-525-1067.

Printed in the United States of America

ISBN 1-57020-521-3

Table of Contents

	<i>Page</i>
Foreword	vii
Preface	ix
Acknowledgments	xi
Chapter 1. Introduction	1
Chapter 2. Definitions and Abbreviations	3
Chapter 3. The Science of Sterilization	7
Introduction	7
Types of Microorganisms	7
Microbial Growth	10
Bioburden	11
Microbial Resistance	11
Microbial Lethality	12
Microbial Control	14
Chapter 4. The Quality Management System	21
Introduction	21
Management Responsibility	21
Documentation Requirements	22
Product Realization	22
Quality Audits	23
Change Control	24
New Products	24
Chapter 5. Process Validation and Verification Concepts	27
Introduction	27
Why and When to Conduct Validation Testing	28
Validation Plans	29
Types of Validation	32
Statistical Process Control	34
Product Design	35

Chapter 5. (continued)	
Process Design	38
Installation Qualification	40
Operational Qualification	44
Performance Qualification	45
Process Control	47
Chapter 6. Cleaning Validation and Verification	49
Introduction.	49
Selection of Cleaning Method	49
Cleaning Process Validation.	51
Cleaning Process Verification	57
Chapter 7. Saturated Steam Sterilization Validation	63
Introduction.	63
Product Design	64
Process Design	70
Installation Qualification	76
Operational Qualification	79
Performance Qualification	84
Chapter 8. Product Quality Assurance Testing for Steam Sterilization in Healthcare Facilities.	93
Introduction.	93
Use of Normal Production Cycles	94
Identification of Product Families and Master Products	94
Use of Chemical and Biological Indicators	95
Placement of Master Products	95
Load Configuration	96
Drying Time and Cooling.	96
Test Results	96
Frequency of Testing.	97
Chapter 9. Steam Sterilization Process Verification in Healthcare Facilities.	99
Introduction.	99
Maintenance	100
Routine Monitoring	100
Product Release.	101
Qualification Testing.	102
Bibliography	103
Cited References	103
Other Resources	105
Annexes	
A Sample Protocol for Operational Qualification of a Sterilizer	109
B Sample Outline of a Cleaning Process Validation Protocol.	111
C Example of Sterilization Instructions for a Medical Device.	113

Figures

1	Comparison of Bioburden to Exposure Time	11
2	Microbial Lethality Measures	13
3	Example of an Audit Form	25
4	Sample Outline of a Validation Master Plan	31
5	Sample Outline of a Validation Protocol	32
6	Sample Installation Drawing Showing Minimum Service Clearance.	41
7	Control Chart for Cannula Inner Diameter	48
8	Manual Cleaning	51
9	Visual Inspection of an Instrument	57
10	Visual Inspection of an Instrument with Magnification Shown on a Computer Screen . . .	58
11	Various Types of Sterilization Packaging	69
12	General Instruments Product Family	71
13	Complex Orthopedics Product Family	71
14	Implant Trays Product Family	72
15	Sample Checklist for Installation of a Steam Sterilizer	77
16	Sample Checklist of Service and Utility Requirements for a Medium-Size Healthcare Steam Sterilizer.	78
17	Diagram of Data Logger Placement for Empty-Chamber Heat Distribution Study.	82
18	Sample Positions of Master Products in a PQ Test Load	90
19	Example of a Worst-Case Load Configuration for Validation Testing.	91
20	Example of a Worst-Case Load Configuration for Validation Testing.	91

Tables

1	Exponential Growth of Unicellular Organisms	10
2	Sterility Assurance Level/Spore Log Reduction	12
3	Additional Reprocessing Criteria and Issues	37
4	Sample Service/Utility Requirements for an Installation Qualification	42
5	Residue Detection Methods	53
6	Acceptance Criteria	54
7	In-Use Tests Available to Assess Efficacy of Cleaning of Medical Devices	55
8	In-Use Tests Available to Assess Efficacy of Washer-Disinfectors Used for Medical Device Reprocessing.	56
9	IES-Recommended Illuminance Levels for Work Environments	59
10	Sample Product Density Calculations	66
11	Time and Temperature Parameters for Gravity-Displacement Steam Sterilization Cycles in Health Care Facilities	73
12	Minimum Cycle Times for Dynamic-Air-Removal Steam Sterilization Cycles	73
13	Steam Quality Requirements for Sterilization	80
14	Contaminants in Condensate Measured at the Steam Inlet to the Sterilizer to be Considered in Relationship to the Corrosion of Materials	80
15	Contaminants in Condensate from Steam Used by the Sterilizer to be Considered in Relation to Contamination of the Load.	81
16	Operational Qualification Performance Tests.	84
17	Terminal Sterilization Process Development	86
18	Considerations for Placement of BIs and CIs in Master Products	89



Foreword

Modern medicine as we know it would never have existed without the advent of disinfection and sterilization. Through the early 19th century, the inside of the living human body was the doctor's equivalent to those areas on old maps marked "Here there be dragons"—it was dangerous territory to be avoided whenever possible. Voluntary surgery was largely limited to minimally invasive procedures such as blood-letting, tooth extraction, and removing kidney stones by dilating the urethra. Invasive surgery's high rate of mortality, which resulted from both infections and the rudimentary nature of surgical technique, made such procedures a tool of last resort.

Medical pioneers like Louis Pasteur and Edward Jenner changed this. Not only did they establish the causal connection between microbes and infections, they created methods and technologies to control the former and thereby prevent the latter. With the introduction of these practices, the interior body cavity was no longer terra incognita for doctors. Physicians were able to surgically treat conditions previously considered death sentences; surgery became safer, medical knowledge flourished, and surgical technique advanced. Since the first successful appendectomy in 1884, surgery has progressed to the point where robots are now used to repair the heart, and what were formerly major surgeries have become outpatient procedures.

Key to this battle against surgical infections has been the role played by those who reprocess the medical instruments used in surgery. Since the invention of the autoclave in 1879, steam sterilization has been the primary choice for treating heat-resistant surgical instruments, like those made of metal or glass. Instruments that could not withstand the high temperatures or humidity of steam sterilization were treated using dry heat or by a variety of chemical sterilants or disinfectants. When devices were properly cleaned and disinfected or sterilized, post-surgical infections arising from device contamination were extraordinarily rare—and where post-surgical infections did occur, they could be easily treated using 20th century antibiotics.

This almost 150 years of unbroken success in fighting and preventing infections, however, is being challenged. The appearance of antibiotic-resistant bacteria, like methicillin-resistant *Staphylococcus aureus* and carbapenem-resistant *Enterobacteriaceae*, means that hospital-acquired infections can be more dangerous and harder to treat. The increased complexity of new medical instruments—such as endoscopes and those used in robot-assisted surgery—and the incorporation of delicate materials and sensitive electronics into devices, are making the work of reprocessing personnel similarly more complicated and demanding.

Dealing with these challenges will require that those involved in reprocessing—both device manufacturers and sterile processing personnel—have deeper knowledge of the science and practices that underlie reprocessing. For sterile processing personnel, it is not enough to know how to load and run a sterilizer or how to follow manufacturer’s instructions. Today, they need to understand how cleaning, disinfection, and sterilization processes are developed and validated, and they should possess at least a basic understanding of the microbiology, chemistry, and physics behind those processes. Similarly, medical device designers and manufacturers can no longer wait until a device is ready to go to market to figure out how it will be reprocessed. They need this knowledge in advance so that sterilization requirements can be appropriately addressed as part of device design, ensuring that reprocessing the devices they create in the future will be simpler, safer, and more effective.

In this textbook, Donna Swenson distills what she has learned through her education and long career in both industrial and health care sterilization, as well as through her work developing sterilization standards in the U.S. and internationally. It introduces the reader to the basic principles of disinfection and sterilization science and then shows how this science is applied to develop and validate cleaning, disinfection, and sterilization processes. By providing the reader with a good understanding of the esoteric domain of sterilization science and engineering, it is hoped that the quality and efficacy of medical devices can be improved and that patient safety may be advanced.

Joe Lewelling, vice president of standards and emerging technology,
AAMI secretary of ISO/TC 198, Sterilization of health care products
February 2014

Preface

Several years ago, I was speaking with some of my colleagues at an AAMI Sterilization Standards Committee meeting. One of the things that we discussed was how confusing the principles of sterilization verification, validation, and qualification are to many of the people who work in the sterile processing and medical device manufacturing fields. This knowledge seems to be the private domain of sterilization engineers, who appear to possess an almost esoteric knowledge of verification, validation, and qualification of sterilization processes. However, many other people are involved in sterilization, and they need to understand these principles as well. During the course of this conversation, one of my colleagues mentioned that someone needs to write a book that would explain in plain English what sterilization verification, validation, and qualification mean and how they are performed. After the conversation, everyone moved on to other things.

But, this conversation got me thinking. Over the next several months, I kept thinking about that comment that someone needs to write a book. The more I thought about it, the more I agreed that someone *did* need to write a book. I approached Joe Lewelling, AAMI's vice president of standards, and asked him whether AAMI would publish such a book. That conversation led, in turn, to a conversation with Steve Campbell, chief operating officer for AAMI. Steve and I agreed that this was a worthwhile project. In May 2011, Steve and I signed a publishing agreement and thus I began a journey that led to the publication of this book.

This book is about the principles on which sterilization verification, validation, and qualification are based. To facilitate understanding of those principles, I begin with basic information about the science behind sterilization and quality management. Next, the book covers the principles of validation and then how those principles apply to cleaning processes, the validation of steam sterilization processes, and product quality assurance testing of steam sterilization processes. Verification of cleaning and steam sterilization processes is also addressed.

This book is written as a textbook. It is meant to provide an explanation of the basic concepts of verification, validation, and qualification of sterilization processes for both healthcare facilities and medical device manufacturers. The intent of the book is to help sterile processing and medical device manufacturing personnel be on the "same page" and to be able to use the same language and concepts in discussing and understanding sterilization processes. I also expect that this book will help different groups understand each other's needs. I believe that with the help of the many reviewers and the editor, I have accomplished these goals. I am hopeful that with improved understanding of each group's requirements, we will be able to obtain medical devices that meet the needs of all involved parties: the patient, the user of the device, and the reprocessor of the device.



Acknowledgments

Many people have helped bring this book to publication. I would first like to thank my husband, Charles (Chuck) Swenson. Without Chuck, I would never have become the person capable of writing this book. I remember that he used to introduce me to people as “Donna, my A student, my wife.” In his eyes, I was and still am, first and foremost, Donna, the person he helped to become an expert on the sterilization of medical devices. Thanks for all the years of support.

Next, I would like to thank several people at AAMI. Joe Lewelling believed in me and in the importance of this book. Without his support, this book would never have been begun. I also want to thank Steve Campbell, who has worked with me for more than two years to make this book a reality. Steve listened when I said that I needed more reviewers, and he made it happen. I want to thank Judy Veale as well, who formerly participated in AAMI standards-development activities and who continues to work on various AAMI projects. This book has been one of those projects. Judy’s skills as an editor have been invaluable. She has been insightful, has offered many suggestions, and has helped to clarify many points by asking questions.

Many people reviewed this book and helped make it into a better product that answers the questions that sterile processing and medical device manufacturing personnel have about sterilization verification, validation, and qualification. I don’t know their names, but I am thankful for their contributions and for the time they all committed to reviewing the original and subsequent drafts of the book. Their comments helped to strengthen the book and to ensure that I actually did achieve the goals that I sent out to accomplish in its writing.

Finally, I want to thank the Publications team and everyone at AAMI who had a hand in making this happen. I know that it was a group decision to agree to publish the book and to continue to support the project over the more than two years that it has taken to write the book. The team would like to thank numerous contributors to the project, including Jonathan Wilder, for their assistance at various stages of the publication process.

Donna Swenson



CHAPTER 1

Introduction

Healthcare sterile processing and medical device manufacturing professionals of today need a comprehensive understanding of sterilization processes and how to produce sterile product. Device manufacturers are required to provide information to the Food and Drug Administration (FDA) on how they will address the manufacturing of all products and how reusable products are to be cleaned and sterilized by the end user or sterile processing professional. For device manufacturers to fulfill this obligation, an understanding of the cleaning and sterilization processes used in health care is required. Sterile processing professionals must ensure that

- a) their sterilization processes meet quality assurance standards;
- b) they are adhering to these processes;
- c) the methods used for the products that they process are verified; and
- d) the processes used for the sterile products they create are validated.

This book is intended to be used as a textbook by medical device manufacturers, healthcare sterile processing professionals, and students of sterilization. It explains concepts and provides examples and definitions for sterilization science, quality management, validation theory, and cleaning and sterilization practices, focusing on steam sterilization as a model process for hospital application and on product quality assurance testing methods used in U.S. hospitals.



CHAPTER 2

Definitions and Abbreviations

Definitions

Acceptable quality level (AQL)¹ For a continued series of lots, the quality level that for the purpose of sampling inspection is the limit of a satisfactory process average.

NOTE: AQL defines a producer's protection level in the sense that a lot at the stated AQL has a high probability of acceptance and, therefore, a low probability of rejection.

Acellular infectious agent Acellular microorganism capable of causing disease.

Acellular microorganism Microscopic organism that does not have any cells and must partner with a living cell in order to live and grow. Examples include viruses, viroids, prions, and plasmids.

Attribute data Data representing an individual characteristic that either exists or does not exist.

Bacilli Bacteria that are rod- or stick-shaped. Bacilli are usually spore-forming and aerobic (require oxygen to live and multiply).

Bacteria Prokaryotic round, spiral, or rod-shaped single-celled microorganisms.

Bioburden² Population of viable microorganisms on a product and/or a sterile barrier system.

NOTE: When measured, bioburden is expressed as the total count of bacterial and fungal colony-forming units (CFUs) per single item.

Calibration³ Set of operations that, under specified conditions, in a first step, establishes a relation between the quantity values with measurement uncertainties provided by measurement standards and corresponding indications with associated measurement uncertainties and, in a second step, uses this information to establish a relation for obtaining a measurement result from an indication. Calibration should not be mistaken with adjustment of a measuring system nor with verification of calibration. Often the first step alone in the above definition is perceived as being calibration.

Change control Systematic approach to ensuring that a process change is implemented in a controlled manner.

Cocci Bacteria having a spherical or near-spherical shape.

Colony-forming unit (CFU) An individual colony of bacteria or fungi. In microbiology, the number of colony-forming units is an estimate of the number of viable bacteria or fungi.

Concurrent validation Validation study conducted as part of routine production of a product.

Data logger Electronic device that records information (data), usually at specified time intervals.

Decimal reduction value (D value)² Time or dose required to achieve inactivation of 90% of a population of the test microorganism under stated conditions.

NOTE: The larger the D value, the more resistant the microorganism is to destruction. The value can be derived by plotting the logarithm of the number of microbial survivors against sterilization exposure time; the time corresponding to a 1-logarithm reduction in numbers can then be directly measured.

Design history file (DHF)⁴ Compilation of records which describes the design history of a finished device.

NOTE: Each time that a device design is changed, the change needs to be documented in the design history file.

Design qualification (DQ)⁵ Verification that the proposed specification for the facility, equipment, or system is suitable for the intended use.

Device master record (DMR)⁴ Compilation of records containing the procedures and specifications for a finished device.

NOTE: The DMR contains all the information needed to manufacture a specific device to company specifications.

Disinfection² Process that kills pathogenic and other microorganisms by physical or chemical means.

NOTE: Disinfection destroys most recognized pathogenic microorganisms but not necessarily all microbial forms, such as bacterial spores. Disinfection processes do not ensure the margin of safety associated with sterilization processes.

Eucaryotic microorganisms Organisms consisting of cells that each contain a distinct nucleus within which the genetic material is contained.

Exponential Increase or decrease in number or exponent at a constantly growing rate; raising or lowering a number by a specified power. The increase or decrease will become steeper or shallower the higher the power to which the exponent is raised.

F₀ value⁶ Microbiological lethality of a sterilization process expressed in terms of the equivalent time, in minutes, at a temperature of 121.1°C with reference to microorganisms with a z value of 10°C.

Factory acceptance test (FAT) Testing of new equipment that was performed by the manufacturer of the equipment before shipping the equipment to the customer. This testing is intended to ensure that the machine is performing as designed before release to a customer.

Fault condition Situation in which one or more of the process parameters lie outside its/their specified tolerance.

Fungi Single- or multi-celled plants that do not contain chlorophyll and that live by decomposing and digesting the organic material on which they grow. Examples include yeast and mold.

Installation qualification (IQ)⁵ Process of obtaining and documenting evidence that equipment has been provided and installed in accordance with its specification.

LD50 Dose of a specific chemical administered by a specific route that is lethal to 50% of an animal population.

Limit of detection (LOD) Lowest amount of a substance that can be detected by a specific test method.

Limit of quantitation (LOQ) Lowest amount of a substance that can be quantified by a specific test method.

Lowest therapeutic dose (LTD) Lowest amount of a therapeutic agent that causes the desired therapeutic effect to occur.

Management representative Member of management who is responsible for ensuring that a company's quality system is implemented and adhered to. This person is usually the liaison between the company and regulatory agencies.

Management review Periodic review of a quality system to ensure that the system is suitable and effective.

NOTE 1: According to the FDA,⁴ "Management with executive responsibility shall review the suitability and effectiveness of the quality system at defined intervals and with sufficient frequency according to established procedures to ensure that the quality system satisfies the requirements of this part and the manufacturer's established quality policy and objectives. The dates and results of quality system reviews shall be documented."

NOTE 2: It is generally recommended that management reviews be conducted at least annually.

Master product² (Sterilization) product designated as representative of all members of a product family. This product has the most difficult-to-sterilize attributes of any member of the family.

Maximum allowable carry over (MACO) Maximum amount of a specific chemical residual that is acceptable to still be present on a device after completion of a process.

Operational qualification (OQ)⁵ Process of obtaining and documenting evidence that installed equipment operates within predetermined limits when used in accordance with its operational procedures.

Organelle Specialized subunit within a cell that performs a specific function within the cell. Examples include mitochondria, vacuoles, and chloroplasts.

Pathogen Disease-producing agent capable of producing illness or disease in a host organism.

Performance qualification (PQ)⁵ Process of obtaining and documenting evidence that the equipment, as installed and operated in accordance with operational procedures, consistently performs in accordance with predetermined criteria and thereby yields product meeting its specification.

Prions⁷ Transmissible pathogenic agents that cause a variety of neurodegenerative diseases of humans and animals, including scrapie in sheep and goats, bovine spongiform encephalopathy (BSE) in cattle, and Creutzfeldt-Jakob disease (CJD) in humans. They are unlike any other infectious pathogens, including viruses, because they are composed of an abnormal conformational isoform of a normal cellular protein, the prion protein (PrP). Prion diseases are disorders of protein configuration involving template-assisted replication and resulting in abnormal protein accumulation in the brain, which causes neuronal dysfunction, degeneration, and death. Prions are extremely resistant to inactivation by heat and disinfecting agents.

Prokaryotic microorganisms Group of organisms that lacks a true nucleus with a membrane and other membrane-bound organelles. Examples include bacteria.

Process challenge device⁵ Item designed to constitute a defined resistance to a sterilization process and used to assess performance of the process.

Process parameter⁵ Specified value for a process variable.

NOTE: The specification for a sterilization process includes the process parameters and their tolerances.

Product family² (Sterilization) group or subgroup of product that is characterized by similar attributes, such as mass, material, construction, set weight, shapes, lumens, and packaging system, and that presents a similar challenge to the sterilization process.

NOTE: In grouping products by construction, it is necessary to consider size and/or surface area, surface finish or texture, and the presence of any cannulations, lumens, or mated surfaces.

Product quality assurance (PQA) testing Quality assurance testing of routinely processed items representing a product family intended to verify that the process being used by a particular facility on a particular product family is working as specified.

Prospective validation Validation study conducted before the product is entered into routine production.

Protozoa Single-celled, usually microscopic, eukaryotic organisms. Examples include amoebae, ciliates, flagellates, and paramecia.

Quality audit⁴ Systematic, independent examination of a manufacturer's quality system that is performed at defined intervals and at sufficient frequency to determine whether both quality system activities and the results of such activities comply with quality system procedures, that these procedures are implemented effectively, and that these procedures are suitable to achieve quality system objectives.

Retrospection validation Validation study conducted on processes or products that are already in use or distribution. Retrospective validation is usually performed to identify the root cause of an identified problem or customer complaint.

Spirilla Bacteria having a spiral, twisted, or coiled shape. Spirilla can consist of long chains or be short and comma-like.

Spore log reduction (SLR) Log of the initial number of spores minus the log of the spores surviving the treatment.

Statistical process control (SPC) Monitoring of a process by using statistical methods to determine if a process is in or out of control.

Sterility assurance level (SAL)⁵ Probability of a single viable microorganism occurring on an item after sterilization.

NOTE: The term SAL takes a quantitative value, generally 10^{-6} or 10^{-3} . When applying this quantitative value to assurance of sterility, an SAL of 10^{-6} has a lower value but provides a greater assurance of sterility than an SAL of 10^{-3} .

Sterilization⁵ Validated process used to render a product free from viable microorganisms.

NOTE: In a sterilization process, the nature of microbiological inactivation is exponential and thus the survival of a microorganism on any individual item can be expressed in terms of probability. While this probability can be reduced to a very low number, it can never be reduced to zero. See also **sterility assurance level**.

Terminal sterilization⁵ Process whereby product is sterilized within its sterile barrier system. Product with its packaging is subjected to a sterilization process that provides the pre-selected SAL.

Thermocouple Device used as a temperature sensor for measurement and, possibly, control of a process.

Validation⁵ Documented procedure for obtaining, recording and interpreting the results required to establish that a process



Documents

Document Sharing Hub

will consistently yield product complying with predetermined specification.

Validation master plan (VMP) Overall document that defines the approach to be used for validation, which specific processes and equipment need to be validated, the tests that need to be performed for each validation process, and the type of validation to be performed for each process or piece of equipment.

Validation protocol (VP) Documentation of the specific processes and criteria that need to be met for a product validation. The validation protocol provides the specific criteria that define each step of the validation process for a specific process, product, or type of equipment.

Variable data Data that are quantified and usually expressed as a range of acceptable limits.

Verification⁴ Confirmation by examination and provision of objective evidence that specified requirements have been fulfilled.

Viroid Infectious particle smaller than a virus. Viroids usually infect plants.

Virulence Capacity to cause a disease; quality of being extremely infectious.

Virus Submicroscopic parasite that often causes disease in the cell that it invades. Viruses cannot replicate without a host cell.

Z value⁸ Change in exposure temperature of a thermal sterilization process, which corresponds to a tenfold change in D value.

Abbreviations

AER Automated endoscope reprocessor

AQL Acceptable quality level

ATP Adenosine triphosphate

BI Biological indicator

CDC Centers for Disease Control and Prevention

CFU Colony-forming unit

CI Chemical indicator

DHF Design history file

DMR Device master record

DOE Design of experiment

DQ Design qualification

EO Ethylene oxide

FAT Factory acceptance test

FDA U.S. Food and Drug Administration

HAI Healthcare-associated infection

IFU Instructions for use

IQ Installation qualification

LD Lethal dose

LOD Limit of detection

LOQ Limit of quantitation

LTD Lowest therapeutic dose

MACO Maximum allowable carry over

NCG Noncondensable gas

NPT National pipe thread

OOC Out of control

OOS Out of specification

OQ Operational qualification

OSHA Occupational Safety and Health Administration

PCD Process challenge device

PNSU Probability of a nonsterile unit

PQ Performance qualification

PQA Product quality assurance

RLU Relative light unit

RTD Resistance temperature detector

SAL Sterility assurance level

SDS Safety data sheet

SLR Spore log reduction

SOP Standard operating procedure

SPC Statistical process control

SV Stated value

TSE Transmissible spongiform encephalopathy

URS User requirements specification

VMP Validation master plan

VP Validation protocol

CHAPTER 3

The Science Of Sterilization

Introduction

This chapter is intended to provide a thorough understanding of the science behind the sterilization of medical devices. A basic review of microbiology is provided to ensure that the reader understands the basic concepts upon which the science of sterilization is based. This chapter describes the microorganisms of concern, microbial lethality, and the mode of action of the sterilization methods commonly used in industry and health care. For more information, a good book on healthcare microbiology, such as *Microbiology for the Health Sciences*,⁹ should be consulted.

Types of Microorganisms

Microorganisms are too small to be seen without a microscope. Not all microorganisms are harmful. However, *all* microorganisms that are present on a medical device that is to be used inside the body are “THE ENEMY.” It is useful for those working in the medical device sterilization field to picture the microorganisms that they are trying to kill so that they can better understand that the principles upon which microbial control is based cannot be compromised and must be rigorously adhered to. Microorganisms can be divided into procaryotes, eucaryotes, and acellular organisms. Procaryotes are simple cells that do not include a nucleus, complex membrane systems, or organelles (specialized cellular subunits with specific functions). Eucaryotes are more complex cells that have a true membrane and membranous organelles. Acellular organisms do not have any cellular structure at all.

Bacteria

Bacteria are the most well-known of the procaryotes. These microorganisms are responsible for many of the infectious diseases that we know. Bacteria come in two forms: vegetative cells and spores. Vegetative cells are capable of actively growing and reproducing; they are easily killed by most disinfection methods and by sterilization. Some bacteria can enter into a spore state that provides extra protection, making the bacteria much more difficult to kill.

Bacteria can be classified in many ways, including cell shape, nutritional requirements, biochemical and physiologic characteristics, staining reactions, atmospheric requirements, pathogenicity, and genetic composition.

Cell Shape

Bacteria come in three basic shapes: cocci (sphere-shaped), bacilli (rod-like), and spirilla (spiral-shaped). The name of a bacterium sometimes indicates its shape. If *bacillus* appears in the name, then it is known that the shape is rod-like. For example, *Geobacillus stearothermophilus*, the bacteria used for testing many sterilization processes, are rod-like bacteria that in the spore state are very difficult to kill. Methicillin-resistant *Staphylococcus aureus* (MRSA) is a sphere-shaped microorganism responsible for severe skin infections, among other conditions.

Nutritional Requirements

Bacteria differ in their nutritional requirements. All organisms require essential nutrients for survival. These essential nutrients are provided in the form of food that the organisms take in. Nutrients serve as a source of energy and of the basic elements needed for life: carbon, nitrogen, hydrogen, and oxygen.

Differences in nutritional requirements can help in the identification of microorganisms. For example, *S. aureus*, the most prevalent pathogen that affects humans, can be grown in a medium that has a high concentration of salt, mannitol, and a pH indicator dye. Most bacteria will not tolerate high-salt growth media. *Staphylococcus epidermis* tolerates a high concentration of salt but cannot ferment mannitol, whereas *S. aureus* can; when *S. aureus* ferments mannitol, it produces an acid that reacts with the pH indicator. Thus, bacterial growth in a high-salt growth medium indicates that *Staphylococcus* is present, but the response to the mannitol and the pH indicator differentiates between the two types of *Staphylococcus* organisms.

Biochemical and Physiological Characteristics

Bacteria can be identified by the temperature at which they will grow and thrive. Psychrophiles, the cold-loving bacteria, like temperatures in the range of -10°C to 20°C (14°F to 68°F). Mesophiles prefer a temperate climate, with temperatures between 20°C (68°F) and 45°C (113°F). Thermophiles thrive in a hot climate, with temperatures between 45°C (113°F) and 75°C (167°F). Some hyperthermophiles are known to grow at temperatures of up to 122°C (252°F).¹⁰ Bacteria are known to survive at higher and lower extremes of temperature, especially when in the spore state.

Most bacteria will not grow in an acid environment. They usually prefer a near-neutral pH of 7.1 to 7.4. Moisture and relative humidity can affect growth. If an environment is too dry, many bacteria will die; others can survive dry conditions for extended periods. Sunlight can be lethal to vegetative forms of pathogenic organisms. As bacteria grow, they excrete many products, some

of which are enzymes that break down various potential food sources. Other excretions might be microbial toxins, which can cause disease in a host if the toxins are ingested. Bacteria can be either motile or non-motile. Cocci are generally non-motile, whereas most spirilla are motile and many bacilli are motile with the use of flagellae.

Staining Reactions

A number of different stains are used in the microbiology laboratory to identify or differentiate bacteria. The most common is the Gram stain. At the end of the procedure, the cells will either be blue-to-purple or pink-to-red. Blue-to-purple cells are said to be “Gram-positive,” whereas pink-to-red cells are said to be “Gram-negative.” Some cells can be Gram-variable (not consistently one color or the other). Members of the *Mycobacterium* family are Gram-variable. *M. tuberculosis*, the bacterium responsible for tuberculosis, is included in this group.

Atmospheric Requirements

Bacteria can be classified on the basis of their need for and how they utilize oxygen. Bacteria can be either aerobic (requiring oxygen to live) or anaerobic (not requiring oxygen to live). Aerobic bacteria are further classified as either obligate aerobes or microaerophilic aerobes. *Obligate aerobes* need free oxygen at 20% to 21% in the atmosphere to live (about the same as that found in normal room oxygen). *Microaerophilic aerobes* also require free oxygen but in lower quantities than the obligate aerobes; some organisms prefer an atmosphere of only about 5% oxygen to thrive.

Anaerobes do not require free oxygen, and growth will be inhibited by free oxygen in the atmosphere. The various terms for anaerobic bacteria describe the degree of tolerance that the organism has to the presence of oxygen. *Facultative anaerobes* can live and thrive with or without free oxygen; many disease-causing organisms are facultative anaerobes (e.g., *E. coli*). *Aerotolerant anaerobes* can survive in the presence of oxygen, but they will only thrive in the absence of oxygen. *Obligate anaerobes* can only grow in the absence of free oxygen; they will die in the presence of oxygen in the atmosphere.

Pathogenicity

Pathogenic organisms are capable of causing disease in other organisms. Under the right circumstances, almost any bacteria can become pathogenic. Some bacteria can be both beneficial and pathogenic, depending on the circumstances. For example, *E. coli* is a common bacteria found in the colon. In this location, it performs a valuable function and aids in the breakdown and digestion of food. Outside of the colon, however, it can be pathogenic.

opportunistic pathogen and is responsible for many cases of food poisoning. It is also a common cause of septicemia and urinary tract infections.

Genetic Composition

In the modern microbiology laboratory, bacteria are frequently identified by their genetic composition. Specific strains of bacteria can be identified, which aids in determining whether an outbreak is caused by the same strain as a previous outbreak or is a new or different strain. Determining the cause of an outbreak enables health care professionals to decide on the steps that can be taken to fight the disease.

Eucaryotic Microorganisms

More complex organisms that contain a true nucleus and organelles are known as eucaryotes. In the microscopic world, eucaryotes include protozoa, fungi, and algae. Protozoa and algae are not discussed here because they are not found on medical devices and, therefore, are not a concern in device sterilization.

Fungi are plant-like organisms that have no chlorophyll. There are single- and multi-celled varieties. Not all fungi are microscopic; mushrooms, for example, are a type of fungi. Some fungi are saprophytes; that is, they obtain their nutrients by decomposing dead and decaying organic matter. Many fungi are useful. They are involved in the production of most kinds of antibiotics. Yeast is used to make bread dough rise, and molds are used to flavor many types of cheese. Other types of fungi are troublesome. Superficial fungi attach to skin, hair, nails, and mucosal surfaces and can cause a variety of surface mycoses (e.g., athlete's foot). Other fungi cause subcutaneous and systemic mycoses, which can be more severe infections.

Acellular Infectious Agents

Acellular infectious agents include viruses, viroids, and prions, which are not considered living cells. They need components of a living cell in order to multiply. These agents lack most of the characteristics of cells.

Viruses

Viruses are 1,000 times smaller than bacteria. Because they are incomplete cells, viruses cannot be grown on artificial media; they can only be grown in cell cultures. They have no mechanisms for movement and must rely on outside forces to move them. Viruses can only multiply within living cells, but they can survive away from a host cell for many hours, or even days, if in organic material.

Viruses usually attack a specific part of the host's body. Infection by a virus might produce a lasting immunity against re-infection. This characteristic is the basis for vaccinations, which involve inoculating a person with antibodies or a mild form of the virus. Common viral diseases include colds, mumps, polio, shingles, cold sores, warts, acquired immunodeficiency syndrome (AIDS), and hepatitis. Antibiotics are not effective against viruses, but there are some anti-viral agents available, which work by interfering with virus production within the host cell.

Viroids

Viroids are infectious ribonucleic acid (RNA) particles that resemble a virus, but are smaller. These agents cause diseases in plants, but at this time none are known to produce disease in any animal.

Prions

Prions are mutant forms of normal proteins that, unlike viruses, contain no nucleic acid and do not trigger an immune response. Prion proteins accumulate in the brain and, over time, kill brain cells, leaving spaces where nerve cells used to be. Prions are extremely resistant to the usual disinfection and sterilization methods employed in health care. Prion diseases known as transmissible spongiform encephalopathies (TSEs) are fatal. There is no proven treatment available. Patients at risk of acquiring a prion disease include recipients of dura mater transplants, pituitary hormones derived from human cadavers, and cornea transplants. Persons who have neurosurgery and members of families with a history of inherited TSE are also at risk.

Prion diseases can be spread by iatrogenic transmission, by treatment for something else, or by ingestion of infectious material; and some individuals have a hereditary predisposition to acquire the disease. Sporadic transmission is very rare. Isolation of patients suspected of having a prion disease is not necessary. No special precautions are required for non-invasive items used on a patient. Invasive items used in areas of high infectivity require special decontamination procedures. Single-use invasive devices are recommended; they should be incinerated after use. For the processing of reusable devices exposed to prions, the World Health Organization recommends the following¹¹: "If material has been contaminated with prions or contamination is suspected the preferred method is steam sterilization for at least 30 minutes at a temperature of 132°C [270°F] in a gravity displacement sterilizer. If a prevacuum sterilizer is used, 18 minutes at 134°C [273°F] has been found to be effective. Semicritical and non-critical items may be immersed in 1N sodium hydroxide, a caustic solution, for 1 hour at room

temperature and then steam sterilized for 30 minutes at a temperature of 121°C [250°F].” At this time, ethylene oxide and hydrogen peroxide sterilization methods have not been FDA cleared for use in processing devices contaminated by prions.

Microbial Growth

Various factors influence the rate at which microorganisms will grow. In the presence of certain adverse conditions, bacteria might not be able to grow at all. In order to inhibit or encourage the growth of microorganisms, it is necessary to understand microbial needs.

Nutrients and water are necessary for all life to grow. Different types of microorganisms require different nutrients to survive and without moisture microorganisms will either die or enter a protective state (e.g., by forming bacterial spores). The temperature must be within a range that the microorganism finds suitable. The pH of the environment is also important. Most microorganisms prefer a neutral to slightly alkaline environment, but some do prefer acid or alkaline environments. Osmotic pressure can cause a cell to take on or to lose fluid. In situations with extreme differences in solution inside and outside the cell, the cell can become desiccated or can lyse, which can kill the cell.

Microorganisms can reproduce by sexual or asexual means. Bacteria reproduce asexually by a process called binary fission, in which one cell splits into two cells that are identical to each other. Eucaryotes reproduce by either sexual or asexual methods. Fungi reproduce in a variety of ways: spores, fruiting bodies, and binary fission.

Under ideal conditions, microbial cells can grow at very rapid rates. The time that it takes for a cell to reproduce (generation time) varies among species, from as little as 10 minutes to 24 hours or more. Bacteria that can reproduce once every 20 minutes will produce over 2 million cells in just 7 hours (see Table 1).

TABLE 1 Exponential Growth of Unicellular Organisms

Time (min)	Number of divisions	Total number of microorganisms
0	0	1
20	1	2
40	2	4
60	3	8
80	4	16
100	5	32
120	6	64
140	7	128
160	8	256
180	9	512
200	10	1024
220	11	2048
240	12	4096
260	13	8192
280	14	16384
300	15	32768
320	16	65536
340	17	131072
360	18	262144
380	19	524288
400	20	1048576
420	21	2097152

Bioburden

Bioburden is the total number of viable microorganisms present on a device. The effectiveness of disinfection and sterilization procedures depends on the removal of bioburden. If the bioburden present on a device is too high, then the disinfection or sterilization process will not be effective. Cleaning processes are designed to remove visible soil and bioburden. Disinfection and sterilization processes are designed to inhibit or kill the microorganisms remaining on a device. If a sufficient number of microorganisms are not removed during the cleaning process, then the disinfection or sterilization process will fail. Disinfection and sterilization processes are capable of inhibiting or killing a specific number of microorganisms per unit of time. See Figure 1.

In the hypothetical situation shown in Figure 1, it can be seen that before the device is cleaned (data on line with circles), the amount of bioburden present requires a 12-minute exposure to the sterilizing agent. After acceptable cleaning (data on line with triangles), the bioburden has been reduced to the point that an exposure time of only 2 minutes is needed to sterilize the device. A 4-minute exposure time is sufficient to sterilize the well-cleaned device, but not the device that has been inadequately cleaned (data on line with squares), because in the latter case the bioburden is too high for the specified sterilization process to be

effective. In addition, it might not be possible to sterilize devices with gross soil or debris remaining on them after cleaning, even if the bioburden is low enough for the sterilization process to be effective, because the gross soil or debris might prevent the sterilant from reaching the surface of the item being sterilized.

Microbial Resistance

Microorganisms vary in their ability to resist destruction by physical or chemical means. Vegetative bacteria are generally considered the least resistant to destruction and bacterial spores the most resistant to destruction. Cellular structures such as the slime layer in mycobacteria provide some protection to the cell. Bacterial spores are resistant to extremely high or low temperatures, extremely low humidity, and most chemicals; only sterilization processes are effective in destroying spores. Vegetative bacteria, viruses, fungi, and mycobacteria can usually be destroyed by chemical or physical disinfection methods. Depending on the resistance characteristics of the particular organism, certain chemicals will be more or less effective. For example, enterococci are less sensitive than staphylococci to many disinfectants. Built-in resistance is found in bacterial spores, mycobacteria, and gram-negative bacteria.

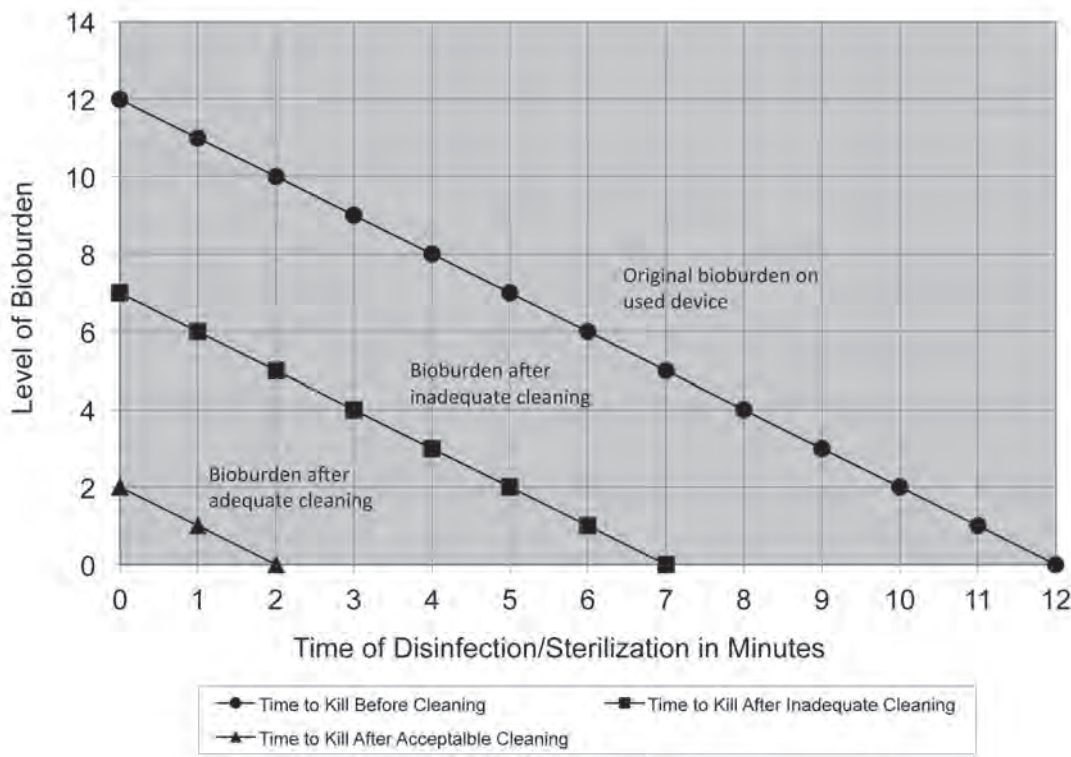


FIGURE 1 Comparison of Bioburden to Exposure Time

Microbial Lethality

General Considerations

Microbial death can be accomplished through a number of physical or chemical means. The most common physical sterilization methods are moist heat, dry heat, and radiation. The most common chemical agents are ethylene oxide, hydrogen peroxide, ozone, and peracetic acid. Irrespective of the sterilization method, microbial death follows a logarithmic function of time of exposure to or dose of the sterilant. A logarithm is the factor by which a fixed number, the base, must be raised to produce that number. For example, the logarithm of 10,000 to base 10 is 4, i.e., $10 \times 10 \times 10 \times 10$ (in other words, the number of times that the base needs to be multiplied by itself to produce the number). A logarithmic function follows a straight line. Microbial death or sterility assurance uses a logarithmic base of 10. This means that application of a process for x number of minutes will produce a one-log reduction in the number of microorganisms present. A one-log reduction of a microbial population in base 10 amounts to a 90% reduction of the population.

Sterility Assurance Level

Sterility assurance level (SAL) is a microbiological term used to describe the “probability of a single viable microorganism occurring on an item after sterilization. The term SAL takes a quantitative value, generally 10^{-6} or 10^{-3} . When applying this quantitative value to assurance of sterility, a SAL of 10^{-6} has a lower value but provides a greater assurance of sterility than a SAL of 10^{-3} .”⁵ The probability of a nonsterile unit (PNSU) is the probability that viable microorganisms are present on a product after sterilization; this could be one or many microorganisms. A sterilization process with a SAL of 10^{-6} (the most common SAL used for the sterilization of invasive medical devices) means that there is a probability that one in a million of the products subjected to that process will not be sterile after completion of the sterilization process.

A SAL that is lower than 10^{-3} cannot be directly measured because of the potential for contamination during testing and because multiples of 1 million products would be required for testing, which is not practical. Instead, calculations of SAL are based on validated sterilization processes. It is impossible to prove that all microorganisms have been destroyed by a given sterilization process. As described earlier, different types of microorganisms require different conditions for optimal reproduction. It could be that the microorganisms present

simply have not been given the conditions needed for them to thrive and reproduce. Some organisms will remain in a spore state to protect them from a hostile environment, such as the environment during a sterilization process. Also, sterility testing of a particular device results in a device that cannot be used for its intended purpose. Moreover, it is possible that the particular product tested was indeed sterile but that the product next to it, which was not tested, was not sterile. It is impossible to test all sterilized devices to ensure that they are sterile. If the bioburden present on the devices was higher than the sterilization process is intended to kill, then the devices might still be contaminated at the end of the sterilization process. This is why cleaning and decontamination are so important to the sterilization process. Whether a device is intended for single use or is reusable, the bioburden present on the device prior to the sterilization process must be reduced to a level that the sterilization process is capable of killing within the parameters specified for that sterilization process.

TABLE 2 Sterility Assurance Level/Spore Log Reduction

Number of microorganisms	Log of microbial population	Spore log reduction from original population
1,000,000	10^6	0
100,000	10^5	1
10,000	10^4	2
1,000	10^3	3
100	10^2	4
10	10^1	5
1	10^0	6
0.1	10^{-1}	7
0.01	10^{-2}	8
0.001	10^{-3}	9
0.0001	10^{-4}	10
0.00001	10^{-5}	11
0.000001	10^{-6}	12

Spore Log Reduction

A spore log reduction (SLR) of 12 is needed to reduce a population of 1 million organisms to a SAL of 10^{-6} , which is the “gold standard.” A microbial population of 1 million bacteria reduced to 100,000 bacteria would be reduced by 1 log or 90%. A 6 SLR is needed to reduce 1 million bacteria to one. To then reduce the microbial population to a 10^{-6} SAL requires an additional 6-log reduction or a 12 SLR. See Table 2.

Lethality Values

In microbiology, the time needed for a particular processing condition to reduce a microbial population by 90% or 1 log is known as the decimal reduction value (D value). Biological indicators (BIs) containing spores resistant to a particular sterilization process are used to test that process. For example, *Geobacillus stearothermophilus* is used to test the steam sterilization process because this organism is a heat-loving and resistant bacterium. (As noted previously, thermophiles prefer hot temperatures.) The D value can be used to measure a sterilant’s efficiency at reducing the population of the specific microorganisms present on a biological indicator. Typically, the sterilization condition being measured is given as a subscript when noting the D value for a particular organism; for example,

a $D_{270F (132C)}$ of 20 seconds means that an exposure time of 20 seconds at this temperature yields one SLR. Each lot of a biological indicator is usually given a distinctive D value. The D value of *Geobacillus stearothermophilus* is about 2 minutes at 121°C (250°F) and about 20 seconds at 132°C (270°F). Therefore, after exposure to moist heat at 132°C (270°F) for 2 minutes, it is possible that one organism of *Geobacillus stearothermophilus* out of one million organisms on a biological indicator could still be alive. These recommendations are minimum acceptable parameters. Depending on factors outside the manufacturer’s control (e.g., packaging, loading configuration, adequacy of cleaning), these parameters might not be adequate to achieve sterilization. See Figure 2.

“The z value is defined as the number of degrees temperature change to change the D value by a factor of ten (10) or one log unit.”¹² The z value relates to the resistance of a microorganism to heat at a particular temperature. A typical z value for *Geobacillus stearothermophilus* is about 10°C (18°F). At a temperature of 121°C (250°F), for *Geobacillus stearothermophilus* with a z value of 10°C (18°F) and a D value of 1.25 minutes, it will take 15 minutes to achieve a 12 SLR (a SAL of 10^{-6}). For the same organism with the same z value at a temperature of 132°C (270°F), the D value is 20 seconds and a 4-minute exposure time will be needed to achieve a 12 SLR (a SAL of 10^{-6}).

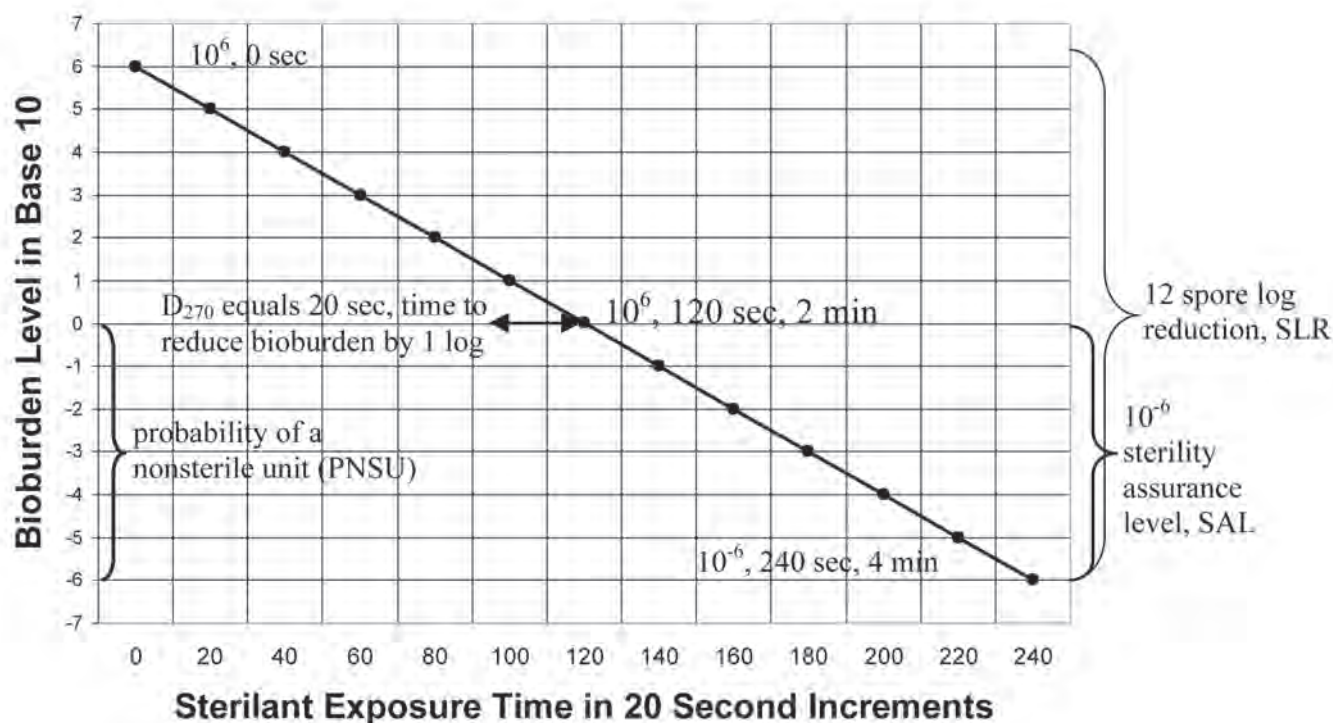


FIGURE 2 Microbial Lethality Measures

Terminal Sterilization

In terminal sterilization, the medical device in its sterilization package is exposed to a sterilization process that will result in the predetermined SAL. Terminally sterilized devices can be placed in storage for later distribution and use. Manufacturers of reusable medical devices need to be familiar with the specific sterilization cycles that their customers' sterilizers have been cleared to use. Although it is possible to develop and validate sterilization cycles specific to individual reusable medical devices, it is preferable to design devices that can be sterilized in the standard cycles in use by a manufacturer's customers. These standard cycles vary in different parts of the world. In the United States, the FDA has cleared sterilizers for use in health care with specific cycles that have been validated. To the extent possible, manufacturers of reusable products to be sold in the United States should design devices that can be sterilized in these cleared cycles. Manufacturers of single-use medical devices can develop sterilization cycles that are specific to their particular products, volumes, and loading configurations.

Microbial Control

Fundamentals of Microbial Control

As previously discussed, microbial growth is influenced by many factors. With an understanding of the conditions necessary for microbial growth, the conditions detrimental to microbial growth, and the conditions needed to destroy microorganisms, it is possible to control microorganisms and disinfect or sterilize contaminated items.

There are three categories of infection risk for medical devices. Critical devices are introduced directly into the blood stream or other sterile areas of the body; sterility at the time of use is required. Semicritical items come in contact with intact mucous membranes but do not penetrate body surfaces; sterilization is desirable and high-level disinfection is required. Noncritical items have direct contact only with intact skin; medium-level disinfection is recommended for these items. Nonmedical devices and environmental surfaces that will come into contact with intact skin should receive low-level disinfection.¹³

Processing medical devices for patient uses involves cleaning and disinfection or sterilization.

Cleaning

The first step in controlling microorganisms and preventing the spread of infection is to clean the contaminated device prior to disinfection or sterilization. Cleaning is the removal of all visible

dust, soil, and any other foreign material. It is the most important step in the decontamination, disinfection, and sterilization process. Whether the device is reusable or for single use, it is impossible to disinfect or sterilize it unless it has first been cleaned. Visible soil can prevent the sterilant from contacting all surfaces of the device being sterilized; and if bioburden is not reduced to acceptable levels, the sterilization process might not work. The purpose of cleaning is to remove all visible debris and to reduce the number of particulates and microorganisms to levels acceptable for effective disinfection or sterilization.

Reusable devices need to be cleaned as soon as possible after contamination has occurred in order to reduce the following:

- The number of microorganisms present on the device
- The nutrient material that might support microbial growth
- The potential for environmental contamination

Prompt cleaning will also minimize damage to devices (e.g., prolonged contact with blood will corrode many metals). In addition, if gross debris is allowed to remain on a device for an extended period, the device will become much more difficult to clean—in some cases, even impossible to clean.

Before cleaning a device, it is first necessary to determine the type of cleaning agent that will be used. The appropriate cleaning agent depends on the type of soil that is expected to be encountered and on the material that the device is made of. An ideal cleaning agent would have the following characteristics:

- Nonabrasiveness
- Low-foaming and free-rinsing properties
- No toxicity
- Biodegradability
- Cost-effectiveness
- Rapid soil dispersion
- Effectiveness on all types of soil
- Long shelf life and use life
- A mechanism for monitoring effective concentration and use life (a detergent with such a mechanism is not currently available)

Cleaning can be performed by manual or mechanical methods; which method is used will be determined by the device that is being cleaned. For example, some devices cannot be immersed

in fluids and so might need to be manually cleaned. When possible, device manufacturers should design devices that can be immersed and cleaned by mechanical methods because of the greater cleaning efficiency. If mechanical cleaning methods are used, it is necessary to determine which type of mechanical process or machine is appropriate for the device being cleaned. Special machines or mechanical processes might be needed to clean specific features (e.g., lumens, cannulas). In general, mechanical methods are preferred to manual methods because the more precise control associated with mechanical methods enables them to be validated.

Disinfection

General Considerations

Disinfection is the destruction of nearly all microorganisms on an inanimate surface. Three levels of disinfection can be employed: low, intermediate, and high. The level of disinfection used depends on the type of microorganism to be destroyed and the level of contact that the device will have with the patient. Low- to intermediate-level disinfection is used to disinfect work surfaces, patient care equipment, and items that will come into contact with intact skin only. High-level disinfection is used for medical devices that will come into contact with intact mucous membranes but will not contact any sterile areas of the body or come into contact with blood through nonintact skin or mucous membranes. Devices that come into contact with the sterile areas of the body or with nonintact skin or mucous membranes should be sterile because even high-level disinfection will not destroy bacterial spores.

Disinfection can be accomplished by either physical or chemical means. The primary physical disinfection method used for medical devices is moist heat. Chemical disinfection can be accomplished by a variety of chemicals, which can provide low- to high-level disinfection depending on the concentration of the chemical and the exposure time.

Physical Disinfection

Vegetative forms of bacteria are easily killed by boiling in water for 30 minutes; however, spores, thermophiles, and some viruses will survive this process. Pasteurization is the process of heating a substance, typically food, for a specified period of time and then cooling it immediately. This process is also used for the disinfection of some medical devices, primarily devices used in anesthesia or respiratory therapy. Today many of these devices are single-use devices. Pasteurization is intended to reduce the number of viable pathogens present on a device, so this process (when used for terminal reprocessing) is only acceptable for

devices that will come into contact with intact skin or mucous membranes but will not contact normally sterile areas of the body.

Chemical Disinfection

Chemical disinfectants include quaternary ammonium compounds, phenols, alcohols, halogens, glutaraldehyde, ortho-phthalaldehyde, hydrogen peroxide, and peracetic acid. Many medical devices are disinfected after cleaning, either as a terminal processing step or to make the devices safe for handling before sterilization. Care needs to be taken in the selection of chemical disinfectants. Some chemicals will damage certain materials (e.g., alcohol can dry out some plastic materials and cause the plastic to crack or craze, especially with repeated exposure).

Quaternary ammonium compounds are low-level disinfectants used primarily for environmental sanitation of walls and floors. **Phenols** are also primarily used for environmental sanitation; they should not be used in food preparation areas, nurseries, or the operating room. **Alcohols** are intermediate-level disinfectants that, because of their strong drying effect, can damage some materials, especially if used repeatedly. Alcohols are most effective at a 70% dilution; stronger dilutions evaporate too rapidly to be effective.

Halogens are primarily used as antiseptics because they are corrosive to metal and might damage rubber and some plastics. Chlorine-based halogen compounds can be used for cleaning up blood spills, although large amounts are needed because organic material inactivates the chlorine. These compounds can also be used to clean environmental surfaces and in hospital laundry. They are usually considered disinfectants, but in some combinations and strengths they can be effective sterilants.

Glutaraldehyde can be used as either a disinfectant or sterilant. However, its use as a sterilant is limited because there is no way to effectively maintain the sterility of a device after it has been soaked in glutaraldehyde. A relatively short exposure time (10 to 45 minutes) is needed for disinfection, whereas sterilization takes several hours. Ortho-phthalaldehyde is a high-level disinfectant used to disinfect endoscopes and other heat-sensitive devices. Unlike glutaraldehyde, ortho-phthalaldehyde is not classified as a sterilant; it can only be used for high-level disinfection.

Hydrogen peroxide is used as a sterilant for heat-sensitive medical devices and as a room disinfectant. **Peracetic acid** can be used either as a disinfectant or a sterilant. A relatively short exposure time (5 to 7 minutes) is needed for disinfection.

Chemical disinfectants should not be mixed with other chemicals unless specified by the disinfectant manufacturer. For chemical disinfectants to be most effective they should be mixed with purified water (e.g., reverse osmosis, distilled, or deionized

water). The manufacturer's instructions for use (IFU) and safety data sheet (SDS) should be consulted for specific information. Water impurities can have an impact on the effectiveness of many chemicals; water hardness is the most problematic. Hard water contains large amounts of calcium and magnesium, whereas soft water has few or no extra elements. The minerals in hard water prevent the water from interacting with soap or detergent, resulting in the need for higher concentrations of most chemicals for the chemical to be effective.

Other impurities can also have an impact on the effectiveness of water in acting as a solvent. Bicarbonates (sodium, calcium, or magnesium), chlorides, sulfates, and silica can cause formation of scale. Oxygen, carbon dioxide, chlorides, and sulfates can cause corrosion. An unusually high water pH (above 8.5) or an unusually low water pH (below 5) can alter chemical efficiency by allowing corrosion and soil deposition to occur. Directions for mixing need to be closely followed because small changes in dilution can cause big changes in the effectiveness of some chemical disinfectants. As with all chemicals, chemical disinfectants should only be used in well-ventilated areas. Organic residue left after cleaning can minimize the effectiveness of a disinfectant by diluting or inactivating the disinfectant and by preventing contact with all surfaces to be disinfected. Excessive moisture can dilute disinfectants.

Sterilization

General Considerations

Sterilization is a process that, when applied correctly, kills all forms of microbial life on or within the device, material, or liquid to which it is applied. It is achieved by applying the proper combination of parameters for the particular sterilization process being used. Parameters include temperature, time, chemical concentration, humidity, and irradiation dose, depending on the sterilization process being used.

Proving sterility is very difficult. For this reason, sterilization processes are designed to provide a very high probability that all microorganisms were killed (i.e., a SAL of 10^{-6}). Three factors are essential to the effectiveness of a sterilization process:

- Conditions lethal to microorganisms must be present.
- The bioburden present on the devices being sterilized must be low enough to ensure effectiveness of the process.
- Adequate contact of the sterilant with all surfaces of the devices being sterilized must occur for sufficient time.

If any of these conditions is not satisfied, sterilization will not occur.

The presence of lethal conditions involves ensuring that the sterilization parameters occur as programmed for a given sterilization process. If all parameters are not met, then the devices processed in that load cannot be considered sterile. Sterilizers provide a printed report of the cycle, which should be checked to ensure that all sterilization parameters were met. If not, the items in the load should not be released for distribution and use.

A number of factors can influence whether a sterilant will be able to contact all surfaces of the item being sterilized. The design of the device might necessitate careful positioning of the device in the sterilizer. For example, if a device with a concave surface is placed in a downward position, an air pocket could form, which could prevent the sterilant from contacting the surface. If the opening of the device faces upward, steam condensate could fill the concavity; the condensate will be difficult to drain and a wet pack might be the result. Factors affecting the ability of a sterilant to contact device surfaces are discussed in more detail later in this chapter.

The density of an item affects the amount of time needed for a sterilant to penetrate the item. If an item is extremely dense, it might not be possible for the sterilant to penetrate to all surfaces in the time that is allotted for sterilant penetration and exposure to occur. This situation could necessitate an extended sterilization exposure time or adjustments to other sterilization parameters.

Sterilization processes used in health care facilities include moist heat sterilization and low-temperature sterilization processes (ethylene oxide, ozone, hydrogen peroxide, and liquid chemicals).

Moist Heat Sterilization

Moist heat sterilization is frequently thought of as steam sterilization, but moist heat sterilization can also be achieved with liquid water. Moist heat sterilization is defined as "thermal energy in the presence of moisture provided as steam or liquid water for the purpose of achieving microbial lethality."⁶ This book will deal primarily with moist heat sterilization using saturated steam.

The parameters used in moist heat sterilization are time, temperature, and moisture. After an effective moist heat sterilization process with an exposure time of 2 minutes at a temperature of 132°C (270°F), it is possible that one organism of *Geobacillus stearothermophilus* out of one million organisms on a biological indicator could still be alive. Manufacturer-recommended cycles are usually based upon half-cycle development. These recommendations are minimum acceptable parameters. Depending on factors outside the manufacturer's control (e.g., packaging, loading configuration), these parameters might not be adequate to achieve sterilization. The company or

healthcare facility that reprocesses reusable devices needs to verify that the manufacturer's recommendations work in that facility. Medical device manufacturers that reprocess devices will need to validate their sterilization processes, and it might be necessary for the healthcare facility to do so as well. Sterilization process validation is discussed in detail in Chapter 7.

Saturated steam transmits thermal energy to a device being sterilized until the device reaches the temperature of the steam, a process that normally takes only a few minutes. Moist heat sterilizers are fitted with one or more temperature gauges, depending on the size of the sterilization chamber, to measure the temperature of the steam at the "cold spots" in the chamber. Typically, if only one temperature gauge is used, it will be placed in the drain of the sterilizer because the drain is usually the last place that will heat to the sterilizing temperature. In automated sterilization processes, the sterilizer will automatically start timing the exposure phase when the sterilization temperature is reached in the "cold spot."

For saturated steam sterilization to work there must be adequate moisture in the steam. Steam quality is measured by a dryness fraction commonly referred to as steam quality. High-quality steam contains very little moisture in the form of water droplets, whereas low-quality steam has a high percentage of water droplets. High-quality steam having a dryness fraction of at least 95% (5% moisture) is recommended for sterilization of loads containing metals.¹⁴ Dry steam, steam with lots of air or noncondensable gases, or wet steam does not transfer energy well, with the result that the devices being processed might not reach sterilization temperature or that sufficient energy to kill the bioburden might not be delivered to the load.

Relative humidity is the amount of water vapor present in air and is commonly expressed as the percentage of water vapor present compared to the amount of water vapor that the air could hold at a particular temperature. The higher the temperature, the more water vapor the air will hold. If the air then cools, the water vapor will condense. This is similar to what happens in saturated steam sterilization. The saturated steam contacts the cooler surface of the device being sterilized. The steam condenses and releases thermal energy, which results in sterilization. Steam will continue to condense until the temperature of the device reaches the temperature of the steam. Saturated steam exerts a constant pressure at a given temperature.

Provided that air, noncondensable gas, or superheated steam is not present, temperature and pressure will vary in direct proportion to each other. If pressure increases, temperature also increases; if pressure decreases, temperature decreases. If the pressure is higher than the corresponding temperature, the steam contains air. If the pressure is lower than the corresponding

temperature, the steam will be superheated. Either condition can cause problems with sterilization. Steam containing air can prevent the steam from reaching all surfaces of the devices being processed, which will result in sterilization failure. Superheated steam is too dry, necessitating higher temperatures and longer exposure times for sterilization to occur.

As noted earlier, there must be adequate contact of the saturated steam with all surfaces of the item being processed in order for sterilization to occur. A number of factors can affect the ability of the steam to contact all device surfaces:

- Inadequate cleaning will prevent contact of the steam with the surface of the device. Soil can also provide a protective cover to the microorganisms present.
- Wrapping devices made of flexible materials (e.g., surgical textiles) too tightly can cause air pockets, which might interfere with sterilant contact, or prevent the sterilant from penetrating to the interior of packages in the prescribed sterilization time.
- Crowding packages on a sterilizer cart can cause similar problems to wrapping a package too lightly because the density of the packages could be altered.
- Incorrect positioning of items on the sterilizer cart can create air pockets in devices that have concave or convex surfaces.
- Air leaks from the sterilizer or inadequate air removal from the sterilizer, which can be caused by a malfunctioning vacuum pump or a clogged strainer or drain, can also cause air pockets.

Low-Temperature Sterilization

Many reusable medical devices cannot withstand the moisture and high temperatures associated with saturated steam sterilization processes. A variety of low-temperature chemical sterilization processes have been developed for the sterilization of these products. Two types of chemical sterilization processes are available: those that use gaseous chemicals, such as ethylene oxide (EO), ozone, and hydrogen peroxide; and those that use liquid chemicals, such as glutaraldehyde and peracetic acid.

Ethylene Oxide. Ethylene oxide is one of the most widely used industrial chemicals. It is vital to the production of many products, including detergents, solvents, many plastics, and various chemicals, such as antifreeze (ethylene glycol). As a chemical precursor in these products, EO is not usually considered dangerous, but, by itself, it has potentially severe acute and chronic exposure effects. Chronic effects of exposure to EO include carcinogenicity, birth defects, fertility problems, and neuropathy. Acute effects of exposure include nausea, dizziness, difficulty breathing, skin and mucous membrane irritation, and



headache. Ethylene oxide use must be closely controlled through implementation of engineering controls and employee protection measures. Monitoring ambient gas concentration levels is needed to ensure that exposure levels remain below acceptable limits. Facilities that use EO must comply with OSHA regulations on exposure to ethylene oxide.¹⁵

The parameters of EO sterilization are gas concentration, moisture (humidity), temperature, and exposure time. Ethylene oxide gas concentration is measured as milligrams per liter (mg/L) in the sterilization chamber space. Increasing concentration decreases the exposure time needed. The specified concentration must be maintained throughout the exposure phase of the sterilization cycle. Moisture is essential to EO sterilization. If moisture levels are too low (below about 30%), it might not be possible for EO to penetrate microbial cell walls, which will prevent the chemical from reacting with cellular DNA and will ultimately make it impossible for the EO to achieve sterilization within the time allowed, if sterilization can be achieved at all. If moisture becomes too high and there is an excess of water present in the sterilization atmosphere, more ethylene glycol, a potentially toxic chemical, might be produced as a byproduct.

Higher temperatures can result in a faster, more efficient process. However, if the device can withstand higher-temperature sterilization, saturated steam sterilization should be considered. Exposure time must be long enough to allow the sterilant to penetrate through all items being sterilized. The necessary exposure time varies with the gas concentration and temperature used. The density, thickness, configuration, and permeability of the devices in the load also affect the time needed for penetration of the sterilant. The standard cycles used in health care are set to accommodate the most difficult processing conditions expected to be encountered. These conditions can be affected by the configuration of devices created by the healthcare facility and by the loading configuration.

Because EO penetrates at a molecular level, it is necessary to remove the EO after the sterilization process. Residuals remain after sterilization and must be reduced to safe levels before patient use. Ethylene oxide can be removed through a process known as aeration, which causes the EO to be adsorbed, collected on the surface of the device, and displaced by air, thus allowing the gas to disperse from the device. Aeration typically takes several hours to several days to accomplish, depending on the composition of the load. The higher the temperature, the shorter the aeration time required.

Hydrogen Peroxide Gas Plasma. Gas plasma sterilization involves creating plasma by subjecting a gaseous chemical to an electrical field. Currently, hydrogen peroxide and ozone are used in gas plasma sterilization processes. Hydrogen peroxide has

strong oxidizing properties that make it useful as a sterilizing agent. Hydrogen peroxide sterilization cycles are much shorter than ethylene oxide cycles.

Material compatibility issues are created by the strong oxidizing characteristics of hydrogen peroxide. According to the Centers for Disease Control and Prevention (CDC), there are concerns about material compatibility between hydrogen peroxide and brass, zinc, copper, and nickel/silver plating.¹⁶ When exposed to hydrogen peroxide, brass and copper will exhibit some surface discoloration; and zinc will oxidize and corrode. When neoprene is exposed to hydrogen peroxide, a small amount of surface powdering might occur. Natural rubbers decompose when exposed to hydrogen peroxide. The device manufacturer should be consulted to determine if there are any material compatibility issues with hydrogen peroxide; the sterilizer manufacturer can be consulted for general information.

Products containing cellulose cannot be sterilized by this method because the cellulose will absorb the hydrogen peroxide, causing the concentration of hydrogen peroxide to drop below what is needed to achieve sterilization. Because the penetration capability of hydrogen peroxide is not as good as that of ethylene oxide, there are limitations on the length and diameter of lumens that can be sterilized with hydrogen peroxide. The IFU of both the device manufacturer and the sterilizer manufacturer should be consulted for guidance.

As with any sterilant, care must be taken in handling the sterilant and sterilized devices. Hydrogen peroxide can cause bleaching or ulceration of skin if direct contact occurs at a high enough concentration and for a sufficient period of time. The sterilizers in use today have been engineered to minimize the possibility of any exposure to the hydrogen peroxide, but it is recommended that personnel wear chemical-resistant gloves when handling the sterilant container and when handling devices being removed from the sterilizer. Routine employee monitoring is not recommended at present, but users might choose to monitor for the presence of hydrogen peroxide.

Ozone. Because of its strong oxidizing properties, ozone is an efficient sterilant. It is capable of oxidizing most organic matter. Because the gas is unstable, it has to be produced on site. Ozone is produced by adding an atom to oxygen to produce a chemical with three atoms of oxygen instead of the usual two atoms. Cycle time is about 4 hours at 30.8°C to 36°C (87.4°F to 97°F). At the end of the cycle, the ozone is converted back to a two-atom molecule of oxygen, so there are no hazardous residuals created by the process. The FDA has cleared ozone sterilization for sterilization of metal and plastic instruments, hinged instruments, and instruments with lumens having a specified inside diameter and a specified maximum length. Because of penetration issues, there

are restrictions on the size of lumens that can be sterilized with ozone. Fluids and woven textiles cannot be sterilized with ozone. Sterilization parameters are ozone concentration, temperature, and time.

Combined Ozone and Hydrogen Peroxide. An ozone–hydrogen peroxide sterilizer became available in some countries in 2009. This sterilizer was cleared by Health Canada and has the CE mark for commercial distribution in Europe. The manufacturer is seeking FDA clearance at the time of this writing (February 2014). The original ozone sterilizer was cleared in Canada and Europe for upgrade to the new combined technology. Free radicals formed by the two sterilizing agents act to sterilize devices. Hydrogen peroxide reacts to ozone similarly to how it reacts to plasma in other sterilization processes. The ozone–hydrogen peroxide sterilization process begins with the formation of radicals produced by the hydrogen peroxide. The ozone then reacts with the hydrogen peroxide, water, and radicals already present in the chamber. The combination of the two chemicals creates a very powerful oxidizing agent capable of penetrating lumens and other hard-to-reach device designs.

Liquid Chemicals. Liquid chemical sterilization can only be used for items that can be immersed in the liquid. Because there is no way to maintain the sterility of an item after sterilization, these processes can only be used for immediate-use sterilization or for high-level disinfection. Although glutaraldehyde and peracetic acid are both capable of sterilizing devices, their most common use is as high-level disinfectants. A long exposure time is needed for glutaraldehyde to achieve sterilization. Also, for a chemical to be used as a sterilant in either industry or health care, it is necessary to demonstrate the capability of the process, which involves testing with biological indicators to demonstrate that the process as used at the facility is capable of killing all microorganisms.



CHAPTER 4

The Quality Management System

Introduction

Companies and healthcare facilities engaged in producing sterile product must have a system in place to ensure that product quality is maintained. A comprehensive quality management system addresses all specified requirements for a particular product and consists of several components, including designation of management responsibility, documentation requirements, product realization requirements, quality audits, and change-control requirements. This chapter of the book discusses quality management in general terms and its application to all companies and healthcare facilities engaged in producing sterile product. The specifics of how medical device manufacturers and healthcare facilities can apply these principles are covered later in the book.

Management Responsibility

Management with executive responsibility defines and documents the company's or healthcare facility's quality policy, including quality objectives and the commitment to quality. The person responsible for the quality program must have the authority to establish and make changes to the quality policy. Depending on the size of the company or healthcare facility, this person might also be responsible for the development of all policies, procedures, and instructions. In larger facilities, additional people will be responsible for various aspects of the quality program. It is acceptable to delegate some aspects of the quality program, including (a) the establishment of quality objectives, (b) designation of the actual methods and procedures to be used, and (c) implementation of the various steps in the quality program. Larger facilities might have a separate quality department responsible for ensuring that all employees (administrative, production, distribution, and support personnel) comply with the quality policies and procedures.

Individual department management is responsible for ensuring that employees adhere to the facility's quality requirements. If any employee is not adhering to the quality system requirements, management is responsible for taking appropriate action to ensure compliance. Actions to ensure compliance with the quality system include initial orientation, ongoing retraining, and discipline when needed. All such actions should be documented.

The suitability and effectiveness of the quality system must be reviewed at designated intervals. Participants in this review should include representatives of all facility departments that can have an impact on the quality system (e.g. quality, production, purchasing, distribution, sterilization, marketing, sales, and administration). The purpose of this review is to determine if the facility's

quality policies and objectives are being achieved. The review could include the following:

- A review of the organizational structure, including staffing and other resources
- A comparison of finished device quality to the specified quality objectives
- A review of internal audit results
- A review of the customer complaint files
- A review of corrective and preventive actions taken in response to internal audits, customer complaints, or other reports
- A review of quality reports on raw materials, product performance, and process performance
- A review of potential updates of the quality system, including frequency of reviews

Management review is a broad review meant to ensure that the facility's quality policy has been implemented and the objectives are being met. Additional quality meetings should be carried out by the quality management representative and/or department management personnel to review supporting activities and ensure that each area or department is complying with the established quality policy.

Documentation Requirements

A comprehensive quality system begins with development of a quality manual, which may consist of several tiers that become progressively more detailed. One approach is for the quality manual to specify the overall policies that govern the facility's approach to quality, with supporting procedure manuals. The procedure manuals provide specific information on how to perform a particular function and might, in turn, be supported by instructions for specific procedures. Instructions are step-by-step information on how to perform a specific procedure and are used when it is likely that the person performing the procedure might perform the procedure in such a way that the quality of the product will be compromised. For example, the quality manual might state that the facility complies with all requirements for ensuring that the product contains all specified components, is packaged in accordance with packaging requirements, and meets all functionality tests before being provided to customers. The following procedures might then be written to support this policy:

- Identification of product components
- Product assembly and packaging

- Functionality tests and acceptance criteria
- Product release

For a specific product, instructions might be needed to support the product assembly and packaging procedure. For example: Assemble all components and ensure that product is functioning properly before placing it in sterilization packaging and submitting it for sterilization.

In addition to the policies, procedures, and instructions, the following types of documentation might be needed to support the quality system:

- Device master record (DMR)

NOTE: In healthcare facilities, the DMR could be the tray list with pictures and specific notes in the instrument tracking/productivity program.

- Specification of raw materials, packaging, and labeling
- Inspection requirements and acceptance criteria
- Cleaning, assembly, and sterilization details and acceptance criteria
- Design verification records
- Process verification records
- Process validation records
- Routine monitoring records
- Product release records
- Device history files (DHF)

NOTE: In healthcare facilities, the DHFs are the records maintained each time a tray is assembled.

It is important that this documentation is available to support that the product has been produced in accordance with its product specifications and that it meets its performance requirements. These records might be needed should there be a report of a product quality problem. Investigation of product problems begins with a review of the records, followed by an analysis of any breakdowns that might have occurred and how such breakdowns can be minimized or prevented in the future.

Product Realization

Procedures that specify the steps needed to ensure that finished product meets its quality requirements must be developed and



implemented. These procedures include the following:

- Purchasing requirements to ensure that the raw materials needed for producing a particular product meet the requirements for that product
- Product identification and traceability specifications
- Measurement system calibration
- Control of non-conforming product (i.e., product that has failed to meet its specified requirements)

NOTE: In healthcare facilities, a nonconforming product could be a tray that is missing required components or instruments or that has additional, nonspecified components or instruments in it.

Any requirements for purchased products must be verified when the product is received. Receipt of product should be verified against the purchase order. Any product that does not meet purchase specifications should be reviewed and the disposition determined. It might be necessary to return the product for the correct or specified product. Before beginning to purchase product from a particular supplier, it is necessary to qualify that vendor. Criteria should be developed specifying the product requirements, and then the vendor's product should be compared to the specification to ensure that the product meets the requirements. Vendor qualification might include site visits to ensure that manufacturing processes are acceptable for purchased subassemblies. All departments that will use the products should be part of the vendor review process. In healthcare facilities, clinical, sterile processing, distribution, and purchasing departments should participate.

To ensure that finished product meets its specifications and to facilitate any recalls necessitated by problems later found with the production process, procedures must be developed that allow for identification and traceability of the product and its components throughout the production process. Identification and traceability can be accomplished by using a unique identifier such as a bar code or simply by ensuring that all components are kept together during the production process. The simplicity or complexity of identifying and tracing product will depend on the specific product being produced and the steps in the production process.

Any equipment or tools needed to measure specific parts of the production process should be calibrated to a national standard. Such equipment includes measurement devices on washers and sterilizers. Although washers and sterilizers are not used to create a particular device, they do produce the final sterile product, so the measurement devices on these machines must be accurate. A review of key measurements during the production processes

allows for early recognition of possible nonconforming product. A final review of the production measurements ensures that the product meets its specifications and is acceptable for distribution. For these inspections to be meaningful, any measurement systems used must be accurate. Accuracy of the measurement system is ensured through calibration of the equipment.

Product that does not meet its designated specifications should not be distributed for use. If the product is in process when the nonconformity occurs, the product should not proceed to the next step of the process. (For example, an instrument that fails inspection after cleaning because debris is still present in a lumen or in the ratchets should be returned to the decontamination area for further cleaning.) There need to be procedures to ensure that nonconforming product is not accidentally distributed or moved to the next step. When nonconforming product is identified, it must be quarantined or segregated from other products and an investigation conducted to determine what caused the nonconformity and whether it is okay to use the product. Depending on the results of the investigation, corrective and/or preventive actions might need to be implemented. Corrective action involves deciding what steps can be taken to address and prevent the recurrence of a problem. Before deciding what corrective action steps to take, it is necessary to identify the root cause of the problem; actions to prevent recurrence of the problem can then be taken. A decision needs to be made as to the disposition of the affected product:

- Destruction of the product
- Rework or reprocessing of the product
- Use of the product as is

The final decision will depend on what the investigation reveals. Sometimes it is possible to predict that a particular problem might occur. Preventive action involves analyzing processes to determine if there is potential for a particular problem to occur. When a potential problem is identified, steps can be developed that will prevent the problem from occurring. The difference between corrective and preventive action is the difference between being reactive versus being proactive. It is best to prevent problems when possible. Unfortunately not all problem occurrences can be predicted.

Quality Audits

Quality audits should be conducted periodically to ensure that the quality policies and procedures are being adhered to. The purpose of a quality audit is to ensure that the quality system is in compliance with the specified requirements and to determine the effectiveness of the quality system. The frequency of the audits

depends on the complexity of the process being audited, the difficulty of performing the steps of the process, the importance of the activity being audited, the severity of a problem that might occur because of noncompliance, and the number of issues that are found during previous audits. As a quality system matures, it might be possible to reduce the number of quality audits performed. At minimum, a quality audit of the entire quality system should be conducted annually. Additional audits of specific areas may be conducted based on the criteria described above.

Personnel conducting a quality audit should not have direct responsibility for the process or product being audited. If possible, personnel who have no production responsibility should conduct all audits. In any case, the person performing the audit cannot audit his or her own work.

The results of a quality audit must be documented, and these results should be provided to the person responsible for the area where any problems were identified. A formal report should become part of the quality documentation and should be reviewed as part of management review meetings. Any issues identified during a quality audit must be reviewed and appropriate corrective action developed and implemented. Audits should be followed up to ensure that the corrective actions taken were effective in preventing recurrence of the same problem.

Figure 3 is an example of an audit form.

Change Control

Change control, an integral part of quality management, is a systematic approach to managing all changes that might occur when producing a product. It is very important that any changes in the production process are controlled so that all personnel who need to be aware of the change are informed. When a procedure is put into place, it is sometimes discovered that there might be a better way to perform it. Or, the component list for a product is updated (e.g., instruments might be added to or subtracted from an instrument tray as techniques or surgeons at a healthcare facility change). Employees need to understand that it is not acceptable to just begin performing a procedure in a new way, and that if a customer requests a change in a product, the person who receives the request cannot just go ahead and change the product or process. There must be a formal procedure in place for handling requests for changes in products or processes. Change requests may be made verbally, in writing, or on a change request form. (Verbal change requests should be documented, and there should be a follow-up signature from the requesting person verifying that the requested change was understood.) Whichever method is used, it is very important that the request is categorized

and recorded. An assessment of the change, its importance, and the difficulty of implementing the change should be part of the documentation.

Each change request should be formally reviewed and a decision made on whether the change will be accepted. The decision and the reasons for the decision should be documented and reported to the party who made the change request. Some requests don't require an in-depth analysis, and it will only take a few minutes to decide whether to accept the change, to implement the change if accepted, and then to inform the requesting party of the decision and its implementation. (For example, a request for the removal of a particular surgical instrument from an instrument tray because the instrument is no longer used can be handled quickly.) Other change requests must be analyzed in some detail to determine whether the current method or the proposed method is the best way to perform the procedure. This type of change might require use of various quality management tools, such as a Pareto chart, a fishbone diagram, or a failure mode and effects analysis (FMEA).

Once a change is accepted, a person or team is assigned responsibility for the change. This person or team will create a plan for designing and implementing the change. Each step of the implementation is monitored and, if needed, the change is rolled back should it be deemed that the plan does not work. At the end of the implementation, a final assessment is performed to ensure that the change is having the desired effect. If necessary, the steps for evaluating and analyzing the change are repeated with additional implementation steps until the change is satisfactory.

New Products

New products are developed periodically for several reasons:

- A specific customer request is received.
- An improvement in production technology becomes available.
- Improvements in construction materials become available.
- Manufacturing production designs are improved.
- Business is being lost because a better product is available from a competitor.

Medical device manufacturers and healthcare facility sterile processing departments should review their production processes and products to ensure that they continue to meet their customers' needs.

It is necessary to review the new product and meet with potential customers to determine if the new product will meet a customer's

needs. If customers do not perceive a need for the product, it might not make sense to develop it. Sometimes it might be necessary to point out how the customer's needs will be met by the new product or possibly explain how the product change will enable the facility or department to provide the product at reduced cost, faster, or with some other intangible benefit (to the customer). The facility or department will also need to work with the customer to evaluate the product and help the customer determine if the product will meet the customer's needs. Sometimes a focus group can be used to determine how much interest there is in the proposed new product. If it is determined that there is a need for the product, the facility or department needs to look to the change control process to formulate a plan to develop and begin production of the new product.

Depending on the extent of the change to a product or the features of a new product, the customer might want to conduct a formal evaluation of the product before the change is made. The facility or department will want to work with the customer to

conduct a product evaluation and formal review of the product. The review of new products will usually include the following steps:

- Establishment of a multidisciplinary committee
- Review of how the product will contribute to safety
- Review of how the product will improve process flow, costs, ease of product use, environmental impact, and/or product standardization
- Review of the opinions of experts or peers who currently use the product or a similar product
- Determination of the compatibility of the product with existing product and processes
- Determination of the employee training that will be needed

The new-product review and decision should be documented.

Management Review Audit Form

DATE _____

AUDITOR _____

Parameter	Yes	No	Comments
Management Review meetings are conducted at least annually?			
Each department is represented at the management review meetings?			
A quality policy and objectives have been established?			
Corrective and preventive action reports are included in the management review meeting?			
Customer complaints are analyzed for root cause?			
Implementation plans for customer complaints are reviewed for adequacy?			
Customer complaints and corrective/preventive actions are reviewed for potential trends?			
Resources needed to accomplish the quality objectives are reviewed at the management review meetings?			

COMMENTS _____

FIGURE 3 Example of an Audit Form

