

Measurement of liquid flow in open channels —

Part 2: Dilution methods —

Part 2A: General

Committees responsible for this British Standard

The preparation of this British Standard was entrusted by the Electrotechnical Sector Board to Technical Committee PCL/3, upon which the following bodies were represented:

- Clyde River Purification Board
- Department of the Environment
- Institute of Measurement and Control
- Institution of Water and Environmental Management
- National Rivers Authority
- Water Services Association of England and Wales
- Welsh Office

The following bodies were also represented in the drafting of the standard, through subcommittees and panels:

- Institute of Hydrology
- Water Research Centre

This British Standard, having been prepared under the direction of the Electrotechnical Sector Board, was published under the authority of the Standards Board and comes into effect on 15 January 1995

© BSI 06-1999

The following BSI references relate to the work on this standard:
Committee reference PCL/3
Draft for comment 92/34385 DC

ISBN 0 580 23541 6

Amendments issued since publication

Amd. No.	Date	Comments

Contents

	Page
Committees responsible	Inside front cover
National foreword	ii
Introduction	1
1 Scope	1
2 Normative reference	1
3 Definitions	1
4 Symbols and units	4
5 Principles of the different dilution methods	5
6 Characteristics common to both methods	6
7 Choice of tracer	11
8 Choice of measuring reach	12
9 Procedure for the constant rate injection method	20
10 Procedure for the sudden injection method	25
11 Comparison between the two dilution methods	30
12 Estimation of uncertainties	32
Annex A (normative) Standard dilutions using pipettes and flasks	46
Annex B (normative) Standard dilution ranges obtained with a micrometer-type microburette	47
Annex C (normative) Analysis for variance as a test of non-randomness	49
Annex D (informative) Bibliography	50
Figure 1 — Relation between ε and c_2	12
Figure 2 — Curves of appearance and disappearance of tracer for a sudden injection — Shapes of curves of concentration against time and distance	18
Figure 3 — Curves of appearance and disappearance of tracer used to determine a suitable duration of injection T_i for a gauging by the constant rate injection method — Shapes of curves of concentration against time and distance	19
Figure 4 — Constant level tank for the injection of tracer solution at constant rate	22
Figure 5 — Use of a constant-rate pump for injection of tracer solution at constant rate	23
Figure 6 — Mariotte constant head vessel	24
Figure 7 — Floating siphon device	24
Figure 8 — Typical sampling curves	27
Figure 9 — Obtaining mean samples	28
Figure 10 — Obtaining several mean samples	31
Figure 11 — Pump with manifold for multiple sampling	32
Table 1 — Values of the coefficient k	15
Table B.1 — Preparation of standard dilution ranges using a micrometer-type microburette	48
Table B.2 — Micrometer turns for ranges with mid-values N_0	48
Table C.1 — Instrument readings	49
Table C.2 — Sums of squares of values from Table C.1	49
Table C.3 — Instrument readings	50
Table C.4 — Sum of squares of values from Table C.3	50
List of references	Inside back cover

National foreword

This Part of BS 3680 has been prepared under the direction of the Electrotechnical Sector Board. It is identical with ISO 9555-1:1994 *Measurement of liquid flow in open channels — Tracer dilution methods for the measurement of steady flow — Part 1: General*, published by the International Organization for Standardization (ISO).

This is one of a series of Parts of BS 3680 on dilution methods, as follows:

- *Part 2A:1994: General*;
- *Part 2B:1993: Radioactive tracers*;
- *Part 2C:1993: Chemical tracers*;
- *Part 2D:1993: Fluorescent tracers*.

These four Parts of BS 3680 supersede BS 3680-2A:1964, BS 3680-2B:1986, and BS 3680-2C:1983 which are withdrawn.

Cross-references

The Technical Committee has reviewed the provisions of ISO 772:1988, to which normative reference is made in the text, and has decided that they are acceptable for use in conjunction with this standard.

Informative reference is also made to the following standard:

ISO 8363:1986	BS 3680 <i>Measurement of liquid flow in open channels</i> Part 3G:1990 <i>General guidelines for the selection of methods</i>
---------------	---

A British Standard does not purport to include all the necessary provisions of a contract. Users of British Standards are responsible for their correct application.

Compliance with a British Standard does not of itself confer immunity from legal obligations.

Summary of pages

This document comprises a front cover, an inside front cover, pages i and ii, pages 1 to 50, an inside back cover and a back cover.

This standard has been updated (see copyright date) and may have had amendments incorporated. This will be indicated in the amendment table on the inside front cover.

Introduction

The former standard series ISO 555 was subdivided into parts on the basis of the method of field measurement, i.e. constant-rate injection method and integration (sudden injection) method. Since the choice of the type of tracer to be used in a field measurement will often depend on the expertise and the laboratory facilities available, this new series of standards ISO 9555 is divided into parts based on the type of tracer used. This revision has enabled the unnecessary repetition of text of the various parts to be avoided and will, it is hoped, prove to be a more convenient form of presentation for the user.

ISO 9555 deals with the measurement of steady flow in open channels by dilution methods using tracers. The methods described may also be applied to the measurement of slowly varying flow, but they may only be used when flow conditions ensure adequate mixing of the injected solution throughout the flow.

For the measurement of very large flows, tracer methods can be onerous in terms of tracer costs and measurement times. However, the use of tracers often reduces danger to personnel during flood periods.

ISO 9555-1 presents the general principles of the methods of constant rate injection and integration (sudden injection). ISO 9555-2, ISO 9555-3 and ISO 9555-4 deal with the specific aspects of the use of radioactive, chemical and fluorescent tracers, respectively, as well as specific analytical procedures.

This approach has been adopted for the following reasons:

- to facilitate subsequent updating, additions or revisions which concern only ISO 9555-2, ISO 9555-3 or ISO 9555-4;
- to provide a more practical document for the user, who is often obliged to choose the tracer best suited to the available analytical equipment.

1 Scope

This part of ISO 9555 concerns principles of the constant rate injection method and the sudden injection method (integration method), and the principles of injection, sampling and analysis which apply for all types of tracer.

It is important to note that the tracers used and their concentrations should be compatible with the legislation of each country regarding the occasional and short-duration discharges of foreign substances into natural waters. They should also take into account possible short-term or long-term influences on flora and fauna, both natural and domestic. In the absence of appropriate regulations, the World Health Organization's (WHO) *Guidelines for drinking water quality* should serve as a guide, taking account of the brief nature of the measurement and of the use that is to be made of water receiving the injected tracer.

2 Normative reference

The following standard contains provisions which, through reference in this text, constitute provisions of this part of ISO 9555. At the time of publication, the edition indicated was valid. All standards are subject to revision, and parties to agreements based on this part of ISO 9555 are encouraged to investigate the possibility of applying the most recent edition of the standard indicated below. Members of IEC and ISO maintain registers of currently valid International Standards.

ISO 772:1988, *Liquid flow measurement in open channels — Vocabulary and symbols*.

3 Definitions

For the purposes of this part of ISO 9555, the definitions given in ISO 772 and the following definitions apply.

3.1 tracer

ion, compound or radionuclide introduced into a flow system to follow the behaviour of some component of that system. It is necessary that the tracer, which can be observed, behave in exactly the same fashion as the component to be followed, whose behaviour cannot easily be observed

3.2 dilution method

method in which the discharge is deduced from the determination of the ratio of the concentration of the tracer injected to that of the tracer at the sampling cross-section (see also 3.9)

3.3

constant rate injection method

method of measuring the discharge in which a tracer is injected at a constant and known rate at one cross-section and its dilution is measured at another section downstream where complete mixing has taken place and the concentration plateau has been reached

3.4

sudden injection method; integration method

method of measuring the discharge in which a known volume of tracer is injected over a short time at one cross-section and its dilution is measured at another cross-section downstream where complete mixing has taken place, over a period sufficient to allow all the tracer to pass that cross-section, so that the mean dilution of tracer during this period can be determined

3.5

multiple injection

simultaneous injection of tracer at several points in the injection cross-section, with the aim of improving transverse mixing in a given measuring reach

3.6

constant level tank

equipment for the injection of the concentrated solution at constant rate, in which, using an overflow weir, a constant head is maintained above a selected nozzle or orifice

3.7

Mariotte vessel

equipment for injection of the concentrated solution at constant rate. The constant rate injection is achieved by means of an airtight vessel that is provided with an orifice plate or nozzle at its bottom portion. The liquid flows through the restriction and air enters the vessel through a tube, maintaining atmospheric pressure at the lower end of the tube, set at a determined height above the restriction. The head on the restriction and consequently the discharge from the vessel remain constant, independently of the level of the liquid in the vessel

3.8

floating siphon

equipment for injection of the concentrated solution at constant rate. The solution is taken from a vessel by means of a siphon that is fixed on a float. The lower end of the siphon is fitted with an orifice plate or nozzle. The head on the restriction and consequently the discharge from the vessel remain constant, independently of the level of the liquid in the vessel

3.9

dilution ratio; dilution factor

- 1) For the constant rate injection method, the ratio between the concentration of the injected tracer solution and the concentration of added tracer detected at the sampling cross-section when steady conditions have been reached.
- 2) For the sudden injection method, the ratio between the concentration of the injected tracer solution and the mean, over the sampling period, of the concentration of added tracer detected at the sampling cross-section.

3.10

sampling cross-section; sampling station

cross-section of an open channel downstream of the injection cross-section, at which samples are taken or in which the concentration is directly measured

3.11

reach

length of open channel between two defined cross-sections

3.12**degree of mixing**

measure of the extent to which mixing has been achieved in a cross-section downstream of the injection of tracer, varying from near zero in a cross-section immediately downstream of the injection to 100 % at a cross-section in which the tracer has been completely mixed across the whole cross-section

3.13**mixing length**

distance, measured along the general path of flow, between the injection cross-section and the downstream cross-section at which the specified degree of mixing is obtained. For given conditions, this mixing length is not a fixed value: it varies according to the admissible values for the degree of mixing. The higher the specified degree of mixing, the longer the mixing length

4 Symbols and units

4.1 Symbols

The symbols used in this part of ISO 9555 are given below. Other symbols not listed here are used only in passing and are defined where used.

Symbol	Explanation
$\bar{b}$	Average stream surface width between the injection and sampling cross-sections
c_0	Background concentration of tracer
c_1	Concentration of tracer in injection solution
c_2	Concentration of added tracer
c'_1	Concentration of diluted injection solution ($c'_1 = c_1/D'$)
c'_{ri}	Relative concentration corresponding to standard dilution D'
D	Dilution factor
D'	Estimated dilution factor used in dilution of injection solution
D'_i	Standard dilution
$\bar{d}$	Average depth of flow between injection and sampling cross-sections
E	Transverse mixing coefficient
G	Instrument response
g	Acceleration due to gravity
L	Mixing length
M, m	Mass
m	Number of sampling points
n	Number of samples or measurements
Q	Stream discharge
Q'	Estimated stream discharge
q	Injection rate
r_h	Mean hydraulic radius
S	Energy slope
T_c	Duration of steady state concentration
T_i	Duration of injection
T_p	Time of passage of tracer through the sampling cross-section
t	Elapsed time, usually taking as the origin the start of injection
t_a	Time of arrival of first molecule of tracer at a given sampling cross-section
t^*	Mean time of travel
V	Volume of tracer solution injected
$\bar{v}$	Mean velocity
v^*	Shear velocity, equal to $(gr_h S)^{1/2}$
x	Degree of mixing
ε	Level of accuracy of analysis
θ	Lowest temperature likely to be met during gauging

4.2 Subscripts

c	Concentration
z	Exponent

NOTE 1 A bar (–) is used above the symbol to indicate an averaging process; further averaging is indicated by a double bar (=).

NOTE 2 For convenience in the use of this part of ISO 9555, some of the symbols and their definitions are not consistent with those defined in ISO 772.

4.3 Units of measurement

The units of measurement used in this part of ISO 9555 are those of the International System of Units (SI).

5 Principles of the different dilution methods

The basic principle of dilution methods is the addition of a suitably selected tracer to the flow. Downstream of the injection point, when vertical and lateral dispersion throughout the flow is complete, the discharge may be calculated from the measurement of the dilution of the tracer.

If this tracer, or a substance with analytical characteristics similar to the injected tracer, was present in the flow before the injection, the increase in concentration of tracer due to the injection is known as the “concentration of added tracer”. The methods set out in this part of ISO 9555 permit the calculation of the discharge regardless of the prior concentration of tracer, analogous with background noise, as long as this can be assumed constant during the measurement.

5.1 Constant rate injection method

A solution of concentration c_1 of a suitably chosen tracer is injected at a constant rate q into a cross-section located at the beginning of the measuring reach of the channel, in which the discharge Q remains constant for the duration of the gauging.

At a second cross-section downstream of this reach, at a sufficient distance for the injected solution to be uniformly diluted, the concentration is measured for a sufficient period of time and at a sufficient number of points to ensure that good mixing has been obtained and that the concentration of added tracer c_2 has attained a constant value. Under these conditions, if all of the tracer injected passes through the sampling cross-section, the discharge rate of tracer at the injection points is equal to that passing through the sampling cross-section:

$$qc_1 = (Q + q)c_2$$

Hence:

$$Q = q \frac{c_1 - c_2}{c_2} \quad \dots(1)$$

In general c_1 is much greater than c_2 and this leads to a simplification of equation (1) as follows:

$$Q = q \frac{c_1}{c_2} \quad \dots(2)$$

The discharge Q can therefore be determined by comparing the concentration of the injection solution with that measured at the sampling cross-section of the channel.

5.2 Sudden injection method

A volume V of a solution of concentration c_1 of a suitably chosen tracer is injected over a short period into a cross-section located at the beginning of the measuring reach of the channel, in which the discharge Q remains constant for the duration of the gauging.

At a second cross-section downstream of this reach, at a distance sufficient for the injected solution to be uniformly diluted, the concentration of tracer c_2 is determined over a period of time sufficiently long to ensure that all the tracer has passed through the second cross-section.

If all the tracer injected passes through the sampling cross-section, the following equation is true:

$$M = Vc_1 = Q \int_{t_i}^{\infty} c_2(t) dt \quad \dots(3)$$

where

- M is the mass of tracer injected;
- V is the volume of injected solution;
- c_1 is the concentration of tracer in the injected solution;
- Q is the discharge in the channel;

$c_2(t)$ is the concentration of added tracer at the fixed sampling point over the time interval d_t ;

t is the elapsed time, taking as origin the instant at which the injection started;

t_a is the time of arrival of the first molecule of tracer at the sampling cross-section.

This equation requires that the value of the integral

$$\int_{t_a}^{\infty} c_2(t) dt$$

be the same at every point of the sampling cross-section. This condition is satisfied if and only if the injected solution is well mixed with the water in the channel.

In practice, the presence of the tracer is no longer detectable at any point in the sampling cross-section after a certain time $(t_a + T_p)$. The value T_p is known as the “time of passage of the tracer cloud through the sampling cross-section”.

Let

$$\bar{c}_2 = \frac{1}{T_p} \int_{t_a}^{t_a + T_p} c_2(t) dt$$

The practical condition of good mixing is that $\bar{c}_2$ is identical at all points of the section, hence

$$Q = \frac{Vc_1}{T_p \bar{c}_2} \quad \dots(4)$$

V/T_p is the mean discharge of added tracer in the sampling cross-section, and is analogous with the injection rate q defined in 5.1.

6 Characteristics common to both methods

6.1 General formula for the calculation of discharge

Relations (2) and (4) can be written in the general form:

$$Q = kD \quad \dots(5)$$

For measurement by constant rate injection, D is the dilution factor ($= c_1/c_2$) and $k = q$.

For measurement by sudden injection, $D = c_1/\bar{c}_2$ and $k = V/T_p$.

The dilution factor, D , which is the fundamental concept of the dilution method, is determined by comparative analysis of samples of the injection solution and samples taken from the sampling cross-section.

This determination, although certain aspects are peculiar to the tracer and to the associated method of analysis, rests on several general principles which are presented below. The details of the specific methods of determination for the commonly-used tracers are given in ISO 9555-2, ISO 9555-3 and ISO 9555-4.

6.2 Separate determination of tracer concentrations in the channel and in the injection solution

The practice of dilution gauging shows that in most cases the pursuit of maximum effectiveness and convenience leads to a reduction in the total quantities injected, and to a dilution factor, D , which attains high values, of the order of 10^3 to 10^8 .

All analytical procedures, whatever the tracer, the apparatus or the method of analysis, are based on the existence of a physical relation between the concentration of tracer and a measurable quantity $G = G(c)$, for which the analytical instrument provides a value G_i corresponding to c_i . Experience shows that it is difficult, if not impossible, directly to obtain comparable accuracy for independent measurements of concentrations varying in so high a ratio as D with the same instrument or method of analysis.

6.2.1 Direct determination of c_1 and $\bar{c}_2$

Procedures for the direct determination of c_1 and $\bar{c}_2$ are not recommended and thus are not discussed in this part of ISO 9555.

6.2.2 Indirect determination of c_1 and direct determination of $\bar{c}_2$

Where the analytical method leads to an instrument response which is a linear function of concentration in the range from zero to the usual value of c_2 , the following procedure of indirect determination of c_1 can be used. The solution of concentration c_1 is diluted by a factor D' , of the same order as D , to obtain concentration $c'_1 = c_1/D'$ and c_2 of the same order of magnitude. This permits use of the same method for the determination of c'_1 and c_2 with comparable accuracy. For this purpose, a sample of injection solution is diluted by the gravimetric method using a precision balance, or by the volumetric method using flasks, calibrated pipettes or microburettes, preferably with water taken from the flow upstream of the injection cross-section or before the test.

This method of determination is a simplified variant of the procedure described in 6.3.

6.3 Direct determination of the dilution factor

The method of comparative or standard dilutions is particularly recommended because it minimizes the effects of systematic errors in the determination.

6.3.1 Principle

After estimating D' from the dilution factor D [using formula (5)] from the test conditions and from the estimate Q , however rough, of the discharge Q to be measured, the method consists of preparing a series of standard dilutions of a sample of the injected solution, having known dilution factors $D'_1, D'_2, \dots, D'_n$ surrounding the estimated value D' .

The analytical equipment is then used as a comparator to determine the value of the dilution factor D . The basic requirements of the equipment are thus sensitivity and stability. The latter is necessary only during the analysis of samples corresponding to a single flow measurement.

Experience shows that the ratio D'/D rarely falls outside the range 0,5 to 2. It is therefore possible to use the analytical equipment in the vicinity of its optimum range of sensitivity and accuracy.

Let $G'_1, G'_2, \dots, G'_n$ be the responses of the analytical equipment for standard dilution factors $D'_1, D'_2, \dots, D'_n$ and let $G_1, G_2, \dots, G_n$ be the responses of the analytical equipment for given river samples corresponding to unknown dilutions $D_1, D_2, \dots, D_n$.

It is then necessary to obtain the dilutions D_i corresponding to the responses G_i by using the relation between D' and G' established for the analytical equipment.

This relationship is established either graphically or by using a mathematical function.

As the response of analytical instruments is generally a linear function of concentration, it is logical to use the concept of relative concentration $c'_{ri} = 1/D'_i$.

The graphical representation of the relation $G' = G'(c'_r)$ is a simple means of checking its linearity and the accuracy of preparation of the standard dilutions.

6.3.2 Application to measurement by the constant rate injection method

When the gauging is performed in good conditions, the scatter of the G_i about their mean G is small, and a small number of standard dilutions suffices to define the response function over the range used ($D'/2$ to $2D'$).

6.3.3 Application to measurement by the sudden injection method

The necessary range of G'_i varies according to the method of sampling selected (see 10.4.2). In the case of a mean sample (see 10.4.2.3) or several mean samples (see 10.4.2.4), conditions differ little from those of the constant rate injection method.

In the case of discrete samples (see 10.4.2.2) or continuous recording, the concentration c_{2i} of the samples may vary over a very large range, and it is necessary to determine the response of the analytical equipment by a larger number of standard dilutions distributed over an interval which could extend for example from $D'/10$ to $10D'$.

6.3.4 Preparation of standard dilutions

6.3.4.1 Definition

The set of standard dilutions required is defined by the number of standard dilutions, their range and their distribution around the central value.

The range is a function of the accuracy with which field conditions permit the estimation of the dilution factor D' , which corresponds to the central value¹⁾. The set of dilutions will comprise five to seven values, in a sequence approximating a geometric sequence.

For example, using either dilution D_i ($= 1/c_{ri}$) or relative concentration (c_{ri}), most purposes can be served by selecting seven consecutive values from the following reference series, multiplied by a factor of 10^2 . The range can be extended by choosing alternate values.

For relative concentrations:

0,8; 1; 1,25; 1,5; 2; 2,5; 3; 4; 5; 6; 8; 10; 12,5

For dilutions:

12,5; 10; 8; 6,4; 5; 4; 3,2; 2,5; 2; 1,6; 1,25; 1; 0,8

The establishment of standard ranges of this type, associated with a detailed laboratory procedure, allows significant savings of time in preparation and analysis in the laboratory or in the field, gives measurements which are more comparable, and aids in the choice of the most appropriate equipment for the smallest suitable number of dilutions.

Two methods can be used to obtain the sets of standard dilutions: the volumetric method and the gravimetric method.

6.3.4.2 Volumetric method

This method uses calibrated glassware (i.e. pipettes, flasks and microburettes) to prepare the required series of standards by successive dilution operations. Essential precautions for obtaining suitable accuracy by this method are as follows:

- select, from the apparatus conforming to the relevant standards, that which is most convenient to use and provides an accuracy appropriate to the problem;
- avoid in particular pipettes of volume less than 10 ml and flasks of volume less than 250 ml. One-mark bulb-type pipettes, which are most easily handled, are preferred;
- follow scrupulously the recommendations for use laid down in the relevant standards;
- maintain all glassware in a perfect state of cleanliness and discard any equipment which is chipped or stained.

6.3.4.2.1 Use of pipettes and flasks only

This is the least sophisticated and the least expensive procedure, but it is not always possible to obtain conveniently the values proposed for the reference series. A guide to the procedure and a list of recommended equipment is presented in Annex A.

To obtain the best results, the following additional recommendations are useful:

- one series of pipettes and flasks should be clearly marked and reserved for the initial dilution operations which involve the highest concentrations and the greatest risks of persistent contamination, despite washing;
- each pipette should be rinsed several times with the solution which it is to deliver;
- it is recommended that tests of the effectiveness of cleaning procedures be performed regularly, for example by rinsing supposedly clean equipment with distilled water and examining for tracer in the rinse water;
- the work plan of the laboratory should be rigorously organized to separate the zones of preparation of samples, for first dilutions of intermediate concentration and for standard dilutions, to avoid accidental contamination.

Disadvantages of this method are

- the inconvenience of its use in the field;
- in the case of large dilution factors, the number of successive dilutions necessary, which prolongs the operation and leads to a possible loss of accuracy.

The advantage of this method is that the equipment can be easily obtained at moderate cost, even for equipment of the highest accuracy.

¹⁾ This range is also dependent on the method used (see 6.3.2 and 6.3.3)

Although the methods set out in 6.3.4.2.2 and 6.3.4.3 are preferred, it is desirable to have the necessary equipment for the application of this method in emergencies.

6.3.4.2.2 Microburettes

Microburettes (also known as microsyringes) consist of a cylinder containing a piston which is driven by a manually controlled micrometer device (hand-operated type) or by an electromechanical device; some types permit the delivery of volumes adjustable continuously from 0,01 ml to 0,5 ml with an accuracy better than 0,5 %. Thereby it is possible to obtain very conveniently suitable ranges of standards distributed around the reference dilution D' , by injecting directly into a series of beakers containing for example 50 ml of river water. Under these conditions and depending on the final accuracy required, it may be necessary to carry out a strength correction of the dilution due to the addition of the volume V delivered by the microburette into the reference volume, V_{ref} , of the standard dilution, $[V/(V_{\text{ref}} + V)]$ instead of V/V_{ref} .

It is possible, using for the first dilution either a pipette and a flask or another microburette, to obtain dilution factors of 10^6 or 10^7 with only two successive dilution operations.

The advantages of microburettes are

- a reduction in the amount of glassware necessary, in the length of the dilution operations and in the quantities of background water necessary for the standard dilutions;
- a consistent accuracy, practically independent of the dilution factor. Moreover, their compact size permits their use in the field.

As in the use of the pipette-flask procedure, it is possible to define predetermined ranges of standards, in order to distribute the dilutions evenly around the estimated value, avoiding the loss of time caused by calculation for each analysis and limiting the necessary glassware (see Annex B).

6.3.4.3 Gravimetric method

This method uses similar glassware, but does not rely on its precise calibration, the dilution factor of each successive operation being determined by weighing on a precision balance. The sequence of operations is described below:

- a) Determine the volume V of the required diluted solution and the volume V_1 of the solution to be diluted considering the desired dilution factor $D = V_1/V$.
- b) Fill a small vessel, e.g. an ampoule or syringe, of suitable capacity with a volume approximately equal to V_1 of the solution to be diluted, seal the ampoule and weigh it: its mass is m_2 .
- c) Weigh an empty flask of volume V_0 ; its mass is M_1 . Fill it partly with the diluent water, then add to it the contents of the ampoule.
- d) Top up to volume V_2 with the diluent water and weigh: its mass is M_2 .
- e) Weigh the ampoule with its residue: its mass is m_1 .
- f) Calculate the exact value of the dilution factor by the relation:

$$D'_i = \frac{M_2 - M_1}{m_2 - m_1}$$

This process should be repeated for each dilution operation.

It is necessary to use a highly accurate balance for the weighing operations. Such equipment is costly, but the gravimetric method can give very accurate results for large dilution factors. This method is particularly recommended for radioactive tracers, because it permits remote handling and with these tracers the number of standard dilutions is much reduced.

6.4 Influence of background — Clarification

6.4.1 Background noise

If the conditions of preparation of the standard dilutions D'_i are such that they are strictly comparable with the samples taken from the sampling cross-section, there is no need to take account, in calculation of the discharge, of the initial concentration c_0 of tracer, or of a substance having similar analytical characteristics, existing in the flow before the addition of c_2 , as long as it can be considered constant over the duration of the measurement. It is sufficient if the standard dilutions are prepared with water taken from the flow to be measured, either upstream of the point of injection during the measurement, or in the sampling cross-section before the measurement. The procedure recommended in 6.3 permits the calibration of the measuring instrument, taking into account implicitly the effect of c_0 .

A sample of background water with no tracer added may be used as a blank, which should be treated in exactly the same way as the other samples to be analysed; it is then possible to estimate the overall “background noise” of the analysis, which may partially be caused in particular by the presence of tracer in the flow.

This operation is essential where standard dilutions have not been made up with water taken from the flow. However, as this blank is usually equivalent to a very high value of the dilution factor, the reading corresponding to it is far outside the working range adopted for the determination of D . A significant risk of inaccuracy can thus result and this reading cannot be used in the determination of the response function $G' = G'(c')$. This result is nevertheless a useful element in the interpretation of the analysis.

6.4.2 Sample pretreatment (clarification of samples and standard dilutions)

Where samples are brought from the field to the laboratory for analysis, certain tracers may be subject to losses caused by adsorption onto organic or inorganic sediments. Adsorption problems encountered in the use of specific tracers are detailed in ISO 9555-2, ISO 9555-3 and ISO 9555-4. However, the practice of decantation and filtration recommended applies to any tracer, and is outlined in this subclause.

Adsorption onto sediment is most likely to be a problem with finely-divided suspended material, which has a high surface area. If the river water contains suspended solid matter, several remedies may be considered.

- a) A simple decantation may be sufficient to clear the samples. In this case the standard dilutions shall be made up with background water carefully agitated beforehand. The flasks containing samples and standard dilutions shall be of identical shape, and the decantation times shall also be identical.
- b) If decantation does not suffice to clear the water, samples and standard dilutions prepared with turbid background water may be filtered, as soon as possible after collection, using a portable vacuum filtration unit or syringe-mounted filters. Glass-fibre filters capable of removing all material larger than $2\ \mu\text{m}$ are suitable for general use; smaller particles, down to $0,45\ \mu\text{m}$, can be removed by membrane filters. It is necessary to change the filter if it becomes clogged, or if samples of different concentrations are to be filtered, and to saturate the filter with the solution to be filtered before each operation. For this purpose a certain quantity of the solution to be analysed is filtered and discarded, only the liquid subsequently filtered being retained for measurement.
- c) If the water is laden with colloidal clay material and clogs the filters rapidly, it is possible to accelerate the preliminary decantation by adding to the samples a known volume of a solution of aluminium sulfate for simple cases, or of sodium silicate followed by aluminium sulfate for the more difficult cases.

Preliminary tests will be necessary with all sample treatments to establish that no apparent or real changes in tracer concentration result, for example from uptake or release of tracer by the filter media. It is recommended that samples and standard solutions be treated in a rigorously identical fashion.

6.5 Accuracy and limitations of the dilution method

The general formula for the calculation of discharge

$$Q = kD$$

can be written

$$Q = kD'r_c$$

where

D' is the standard dilution closest to the experimental value D ;

r_c is a correction coefficient (often close to unity) determined by the measuring instrument.

It is clear that the uncertainty in Q is the combination of the uncertainties in k , D' and r_c .

The uncertainty in k (q or V/T_p) is generally easily reduced by using classical methods of repeated sampling and measurement (see 9.3 and 10.2).

The uncertainty in D' is one of the factors limiting the field of application of the method. In fact, for a given tracer, injection device and measuring instrument the maximum measurable discharge is proportional to the ratio.

$$D' = \frac{c_{1\text{ max}}}{c_{2\text{ min}}}$$

where

$c_{1 \text{ max}}$ is the maximum injectable concentration;

$c_{2 \text{ min}}$ is the minimum measurable concentration.

This ratio can reach values in excess of 10^7 with certain tracers. It is necessary therefore to prepare standard dilutions of this order with an accuracy approaching 1 % (gravimetric method or volumetric method followed meticulously, see 6.3.4).

The uncertainty in r_c depends on the method of analysis, on the instrument and on the concentration c_2 , and it increases as c_2 approaches $c_{2 \text{ min}}$. It also involves the sensitivity of the analysis, which can be defined as the ratio, $\Delta G/\Delta c_2$, of the change in response of the instrument to the change in concentration around the usual values of G and c_2 analysed.

7 Choice of tracer

The tracers to be used in practice shall conform as closely as possible to the ideal tracer, whose characteristics are described in 7.1.

7.1 Characteristics required of a measuring tracer

7.1.1 Hydraulic and physicochemical characteristics

A good flow tracer shall have a hydrodynamic behaviour identical with that of molecules of water. This property shall not be altered by a change of chemical form or possibly of phase due to an interaction with the medium, nor by variations of temperature which can occur in the course of the gauging.

When the application of a tracer requires the use of a solvent, the solution obtained shall have a density close to that of the flow, to avoid segregation in the zone around the injection point.

The tracer shall not be retained by parts of the channel (material or vegetation) nor by material in suspension in the flow, in such proportions as to affect the desired accuracy of the measurement.

The tracer shall be stable in very dilute solution in natural waters under the influence of light and temperature, so as to permit a delay in analysis which may arise from the remoteness of certain gauging sites.

The tracer shall have the greatest possible solubility in water, to ensure convenience of use in gauging.

The tracer shall be analysable at the lowest possible concentration, to extend its use to the measurement of large flows.

7.1.2 Metrological characteristics

There shall be a well-defined physical or chemical relationship $G = G(c)$ between a measurable quantity G and the concentration c of the tracer in aqueous solution.

This relation shall be stable and precise over a large range of concentration around the usual value c_2 for samples taken from the sampling cross-section.

Examples are: the disintegration rate of a radioactive tracer, the Beer-Lambert Law for tracers analysed by colorimetry, the relation between concentration and conductivity for certain chemical tracers, the intensity of fluorescence for certain dye tracers, etc.

It shall be possible to establish this relation with an instrument which shall combine the following essential qualities:

- high sensitivity to low values of c_2 ,
- high stability over the period of analysis.

It is also desirable that the apparatus be sturdy, proven, easily available and of reasonable cost, and that it can be operated by a technician who is trained but not specialized, and maintained easily and inexpensively.

7.2 Criteria for comparison

7.2.1 Preliminary note

The choice of tracer depends on whether the aim is to find a tracer and an associated analytical procedure which covers a vast field of application and can be used for a large number of measurements, or on the contrary to find the optimal solution for a particular isolated application.

In these two cases the tracer shall satisfy the criteria enumerated in 7.1, but it is necessary, in making a choice, always to associate three elements: tracer, method of analysis and analytical instrument.


7.2.2 Definition of criteria

7.2.2.1 Minimum measurable concentration, $c_{2 \min}$, at a level of accuracy ε fixed at a given probability P (for example 95 %)

For each combination of tracer, method of analysis and analytical instrument, the relation $\varepsilon = f(c_2)$ is established, in which ε is defined by the expression (see also Figure 1):

$$\varepsilon = \frac{(T_1, T_2)_P}{c_2}$$

where $(T_1, T_2)_P$ is the confidence interval associated with a given probability P .

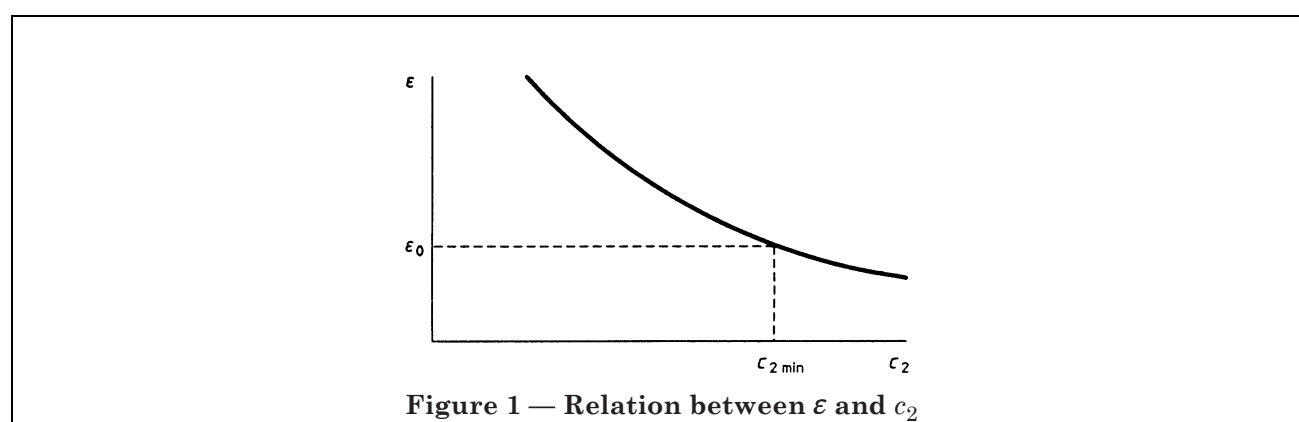

This relation, which involves the total number n of samples adopted for the measurement, permits the determination of the concentration $c_{2 \min}$ associated with a given value ε_0 (for example 1 %). In the comparison of different tracers, account is taken of the values of $c_{2 \min}$ so defined for fixed values of n , P and ε_0 .

7.2.2.2 Maximum dilution factor

It is possible to calculate, for each combination of tracer, method of analysis and analytical instrument, the ratio

$$D_{\max} = \frac{c_{1 \max, \theta}}{c_{2 \min, \varepsilon}}$$

where

$c_{1 \max, \theta}$ is the maximum concentration in water at θ °C (θ is the lowest temperature that is likely to be experienced by the injection solution);

$c_{2 \min, \varepsilon}$ is the minimum measurable concentration at ε %.

This relationship characterises the suitability of the given procedure for the measurement of large flows, and the convenience of its use.

8 Choice of measuring reach

8.1 General considerations on the choice of a site

The measuring reach shall be of length at least equal to the mixing length corresponding to the discharge to be measured (see 8.1.1). There shall be no disturbing gains or losses of tracer or of water in the measuring reach.

It is also desirable that the distance between the injection cross-section and the sampling cross-section be as small as possible: this leads to savings of time and tracer. In consequence, it is necessary to choose a reach where the river is as narrow and as turbulent as possible, where there are no dead water zones, and with numerous transverse currents to promote good lateral mixing, which is the most difficult to achieve. Vegetated zones, and zones where the river separates into branches, shall be avoided.

In all cases it is preferable to inject into a zone of high velocity flow, if possible towards the opposite bank if the injection is performed at one bank.

The sampling cross-section should be chosen in a narrow zone where there are no return currents and no dead water zones.

8.1.1 *Mixing condition*

The fundamental theoretical condition for the application of the dilution method is that the tracer should be adequately mixed with the river water at the sampling cross-section.

For the method of sudden injection, this condition can be written:

$$\int_{t_i}^{\infty} c_2(t) dt = \text{constant at all points of the section}$$

For the constant rate injection method, this identical condition is reduced to: c_2 is constant over the cross-section at the steady state, plateau condition.

In practice, the impossibility of obtaining perfect mixing in the field leads to the introduction of the concepts of degree of mixing (see 3.12) and mixing length (see 3.13).

The degree of mixing x cannot be measured exactly by multiple sampling in the measuring cross-section without preliminary knowledge of the distribution of flow in this cross-section. Nevertheless, for a degree of mixing higher than 90 % and m equally-spaced sampling points across the river, the following formulae, giving each sample equal weight, can be used as an approximation:

a) In the case of the sudden injection method, the degree of mixing is

$$x = 100 \left(1 - \frac{\sum_{i=1}^m |A_i - \bar{A}|}{2m\bar{A}} \right)$$

where

$$A_i = \int_{t_i}^{t_i + T_p} c_{2i}(t) dt$$

$$\bar{A} = \frac{1}{m} \sum_{i=1}^m A_i$$

b) In the case of the constant rate injection method, the degree of mixing is

$$x = 100 \left(1 - \frac{\sum_{i=1}^m |c_{2i} - \bar{c}_2|}{2m\bar{c}_2} \right)$$

To obtain the greatest accuracy in the flow measurement, it is necessary to have the largest possible value of x in the sampling cross-section.

For x greater than 90 %, the expected error in the flow can be as great as $2(100 - x)$ %. For this reason, a degree of mixing of at least 98 % is recommended for most measurements. It is also important to note that, to improve the mixing from $x = 90$ % to $x = 95$ %, the length of the measuring reach must be multiplied by about 1.4, and that a nearly identical multiplying factor is necessary to increase x from 95 % to 98 %.