



CGA P-56—2022

CRYOGENIC VAPORIZATION SYSTEMS—PREVENTION OF BRITTLE FRACTURE OF EQUIPMENT AND PIPING

THIRD EDITION

This document licensed for the sole use of the purchaser. It may not be shared with any other person or used after the expiration date without the express written permission of the CGA. Any unauthorized use, reproduction, distribution, or modification of this printed page will result in a \$5,000 liquidated damages fee plus loss of access to CGA publications for one year for your company.

Full document details: CGA P-56-2022

PREFACE

As part of a program of harmonization of industry standards, the Compressed Gas Association (CGA) has issued CGA P-56, *Cryogenic Vaporization System—Prevention of Brittle Fracture of Equipment and Piping*, jointly produced by members of the International Harmonization Council and originally published by the European Industrial Gases Association (EIGA) as EIGA Doc 133, *Cryogenic Vaporisation Systems – Prevention of Brittle Fracture of Equipment and Piping*.

This publication is intended as an international harmonized standard for the worldwide use and application of all members of the Asia Industrial Gases Association (AIGA), Compressed Gas Association (CGA), European Industrial Gases Association (EIGA), and Japan Industrial and Medical Gases Association (JIMGA). Each association's technical content is identical, except for regional regulatory requirements and minor changes in formatting and spelling.

PLEASE NOTE:

The information contained in this document was obtained from sources believed to be reliable and is based on technical information and experience currently available from members of the Compressed Gas Association, Inc. and others. However, the Association or its members, jointly or severally, make no guarantee of the results and assume no liability or responsibility in connection with the information or suggestions herein contained. Moreover, it should not be assumed that every acceptable commodity grade, test or safety procedure or method, precaution, equipment or device is contained within, or that abnormal or unusual circumstances may not warrant or suggest further requirements or additional procedure.

This document is subject to periodic review, and users are cautioned to obtain the latest edition. The Association invites comments and suggestions for consideration. In connection with such review, any such comments or suggestions will be fully reviewed by the Association after giving the party, upon request, a reasonable opportunity to be heard. Proposed changes may be submitted via the Internet at our web site, www.cganet.com.

This document should not be confused with federal, state, provincial, or municipal specifications or regulations; insurance requirements; or national safety codes. While the Association recommends reference to or use of this document by government agencies and others, this document is purely voluntary and not binding.

A listing of all publications, audiovisual programs, safety and technical bulletins, and safety posters is available via the Internet at our website at www.cganet.com. For more information contact CGA at Phone: 703-788-2700, ext. 799. E-mail: customerservice@cganet.com

Work Item 18-029
Atmospheric Gases and Equipment Committee

NOTE—Technical changes from the previous edition are underlined.

THIRD EDITION: 2022
SECOND EDITION: 2014
FIRST EDITION: 2006

© – Reproduced with permission from, the European Industrial Gases Association. All rights reserved.

Contents	Page
1 Introduction.....	1
2 Scope and purpose	1
3 Definitions.....	2
4 Types of vaporizers	4
4.1 High thermal ballast vaporizers	4
4.2 Low thermal ballast vaporizers	5
5 Causes and consequences of low temperature	5
5.1 Causes of low temperature.....	5
5.2 Consequences of low temperature.....	6
6 Design philosophy	7
6.1 Inherent safety.....	7
6.2 Risk assessment	8
6.3 Reliability of customer supply	9
7 Ranking of hazards	9
7.1 Pressure volume energy.....	10
7.2 Hazard of fluid	10
7.3 Likelihood of low temperature.....	10
7.4 Operating pattern.....	10
8 Safe design criteria.....	11
8.1 Vaporizer outlet materials.....	11
8.2 Natural draft ambient air-heated vaporizers	12
8.3 Independent layers of protection	12
8.4 Shutoff devices and valves.....	13
8.5 Throttling valves	13
8.6 Temperature sensing devices	13
8.7 Vaporization system flow capacity.....	14
8.8 Low thermal ballast vaporizers	14
8.9 Buffer vessels and location.....	14
8.10 Different vaporizers in parallel.....	16
9 Considerations for low temperature protection.....	16
9.1 Uninterruptible supply system	16
9.2 Interruptible supply requirements	18
9.3 IEC 61511.....	19
10 Solutions.....	19
10.1 General considerations for low temperature protection systems.....	19
10.2 Response to alarms.....	19
10.3 Recommended solutions for specific situations.....	20
11 Operation.....	24
11.1 Consumption monitoring.....	24
11.2 Manual defrosting	25
12 Periodic inspection, calibration, and testing	25
12.1 Periodic inspection	25
12.2 Periodic calibration and testing.....	26

13	Training for gas company personnel	26
14	Customer awareness	27
14.1	Customer agreement.....	27
14.2	Customer training and information	27
15	References	28

Tables

Table 1—Causes of low temperature.....	5
Table 2—Pressure volume energy classification	10
Table 3—Fluid hazard classification	11
Table 4—Classification of likelihood of low temperature occurrence.....	11
Table 5—Classification of service type	11
Table 6—Recommended LTPS selection: PV severity levels P0, P1, P2, and P3	21

Figures

Figure 1—Relationship between impact energy and temperature for carbon and austenitic stainless steels	6
Figure 2—Buffer installation for continuous service.....	14
Figure 3—Other buffer installation possible for continuous service	15
Figure 4—Buffer installation preferred for back-up service	15
Figure 5—Other buffer installation possible for back-up service.....	16

1 Introduction

Cryogenic (or cold) fluids can be inadvertently admitted to process piping and equipment due to the malfunctioning of cryogenic liquid vaporization systems, which can result in catastrophic failure due to brittle fracture. When certain metals, typically carbon steels, become cold they undergo changes in their structure, which makes them less ductile, i.e., they become brittle. Other metals such as stainless steels, aluminum, brass, and copper do not exhibit this ductile/brittle transition and remain ductile at low temperatures. This publication has been written to identify the hazards associated with cryogenic liquid vaporization systems and to recommend the safeguards to be taken.

2 Scope and purpose

This publication applies to cryogenic liquid supply systems, located either on a customer site or a production site, where cryogenic liquid is vaporized and is then supplied either as the primary or secondary source of gaseous product. This publication is limited to the prevention of brittle fracture in piping and associated equipment installed downstream of the vaporization system.

The secondary source of supply can be a back-up supply to a production plant when the production plant trips or is shut down, a supplementary supply to meet customer demand where it exceeds the capacity of the production plant (peak shaving), or as a back-up supply at a customer site (for example, a healthcare facility).

The safeguard principles presented in this publication apply to any process fluid supply system where the temperature of the cryogenic liquid source is less than the minimum temperature rating of the piping and/or associated equipment downstream of the vaporizer.

Examples include:

- nitrogen;
- oxygen;
- argon;
- helium;
- hydrogen;
- natural gas;
- carbon monoxide;
- methane; and
- ethylene.

Carbon dioxide and nitrous oxide are excluded from the scope of this publication; however, the principles of this publication may be applied.

The supply systems work by vaporizing cryogenic liquid, typically in response to decreasing pipeline pressure.

Supply systems are made up of the following:

- liquid supply from either a low pressure tank and pump arrangement or directly from a high pressure tank;
- vaporization system that could be a natural draft ambient air-heated type or one that uses an external energy source for example, steam, hot water, electricity, direct fired;
- interconnecting liquid and outlet gas piping, valves, and fittings up to the battery limit; and
- low temperature protection system (LTPS) as detailed in this publication.

Although this publication does not cover the following situations, the techniques listed may be considered for cold embrittlement prevention:

- Air separation and other cryogenic processes with columns, separators, or tanks in which a gas stream from a sump is normally supplied through downstream heat exchange equipment, or liquefaction units where a cryogenic fluid can exit through warm-end process piping during a shutdown or upset scenario. Cryogenic processes are assumed to have their own LTPS;
- Piping systems within which a fluid is expanded across a valve or restriction with the resultant temperature being less than the ductile-to-brittle-transition-temperature (DBTT) for the piping system; and
- Vessels that are depressurized rapidly: as work is done in a vessel by a gas expanding as it is discharged out of the valve, the temperature inside the vessel and the vessel wall can be lowered.

This publication recommends safe practice for the design of new cryogenic vaporizer systems. For existing systems, a risk assessment shall be undertaken to establish if any modifications are required. The principles developed in this publication can be used for this purpose.

3 Definitions

For the purpose of this publication, the following definitions apply.

3.1 Publication terminology

3.1.1 Shall

Indicates that the procedure is mandatory. It is used wherever the criterion for conformance to specific recommendations allows no deviation.

3.1.2 Should

Indicates that a procedure is recommended.

3.1.3 May

Indicates that the procedure is optional.

3.1.4 Will

Is used only to indicate the future, not a degree of requirement.

3.1.5 Can

Indicates a possibility or ability.

3.2 Technical definitions

3.2.1 Battery limit

Physical point where the rights and responsibilities of custody of the gaseous product transfers from the supplier to the customer.

3.2.2 Brittle fracture

Failure caused by a crack that propagates rapidly through the material. A brittle material has little resistance to failure once the elastic limit has been reached.

NOTE—Pressurized equipment subject to such a failure leads to a sudden and violent energy release, the projection of fragments, and the release of a fluid that can be oxidizing, flammable, toxic, etc.

3.2.3 Ductile

Property of a metal that allows it to elongate, with a rapid increase in local stresses, prior to failing.

3.2.4 End use point

Physical location where gaseous product is consumed by the customer.

3.2.5 Fail-safe systems

System is considered to be fail safe if, under all reasonable expectations of in-service malfunctions or component or wiring failures, the aggregate response of the system is such that it maintains the intended prevention of a hazardous condition.

3.2.6 Flow reduction systems

Systems employing vaporizers where it is accepted by the customer or the process that the flow can be reduced. See 8.5.

3.2.7 Flow restriction systems

Properly designed restrictive orifice or other fixed device installed immediately downstream of the vaporizer to limit the flow to a maximum value.

3.2.8 Logic solver

System of relays and pneumatic controls or a digital system that can perform one or more control or safety function(s).

3.2.9 On-site unit

Process plant or equipment that generates gas as the primary source of supply to the user.

NOTE—Examples are cryogenic air separation, pressure swing adsorption, membrane system, etc.

3.2.10 Pressure

Bar shall indicate gauge pressure unless otherwise noted, i.e., (bar, abs) for absolute pressure and (bar, dif) for differential pressure.

3.2.11 Resilient material

Material that is able to maintain its mechanical integrity at cryogenic temperatures.

3.2.12 Shutoff device

Component that reliably interrupts the process flow.

3.2.13 Uninterruptible supply systems

System designed so that the flow to the process or end user cannot be immediately interrupted. See 9.1.

NOTE—For example inert gas blanketing for a hazardous atmosphere or process or oxygen supply to a health care facility.

3.2.14 Utility and utilities

Means to supply heat to a vaporizer designed to vaporize cryogenic liquids and include all of the following applications:

- electrical power to drive hot air or ambient air fans, blowers, water or fuel pumps, and immersion or radiant heaters or electrically heated metal block vaporizers;
- supply of fossil fuels, including natural gas or fuel oil, which is combusted to generate heat or steam;
- steam supplied from a customer or other source; and
- other sources of pumped or circulating heating fluids such as water baths, hot water streams, glycol-water streams, heat transfer fluids, or similar forms of process or waste heat supply.

Utilities do not include natural draft ambient air-heated vaporizers. Utilities do include forced draft ambient air-heated vaporizers.

3.2.15 Vaporizer

Heat exchanger that changes the state of a cryogenic liquid to a vapor, by transferring thermal energy from an external source to the fluid.

4 Types of vaporizers

Typical types of vaporizer systems include:

- Natural draft ambient air-heated vaporizers are vaporizers where convection currents in the atmospheric air close to the surface of finned tubes use the sensible heat of the surrounding air to provide heat for vaporization and to raise the vaporizer outlet gas temperature to a value close to that of the ambient air;
- Natural draft ambient air-heated vaporizers with switchover system: two vaporizers or groups of vaporizers in parallel where the flow is switched between the vaporizers or groups to allow defrosting of one vaporizer or group;
- Water bath vaporizers—a water bath is maintained at a desired temperature by means of hot water circulation, steam injection, electrical heater elements, or hydrocarbon fuel fired heaters. A vaporization coil or tube bundle in the water bath uses the heat from the water to vaporize the cryogenic liquid and to provide superheating to raise the vaporizer outlet gas temperature. The thermal mass of the water helps to reduce the variation in the process outlet temperature;
- Ambient air-heated vaporizers with trim heaters—electrical heaters are installed downstream of ambient air vaporizers, to provide superheating to raise the vaporizer outlet gas temperature to greater than the minimum allowed temperature for the downstream system;
- Forced draft ambient air-heated vaporizers—a fan is used to blow air across the surface of finned tubes, and so use the sensible heat of the surrounding air to provide heat for vaporization and to raise the vaporizer outlet gas temperature to a value close to that of the ambient air. The vaporizer has reduced vaporization capacity when the fan is not operating;
- Electrically heated metal block vaporizers—electrical power is used in electrical heater elements embedded in a metal block to heat the block. The vaporization coil is also embedded in the block; so heat is transferred from the block to the cryogenic fluid for vaporization and superheating;
- Vaporizers with heating fluid pumped through without ballast, for example, ambient temperature, warm or hot water: the sensible heat in the water being used to provide heat for vaporization and to raise the vaporizer outlet gas temperature; and
- Direct steam jacketed vaporizers—steam is injected into a heat exchanger at a controlled rate to condense on the product tubes and the latent heat from the steam is used to vaporize the cryogenic liquid and to provide superheating to raise the vaporizer outlet gas temperature to a value at or greater than that of the ambient air. There is no significant thermal mass to help to reduce the variation in the process outlet temperature, if the steam flow varies.

Vaporizer systems are typically categorized as either high thermal ballast (HTB) or low thermal ballast (LTB). The maximum design flow rate for the vaporizer system shall be used to determine the ballast time. The performance of ambient air-heated vaporizers shall be evaluated at the minimum ambient design temperature.

4.1 High thermal ballast vaporizers

A HTB vaporizer is one that has a significant amount of stored energy ballast remaining at a time of power outage, energy-input malfunction, or overdraw condition. On failure of utility, the time taken for the outlet temperature to fall to the embrittlement temperature will be 15 minutes or more. An energy-input malfunction can occur by loss of steam or burner fuel or electrical heating to a water bath vaporizer or by ice and frost buildup on an ambient air-heated vaporizer.

A water bath vaporizer having a large quantity of water can be considered as a HTB vaporizer but could become a LTB vaporizer in the case of lack of water, for example, caused by a water leak or low water bath temperature.

4.2 Low thermal ballast vaporizers

An LTB vaporizer is one that has little or no stored energy ballast remaining at a time of power outage, energy-input malfunction, or overdraw condition. On failure of utility, the outlet temperature can fall to the embrittlement temperature in less than 15 minutes. The vaporizer materials of construction and the retained mass of the heat transfer media (for example, water) define the thermal ballast.

5 Causes and consequences of low temperature

5.1 Causes of low temperature

Some of the causes of low temperature at the outlet of a vaporizer are listed in Table 1.

Table 1—Causes of low temperature

Type of vaporizer	Cause of low temperature	Example(s) of cause of low temperature
All types	Customer overdraw exceeds design capacity, particularly for an extended period.	Customer adds extra equipment that requires additional flow capacity without notifying the gas company.
All types	Flow exceeds rated capacity of the vaporizer.	Relief valve on pipeline opens and sticks open. Prolonged venting downstream of vaporizer.
All types	Pipeline pressure or flow control valve goes fully open.	Control valve actuator failure. Control valve positioner malfunction.
All types	Control system fails in a way that creates a low temperature at the vaporizer.	Failure of basic pressure control or flow control system.
<u>Natural draft or forced draft ambient air-heated vaporizers</u>	Vaporizer heavily iced due to high demand, peak shaving, main gas supply plant trips out, etc.	Vaporizers are rated for a given flow rate and time. If this is exceeded, gas outlet temperature can drop.
<u>Natural or forced draft ambient air-heated vaporizers</u>	Vaporizer heavily iced.	With a vaporizer changeover system, a changeover valve failing to move to the correct position will lead to this situation.
<u>Natural or forced draft ambient air-heated vaporizers</u>	Low ambient temperature for prolonged period does not allow opportunity for defrosting the vaporizer.	Failure of timed changeover if fitted. Poor siting of vaporizer where it cannot defrost. Changes to layout around the vaporizer that affect its efficiency (walls built close by).
<u>Forced draft ambient air-heated vaporizers</u>	<u>Fan stops.</u> <u>Defrost heaters, where fitted, do not operate.</u>	<u>Electrical power failure.</u> <u>Switchgear fault.</u> <u>Fan mechanical failure.</u>
<u>Natural draft ambient air-heated vaporizers with trim heaters</u>	<u>Trim heater unable to maintain gas temperature greater than the required minimum temperature.</u>	<u>Electrical power failure.</u> <u>Switchgear fault.</u> <u>Heater element burns out.</u> <u>Excessive flow.</u>
<u>Natural draft ambient air-heated vaporizers with switchover</u>	<u>Flow exceeds rated capacity of vaporizer bank.</u>	<u>Electrical power failure.</u> <u>Switchover time set incorrectly.</u>
All water bath vaporizers	Low or no water level in water bath.	Drain valve left open. Leaks in water bath. Water/Steam supply system failure.
<u>Fired heater water bath vaporizers</u>	<u>Fuel gas failure.</u>	<u>Burner management systems malfunction.</u> <u>Loss of fuel supply.</u>

Type of vaporizer	Cause of low temperature	Example(s) of cause of low temperature
<u>Vaporizers with heating fluid pumped through</u>	<u>Heat source fails, low or no flow of thermal fluid.</u>	<u>Electrical power failure.</u> <u>Switchgear fault.</u> <u>Pump mechanical failure.</u>
Steam vaporizers	Steam control valve fails to open. Steam supply from boiler fails.	Valve actuator failure. Positioner malfunction. Controller malfunction. Superheated steam boils off contents of water bath.
Electrically heated vaporizers	Failure of electrical heating.	Electrical power supply failure. Switchgear fault. Heater elements burn out.
Water bath, steam, and electrical vaporizers	Servicing of a vaporizer on which the heat source has been decommissioned.	Liquid supply to the vaporizer not isolated when the heat source is removed.

5.2 Consequences of low temperature

Every material that is susceptible to brittle fracture has an associated DBTT. This ductile-to-brittle transition can cause an existing defect in a material to propagate to a crack, or even start a crack with no additional increase in stress. A brittle failure of an item is more destructive, as the crack propagates rapidly, and sections of material can become detached, whereas with a ductile failure the material “tears” and the pressure is vented in a more controlled fashion. The DBTT is that temperature below which the Charpy impact value shows a very rapid decrease and failure occurs without plastic deformation, for example, without the occurrence of a significant amount of stretching or yielding. The relationship between ductility and temperature for typical low carbon steel is illustrated in Figure 1. Low carbon steel shows a decrease in the fracture energy with decreasing temperature. Common structural materials such as carbon and low alloy steels are not suitable for low temperature equipment and are susceptible to brittle fracture at these lower temperatures.

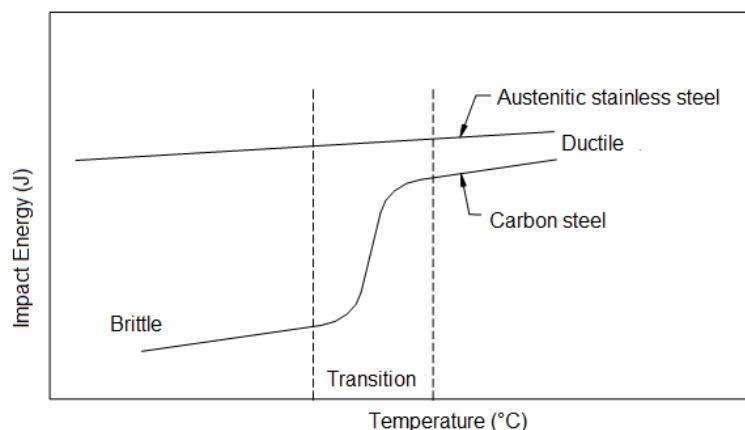


Figure 1—Relationship between impact energy and temperature for carbon and austenitic stainless steels

Austenitic stainless steels are tough and remain ductile at low temperatures.

Materials such as stainless steels, aluminum, brass, and copper do not exhibit any ductile/brittle transition and may be used down to cryogenic temperatures.

Any piece of equipment (pipe, vessels, valves, etc.) that could be subjected to low temperatures shall be assessed to ensure it is suitable to withstand the temperature.