



IEEE Guide for the Application of Metal-Oxide Surge Arresters for Alternating-Current Systems

IEEE Power & Energy Society

Sponsored by the
Surge Protective Devices Committee



IEEE
3 Park Avenue
New York, NY 10016-5997, USA
3 July 2009

IEEE Std C62.22™-2009
(Revision of
IEEE Std C62.22-1997)

This is a Redline Document produced by Techstreet, a business of Thomson Reuters.

This document is intended to provide users with an indication of changes from one edition to the next. It includes a full-text version of the new document, plus an indication of changes from the previous version.

Redlines are designed to save time and improve efficiencies by using the latest software technology to find and highlight document changes. More professionals are using valuable new technologies like redlines, to help improve outcomes in a fastpaced global business world.

Because it may not be technically possible to capture all changes accurately, it is recommended that users consult previous editions as appropriate. In all cases, only the current base version of this publication is to be considered the official document.

Redline Processing Notes:

1. ~~Red Text~~ - Red strikethrough text denotes deletions.
2. Blue Text - Blue underlined text denotes modifications and additions.

IEEE Guide for the Application of Metal-Oxide Surge Arresters for Alternating-Current Systems

Sponsor

Surge Protective Devices Committee

of the

IEEE Power & Energy Society

Approved 19 March 2009

IEEE-SA Standards Board

Figure 11 was provided by Vaisala, Inc., Tucson, AZ. Reprinted with permission.

Abstract: This guide covers the application of metal-oxide surge arresters to safeguard electric power equipment, with a nominal operating voltage 1000 V and above, against the hazards of abnormally high-voltage surges of various origins. This guide provides information on the characteristics of metal-oxide surge arresters and the protection of substation equipment, distribution systems, overhead lines, and large electrical machines.

Keywords: distribution lines, insulation coordination, lightning, metal-oxide surge arrester, overvoltage, substations, surge arrester, switching surges, transmission lines

The Institute of Electrical and Electronics Engineers, Inc.
3 Park Avenue, New York, NY 10016-5997, USA

Copyright © 2009 by the Institute of Electrical and Electronics Engineers, Inc.
All rights reserved. Published 3 July 2009. Printed in the United States of America.

IEEE is a registered trademark in the U.S. Patent & Trademark Office, owned by The Institute of Electrical and Electronics Engineers, Incorporated.

PDF: ISBN 978-0-7381-5935-5 STD95922
Print: ISBN 978-0-7381-5936-2 STDPD95922

No part of this publication may be reproduced in any form, in an electronic retrieval system or otherwise, without the prior written permission of the publisher.

IEEE Standards documents are developed within the IEEE Societies and the Standards Coordinating Committees of the IEEE Standards Association (IEEE-SA) Standards Board. The IEEE develops its standards through a consensus development process, approved by the American National Standards Institute, which brings together volunteers representing varied viewpoints and interests to achieve the final product. Volunteers are not necessarily members of the Institute and serve without compensation. While the IEEE administers the process and establishes rules to promote fairness in the consensus development process, the IEEE does not independently evaluate, test, or verify the accuracy of any of the information or the soundness of any judgments contained in its standards.

Use of an IEEE Standard is wholly voluntary. The IEEE disclaims liability for any personal injury, property or other damage, of any nature whatsoever, whether special, indirect, consequential, or compensatory, directly or indirectly resulting from the publication, use of, or reliance upon this, or any other IEEE Standard document.

The IEEE does not warrant or represent the accuracy or content of the material contained herein, and expressly disclaims any express or implied warranty, including any implied warranty of merchantability or fitness for a specific purpose, or that the use of the material contained herein is free from patent infringement. IEEE Standards documents are supplied “AS IS.”

The existence of an IEEE Standard does not imply that there are no other ways to produce, test, measure, purchase, market, or provide other goods and services related to the scope of the IEEE Standard. Furthermore, the viewpoint expressed at the time a standard is approved and issued is subject to change brought about through developments in the state of the art and comments received from users of the standard. Every IEEE Standard is subjected to review at least every five years for revision or reaffirmation, or every ten years for stabilization. When a document is more than five years old and has not been reaffirmed, or more than ten years old and has not been stabilized, it is reasonable to conclude that its contents, although still of some value, do not wholly reflect the present state of the art. Users are cautioned to check to determine that they have the latest edition of any IEEE Standard.

In publishing and making this document available, the IEEE is not suggesting or rendering professional or other services for, or on behalf of, any person or entity. Nor is the IEEE undertaking to perform any duty owed by any other person or entity to another. Any person utilizing this, and any other IEEE Standards document, should rely upon his or her independent judgment in the exercise of reasonable care in any given circumstances or, as appropriate, seek the advice of a competent professional in determining the appropriateness of a given IEEE standard.

Interpretations: Occasionally questions may arise regarding the meaning of portions of standards as they relate to specific applications. When the need for interpretations is brought to the attention of IEEE, the Institute will initiate action to prepare appropriate responses. Since IEEE Standards represent a consensus of concerned interests, it is important to ensure that any interpretation has also received the concurrence of a balance of interests. For this reason, IEEE and the members of its societies and Standards Coordinating Committees are not able to provide an instant response to interpretation requests except in those cases where the matter has previously received formal consideration. A statement, written or oral, that is not processed in accordance with the IEEE-SA Standards Board Operations Manual shall not be considered the official position of IEEE or any of its committees and shall not be considered to be, nor be relied upon as, a formal interpretation of the IEEE. At lectures, symposia, seminars, or educational courses, an individual presenting information on IEEE standards shall make it clear that his or her views should be considered the personal views of that individual rather than the formal position, explanation, or interpretation of the IEEE.

Comments for revision of IEEE Standards are welcome from any interested party, regardless of membership affiliation with IEEE. Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate supporting comments. Recommendations to change the status of a stabilized standard should include a rationale as to why a revision or withdrawal is required. Comments and recommendations on standards, and requests for interpretations should be addressed to:

Secretary, IEEE-SA Standards Board
445 Hoes Lane
Piscataway, NJ 08854
USA

Authorization to photocopy portions of any individual standard for internal or personal use is granted by The Institute of Electrical and Electronics Engineers, Inc., provided that the appropriate fee is paid to Copyright Clearance Center. To arrange for payment of licensing fee, please contact Copyright Clearance Center, Customer Service, 222 Rosewood Drive, Danvers, MA 01923 USA; +1 978 750 8400. Permission to photocopy portions of any individual standard for educational classroom use can also be obtained through the Copyright Clearance Center.

Introduction

This introduction is not part of IEEE Std C62.22-2009, IEEE Guide for the Application of Metal-Oxide Surge Arresters for Alternating-Current Systems.

Abnormally high voltages can occur on power systems from a variety of origins, including lightning and switching. These overvoltages can cause insulation breakdown, resulting in equipment failure and interrupting the continuity of electric supply to users. Proper coordination of surge-protective devices with the insulation strength of the protected equipment is essential to protect the reliability of power systems and equipment. Metal-oxide surge arresters are the predominately used overvoltage protective device on ac power systems.

The application of surge protection devices and their coordination with equipment insulation strengths is a broad and complex subject for which the industry has accumulated a large body of knowledge, experience, and practices. This document provides a concise guide to the application of metal-oxide surge arresters to protect power systems and equipment operating at a nominal voltage of 1000 V and greater. This application guide does not cover the application of low-voltage surge protective devices below 1000 V alternating current (ac). However, it references these devices when applied to the secondary of a transformer because they are part of the transformer protection.

Step-by-step directions toward proper solutions for various applications are provided. In many cases, the prescribed steps are adequate. More complex and special situations requiring study by experienced engineers are described, but specific solutions may not be given. These procedures are based on theoretical studies, test results, and experience.

The clauses of this guide cover the various categories of electric power systems and equipment.

- Clause 4 provides fundamental information on overvoltages, metal-oxide surge arrester characteristics, and equipment insulation.
- Clause 5 covers the application of surge arresters to stations and substations.
- Clause 6 covers application of surge arresters for protection of overhead and underground distribution system equipment, including all distribution transformers, and other electric distribution equipment.
- Clause 7 covers the protection of overhead transmission and distribution line insulation, which is an application unique from station equipment and underground protection because the overhead line insulation is self-restoring.
- Clause 8 covers the protection of large electrical machines, including generators and motors, rated 1000 V and above.

This guide is a revision of IEEE Std C62.22™-1997.^a Substantial reorganization of the guide has been made to help users focus on their areas of interest. Major additions to this revision include substantially increased information on the characteristics of surge arresters and surge arrester energy discharge considerations. Extensive overhead line protection guidelines have been added.

^a Information on references can be found in Clause 2.

Notice to users

Laws and regulations

Users of these documents should consult all applicable laws and regulations. Compliance with the provisions of this standard does not imply compliance to any applicable regulatory requirements. Implementers of the standard are responsible for observing or referring to the applicable regulatory requirements. IEEE does not, by the publication of its standards, intend to urge action that is not in compliance with applicable laws, and these documents may not be construed as doing so.

Copyrights

This document is copyrighted by the IEEE. It is made available for a wide variety of both public and private uses. These include both use, by reference, in laws and regulations, and use in private self-regulation, standardization, and the promotion of engineering practices and methods. By making this document available for use and adoption by public authorities and private users, the IEEE does not waive any rights in copyright to this document.

Updating of IEEE documents

Users of IEEE standards should be aware that these documents may be superseded at any time by the issuance of new editions or may be amended from time to time through the issuance of amendments, corrigenda, or errata. An official IEEE document at any point in time consists of the current edition of the document together with any amendments, corrigenda, or errata then in effect. In order to determine whether a given document is the current edition and whether it has been amended through the issuance of amendments, corrigenda, or errata, visit the IEEE Standards Association Web site at <http://ieeexplore.ieee.org/xpl/standards.jsp>, or contact the IEEE at the address listed previously.

For more information about the IEEE Standards Association or the IEEE standards development process, visit the IEEE-SA website at <http://standards.ieee.org>.

Errata

Errata, if any, for this and all other standards can be accessed at the following URL: <http://standards.ieee.org/reading/ieee/updates/errata/index.html>. Users are encouraged to check this URL for errata periodically.

Interpretations

Current interpretations can be accessed at the following URL: <http://standards.ieee.org/reading/ieee/interp/index.html>.

Patents

Attention is called to the possibility that implementation of this guide may require use of subject matter covered by patent rights. By publication of this guide, no position is taken with respect to the existence or validity of any patent rights in connection therewith. The IEEE is not responsible for identifying Essential Patent Claims for which a license may be required, for conducting inquiries into the legal validity or scope of Patents Claims or determining whether any licensing terms or conditions provided in connection with submission of a Letter of Assurance, if any, or in any licensing agreements are reasonable or non-discriminatory. Users of this guide are expressly advised that determination of the validity of any patent rights, and the risk of infringement of such rights, is entirely their own responsibility. Further information may be obtained from the IEEE Standards Association.

Participants

At the time this guide was submitted to the IEEE-SA Standards Board for approval, the Continuous Revision of C62.22 Working Group had the following membership:

Reigh A. Walling, *Chair*
Thomas J. Rozek, *Vice-chair*
Jody P. Levine, *Vice-chair*

Dilip Biswas
H. Steven Brewer
Mark Carbo
James Case
Michael K. Champagne
Michael G. Comber
Dave D'Hooge
Mark M. Drabkin
John P. DuPont
Clifford C. Erven
Thomas Field
Paul Freeman
Thomas C. Hartman
Steven P. Hensley
A. Robert Hileman
Raymond Hill
Volker Hinrichsen

David W. Jackson
Bengt Johnnerfelt
Jeff Kester
Misao Kobayashi
Joseph L. Koepfinger
Gerald E. Lee
Dennis W. Lenk
Paul Lindemulder
W. Albert Maguire
Subinoy Mazumdar
Heather McNeely
Nigel McQuin
Mark McVey
Richard K. Moore
Iuda Morar
Ken Nolan
Joseph C. Osterhout

Bert Parsons
John B. Posey
Michael Ramarge
Paul Schaffer
John Stein
Jeff Steiner
Keith B. Stump
Eva J. Tarasiewicz
Edgar R. Taylor Jr.
Rao S. Thallam
Kevin Verett
Arnold Vitols
Larry Vogt
Ronald Wellman
Jeffrey S. Williams
James W. Wilson, Jr.
Jonathan J. Woodworth

The following members of the balloting committee voted on this guide. Balloters may have voted for approval, disapproval, or abstention.

Roy Alexander
Marcos Andrade
H. Steven Brewer
Mark Bushnell
James Case
Michael G. Comber
Jerry Corkran
Luis Coronado
Stephen Dare
R Daubert
Guru Dutt Dhingragd
Charles Drexler
John P. DuPont
Gary Engmann
Clifford C. Erven
Marcel Fortin
James Funke
Ajit Gwal
Ernie Gallo
William Goldbach
Randall Groves
Ken Hanus

John E. Harder
Jeffrey Hartenberger
Steven P. Hensley
Raymond Hill
Edward Horgan ,Jr.
David W. Jackson
Joseph Jancauskas
Saumen Kundu,Pe
George Karady
Yuri Khersonsky
Joseph Koepfinger
Stephen R. Lambert
Dennis W. Lenk
Boyd Leuenberger
Antonio Lim
Jason Lin
Jesus Martinez
Michael Maytum
John McDaniel
Mark McGranaghan
G. Michel
Abdul Mousa
Jeffrey Nelson

Joe Nims
Joseph C. Osterhout
Thomas Pekarek
Paul Pillitteri
John B. Posey
Johannes Rickmann
Michael Roberts
Thomas Rozek
James Ruggieri
Steven Sano
Carl Schuetz
Allan St.Peter
Brian Steinbrecher
Keith Stump
Rao S. Thallam
Gerald Vaughn
Reigh Walling
Douglas Wannan
Daniel Ward
Steven Whisenant
Jeffrey S. Williams
James W. Wilson, Jr.

When the IEEE-SA Standards Board approved this standard on 19 March 2009, it had the following membership:

Robert M. Grow, *Chair*
Thomas Prevost, *Vice Chair*
Steve M. Mills, *Past Chair*
Judith Gorman, *Secretary*

John Barr
Karen Bartleson
Victor Berman
Ted Burse
Richard DeBlasio
Andy Drozd
Mark Epstein

Alexander Gelman
Jim Hughes
Richard H. Hulett
Young Kyun Kim
Joseph L. Koepfinger*
John Kulick

David J. Law
Ted Olsen
Glenn Parsons
Ronald C. Petersen
Narayanan Ramachandran
Jon Walter Rosdahl
Sam Sciacca

*Member Emeritus

Also included are the following nonvoting IEEE-SA Standards Board liaisons:

Howard L. Wolfman, *TAB Representative*
Michael Janezic, *NIST Representative*
Satish Aggarwal, *NRC Representative*

Lorraine Patsco
IEEE Standards Program Manager, Document Development

Matthew J. Ceglia
IEEE Standards Program Manager, Technical Program Development

Contents

1. Scope	1
2. Normative references	1
3. Definitions, acronyms, and abbreviations	3
3.1 Definitions	3
3.2 Acronyms and abbreviations	7
4. General considerations	7
4.1 Overvoltages	7
4.2 Metal-oxide arresters	9
4.3 Protective levels	15
4.4 Insulation withstand	16
4.5 Separation effects	16
4.6 Insulation coordination	16
5. Protection of transmission equipment and substations	17
5.1 Introduction	17
5.2 Transformer protection, step-by-step procedures	18
5.3 Special considerations for protection of transformers	40
5.4 Protection of dry-type insulation	41
5.5 Special considerations for shunt capacitor bank applications	41
5.6 Protection of underground transmission cables	43
5.7 Protection of gas-insulated substations (GIS)	44
5.8 Protection of high-power static devices and systems	45
5.9 Protection of series capacitor banks	45
5.10 Protection of circuit breakers	47
6. Protection of distribution systems	50
6.1 Introduction	50
6.2 General procedure	53
6.3 Selection of arrester ratings	54
6.4 Distribution system overvoltages	58
6.5 Insulation coordination	63
6.6 Arrester connections	64
6.7 Special applications	67
6.8 Isolation	74
7. Protection of overhead lines	74
7.1 General considerations	74
7.2 Transmission-line protection	79
7.3 Distribution line protection	81
8. Protection of electrical machines, 1000 V and greater	83
8.1 Insulation withstand tests	84
8.2 Methods of surge protection for motors started across the line (full voltage start)	85

Annex A (informative) Lightning flashes, lightning stroke currents, traveling waves, and station shielding	87
Annex B (informative) COG for various conditions	91
Annex C (informative) Calculations of surge arrester separation distances	95
Annex D (informative) Distribution system overvoltage line diagrams.....	109
Annex E (informative) Dual transformer station.....	111
Annex F (informative) Modeling of gapless metal-oxide surge arresters.....	112
Annex G (informative) "Rules of thumb" for some common arrester energy discharge cases	115
Annex H (informative) Bibliography	119

IEEE Guide for the Application of Metal-Oxide Surge Arresters for Alternating-Current Systems

IMPORTANT NOTICE: This guide is not intended to ensure safety, security, health, or environmental protection in all circumstances. Implementers of the guide are responsible for determining appropriate safety, security, environmental, and health practices or regulatory requirements.

This IEEE document is made available for use subject to important notices and legal disclaimers. These notices and disclaimers appear in all publications containing this document and may be found under the heading "Important Notice" or "Important Notices and Disclaimers Concerning IEEE Documents." They can also be obtained on request from IEEE or viewed at <http://standards.ieee.org/IPR/disclaimers.html>.

1. Scope

This guide covers the application of metal-oxide surge arresters (see IEEE Std C62.11™-2005) to safeguard electric power equipment against the hazards of abnormally high voltage surges of various origins. This application guide does not cover the application of low-voltage surge protective devices below 1000 V alternating current (ac), except when applied to the secondary of a transformer.

~~Such overvoltages may cause flashovers and serious damage to equipment and thereby jeopardize the supply of power to users. It is essential to prevent this by the proper coordination of surge protective devices with the insulation strength of the protected equipment.~~

~~This application guide does not cover the application of low-voltage surge protective devices below 1000 V ac. However, it references these devices when applied to the secondary of a transformer since they are part of the transformer protection.~~

~~The subject is broad, with many ramifications, and it requires a volume of considerable bulk to explain all possible cases in detail. Clause 5 of this guide covers the basic cases for stations used to supply and switch electric power transmission, subtransmission, or distribution feeders. Information is included in Clause 6 on application of arresters for protection of overhead and underground distribution systems, all distribution transformers, and other electric distribution equipment.~~

~~Step-by-step directions toward proper solutions for various applications are provided. In many cases, the prescribed steps are adequate. More complex and special situations requiring study by experienced engineers are described, but specific solutions may not be given. These procedures are based on theoretical studies, test results, and experience.~~

2. Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments or corrigenda) applies.

~~This guide shall be used in conjunction with the following publications. When the following standards are superseded by an approved revision, the revision shall apply.~~

~~ANSI C62.22-1987, American National Standard Guide for the Application of Gapped Silicon-Carbide Surge Arresters for AC Systems.⁺~~

ANSI/IEEE Std C37.06TM-2000 American National Standard AC High-Voltage Circuit Breakers Rated on a Symmetrical Current Basis—Preferred Ratings and Related Required Capabilities.¹

~~ANSI C84.1-1989, American National Standard for~~2006, Electric Power Systems and Equipment – Voltage Ratings (60 ~~Hertz~~)-Hz).

IEC 60034-15:1995-01), Rotating Electrical Machines, Part 15: Impulse Voltage Withstand Levels of Rotating A.C. Machines with Form-Wound Stator Coils ~~(draft revision)~~.²

~~IEEE Std 18-1992, IEEE Standard for Shunt Power Capacitors~~

IEC 60071-2-1997, Insulation Coordination—Part 2: Application Guide.

~~IEEE Std 100-1996, The IEEE Standard Dictionary of Electrical and Electronics Terms, Sixth Edition.³~~

~~IEEE Std 824-1994, IEEE Standard for Series Capacitors in Power Systems.~~

~~IEEE Std 998-1996, IEEE Guide for Direct Lightning Stroke Shielding of Substations. IEEE Std 1036-~~

~~1992, IEEE Guide for Application of Shunt Power Capacitors.~~

~~IEEE Std 1313.¹-1996, IEEE Standard for Insulation Coordination—Definitions, Principles, and Rules.~~

~~IEEE Std C37.04-1979 (Reaff 1989), IEEE Standard Rating Structure for AC High-Voltage Circuit Breakers Rated on a Symmetrical Current Basis (DoD).~~

~~IEEE Std C37.015-1993, IEEE Application Guide for Shunt Reactor Switching.~~

~~IEEE Std C57.12.00-1993, IEEE Standard General Requirements for Liquid-Immersed Distribution, Power, and Regulating Transformers.~~

~~IEEE Std C57.12.01-1989, IEEE Standard General Requirements for Dry-Type Distribution and Power Transformers Including Those with Solid-Cast and/or Resin-Encapsulated Windings.⁴~~

~~IEEE Std C57.13-1993, IEEE Standard Requirements for Instrument Transformers.~~

~~IEEE Std C57.21-1990 (Reaff 1995), IEEE Standard Requirements, Terminology, and Test Code for Shunt Reactors Rated Over 500 kVA.~~

~~IEEE Std C62.1-1989 (Reaff 1994), IEEE Standard for Gapped Silicon Carbide Surge Arresters for AC Power Circuits.~~

ANSI publications are available from the Sales Department, American National Standards Institute, 11 West 42nd Street, 13th Floor, New York, NY 10036, USA- (<http://www.ansi.org/>).

² IEC publications are available from ~~IEC Sales Department~~[the sales department of the International Electrotechnical Commission](http://www.iec.ch), Case Postale 131, 3, rue Varembe, CH-1211, Genève 20, Switzerland/Suisse (<http://www.iec.ch>). IEC publications are also available in the USA from Sales Department, American National Standards Institute, 11 [West 42nd Street, 13th Floor, New York, NY 10036, USA](#).

~~West 42nd Street, 13th Floor, New York, NY 10036, USA.~~

³~~IEEE publications are available from the Institute of Electrical and Electronics Engineers, 445 Hoes Lane, P.O. Box 1331, Piscataway, NJ 08855-1331, USA.~~

⁴~~IEEE Std C57.12.01-1989 has been withdrawn; however, copies can be obtained from Global Engineering, 15 Inverness Way East, Englewood, CO 80112-5704, USA, tel. (303) 792-2181.~~

~~IEEE Std C62.11-1993, IEEE Standard for Metal Oxide Surge Arresters for Power Circuits.~~

[IEEE Std 522™-2004, IEEE Guide for Testing Turn Insulation of Form-Wound Stator Coils for Alternating-Current Electric Machines.](#)^{3,4}

~~IEEE Std C62.92.1-1987 (Reaff 1993), IEEE Guide for the Application of Neutral Grounding in Electrical Utility Systems, Part I—Introduction.~~

~~IEEE Std C62.92.4-1991 (Reaff 1996), IEEE Guide for the Application of Neutral Grounding in Utility Systems, Part IV—Distribution.~~

~~IEEE Std C62.92.5-1992 (Reaff 1997), IEEE Guide for the Application of Neutral Grounding in Electric Utility Systems, Part V—Transmission Systems and Subtransmission Systems.~~

[IEEE Std 824™-2004, IEEE Standard for Series Capacitor Banks in Power Systems. IEEE Std 998™-](#)

[1996, IEEE Guide for Direct Lightning Stroke Shielding of Substations.](#)

[IEEE Std 1299/C62.22.1™-1996 \(Reaff 2003\), IEEE Guide for the Connection of Surge Arresters to Protect Insulated, Shielded Electric Power Cable Systems.](#)

[IEEE Std 1313.1™-1996 \(Reaff 2002\), IEEE Standard for Insulation Coordination—Part 1: Definitions, Principles, and Rules.](#)

[IEEE Std 1313.2™-1999, IEEE Guide for the Application of Insulation Coordination.](#)

[IEEE Std C37.015™-1993 \(Reaff 2000, 2006\), IEEE Application Guide for Shunt Reactor Switching.](#)

[IEEE Std C37.04™-1999 \(Reaff 2006\), IEEE Standard Rating Structure for AC High-Voltage Circuit Breakers.](#)

[IEEE Std C57.12.00™-2000, IEEE Standard for Standard General Requirements for Liquid-](#)

[Immersed Distribution, Power, and Regulating Transformers.](#)

[IEEE Std C57.12.01™-2005, IEEE Standard General Requirements for Dry-Type Distribution and Power Transformers, Including Those with Solid-Cast and/or Resin Encapsulated Windings.](#)

[IEEE Std C57.13™-1993 \(Reaff 2003\), IEEE Standard Requirements for Instrument Transformers.](#)

[IEEE Std C57.21™-1990 \(Reaff 1995, 2004\), IEEE Standard Requirements, Terminology, and Test Code for Shunt Reactors Rated Over 500 kVA.](#)

[IEEE Std C62.11™-2005, IEEE Standard for Metal-Oxide Surge Arresters for AC Power Circuits.](#)

[IEEE Std C62.21™-2003, IEEE Guide for the Application of Surge Voltage Protective Equipment on AC Rotating Machinery 1000 V and Greater.](#)

[IEEE Std C62.34™-1996, IEEE Standard for Performance of Low-Voltage Surge-Protective Devices \(Secondary Arresters\).](#)

[IEEE Std C62.92.1™-2000, IEEE Guide for the Application of Neutral Grounding in Electrical Utility Systems, Part I—Introduction.](#)

NEMA MG-1-~~1993~~2006, Motors and Generators, [Parts 20.35 and 21.38.](#)⁵

³IEEE publications are available from the Institute of Electrical and Electronics Engineers, 445 Hoes Lane, Piscataway, NJ 08854, USA (<http://standards.ieee.org/>).

⁴The IEEE standards or products referred to in this clause are trademarks owned by the Institute of Electrical and Electronics Engineers, Incorporated.

⁵NEMA publications are available from Global Engineering Documents, 15 Inverness Way East, Englewood, Colorado 80112, USA (<http://global.ihs.com/>).

3. Definitions, acronyms, and [abbreviations](#)

3.1 Definitions

For the purposes of this guide, the following terms and definitions apply. *The Authoritative Dictionary of IEEE Standards Terms, Seventh Edition* [B74]⁶ should be referenced for terms not defined in this clause.

3.1.1 arrester: *See:* surge arrester.

3.1.2 arrester discharge current: The current that flows through an arrester resulting from an impinging surge.

3.1.3 arrester discharge voltage: The voltage that appears across the terminals of an arrester during the passage of discharge current.

3.1.4 arrester disconnecter: A means for disconnecting an arrester in anticipation of, or after, a failure in order to prevent a permanent fault on the circuit and to give indication of a failed arrester.

3.1.5 arrester duty-cycle rating: The designated maximum permissible root-mean-square (rms) value of power-frequency voltage between its line and ground terminals at which it is designed to perform its duty cycle.

3.1.6 basic lightning impulse insulation level (BIL): The electrical strength of insulation expressed in terms of the crest value of a standard lightning impulse under standard atmospheric conditions. BIL may be expressed as either statistical or conventional.

3.1.7 basic switching impulse insulation level (BSL): The electrical strength of insulation expressed in terms of the crest value of a standard switching impulse. The BSL may be expressed as either statistical or conventional.

3.1.8 coefficient of grounding (COG): The ratio, E_{LG}/E_{LL} (expressed as a percentage), of the highest root-mean-square (rms), line-to-ground, power-frequency voltage E_{LG} on a sound phase, at a selected location, during a fault to ground affecting one or more phases to the line-to-line power-frequency voltage E_{LL} that would be obtained at the selected location with the fault removed.

~~⁵NEMA publications are available from the National Electrical Manufacturers Association, 1300 N. 17th St., Ste. 1847, Rosslyn, VA 22209, USA.~~

3.1.9 conventional BIL (basic lightning impulse insulation level): The crest value of a standard lightning impulse for which the insulation shall not exhibit disruptive discharge when subjected to a specific number of applications of this impulse under specified conditions, applicable specifically to non-self-restoring insulations.

3.1.10 conventional BSL (basic switching impulse insulation level): The crest value of a standard switching impulse for which the insulation does not exhibit disruptive discharge when subjected to a specific number of impulses under specified conditions, applicable to non-self-restoring insulations.

3.1.11 conventional withstand voltage: The voltage that an insulation is capable of withstanding with a 0% probability of failure.

3.1.12 coordination of insulation: The selection of insulation strength consistent with expected overvoltages to obtain an acceptable risk of failure.

⁶ The numbers in brackets correspond to those of the bibliography in Annex H.

3.1.13 crest value: (of an impulse): The maximum value that an impulse attains. *Syn:* **peak value.**

3.1.14 critical flashover voltage (CFO): The amplitude of voltage of a given wave shape that, under specified conditions, causes flashover through the surrounding medium on 50% of the voltage applications.

3.1.15 deadfront type arrester: An arrester assembled in a shielded housing providing system

insulation and conductive ground shield intended to be installed in an enclosure for the protection of underground and padmounted distribution equipment and circuits.

3.1.16 disconnecter, surge arrester: See: arrester disconnector.

3.1.17 disruptive discharge: The sudden and large increase in current through an insulating medium due to the complete failure of the medium under electrical stress.

3.1.18 distribution arrester:

- a) **heavy duty class:** An arrester most often used to protect overhead distribution systems exposed to severe lightning currents.
- b) **light duty class:** An arrester generally installed on and used to protect underground distribution systems where the major portion of the lightning stroke current is discharged by an arrester located at the overhead line/cable junction.
- c) **normal duty class:** An arrester generally used to protect overhead distribution systems exposed to normal lightning currents.

3.1.19 ferroresonance: Sustained oscillations involving a capacitance in series with a nonlinear inductance, characterized by highly distorted waveforms. ~~Can also occur between the capacitance to ground of an ungrounded circuit and voltage transformers with primary windings that are grounded. This phenomenon is also possible in gas-insulated systems~~

3.1.20 flashover: A disruptive discharge around or over the surface of a solid or liquid insulator.

3.1.21 ground flash density (GFD): The number of lightning strokes to ground per square kilometer per year.

3.1.22 impulse: A surge of unidirectional polarity.

3.1.23 insulation level: A combination of voltage values (both power frequency and impulse) that characterize the insulation of an equipment with regard to its capability of withstanding dielectric stresses.

3.1.24 lightning overvoltage: The crest voltage appearing across an arrester or insulation caused by a lightning surge.

3.1.25 lightning surge: A transient electric disturbance in an electric circuit caused by lightning.

3.1.26 liquid-immersed type arrester: An arrester designed for use immersed in an insulating liquid.

3.1.27 maximum continuous operating voltage rating (MCOV): The maximum designated root-mean-square (rms) value of power frequency voltage that may be applied continuously between the terminals of the arrester.

3.1.28 metal-oxide surge arrester (MOSA): A surge arrester utilizing valve elements fabricated from non-linear resistance metal-oxide materials.

3.1.29 nominal rate of rise (of an impulse) For a wave front, the slope of the line that determines the virtual zero. It is usually expressed in volts or amperes per microsecond.

3.1.30 nominal system voltage: A nominal value assigned to designate a system of a given voltage class.

3.1.31 non-self-restoring insulation: An insulation that loses its insulating properties or does not recover them completely after a disruptive discharge caused by the application of a test voltage; insulation of this kind is generally, but not necessarily, internal insulation.

3.1.32 overvoltage: Abnormal voltage between two points of a system that is greater than the highest value appearing between the same two points under normal service conditions. Overvoltages may be low frequency, temporary, and transient (surge).

3.1.33 peak value: *See: crest value.*

3.1.34 riser pole type arrester: An arrester for pole mounting most often used to protect underground distribution cable and equipment.

3.1.35 self-restoring insulation: Insulation that completely recovers its insulating properties after a disruptive discharge caused by the application of an overvoltage; insulation of this kind is generally, but not necessarily, external insulation.

3.1.36 series gap: An intentional gap(s) between spaced electrodes in series with the valve elements across which all or part of the impressed arrester terminal voltage appears.

3.1.37 standard lightning impulse: The wave shape of the standard impulse used is 1.2/50 μs [voltage wave](#) (when not in conflict with products standards).

3.1.38 standard switching impulses: The wave shapes of standard impulse tests depend on equipment being tested:

- a) For air insulation and switchgear: 250/2500 μs
- b) For transformer products: 100/1000 μs
- c) For arrester sparkover tests ([the tail duration is not critical](#)):
 - 1) 30 μs to 60 μs /90 μs to 180 μs
 - 2) 150 μs to 300 μs /450 μs to 900 μs
 - 3) 1000 μs to 2000 μs /3000 μs to 6000 μs

3.1.39 statistical basic lightning impulse insulation level (BIL): The crest values of a standard lightning impulse for which the insulation exhibits a 90% probability of withstand (or a 10% probability of failure) under specified conditions, applicable specifically to self-restoring insulations.

3.1.40 statistical [basic switching impulse insulation level](#) (BSL): The crest value of a standard switching impulse for which the insulation exhibits a 90% probability of withstand (or a 10% probability of failure), under specified conditions, applicable to self-restoring insulations.

3.1.41 statistical withstand voltage: The voltage that an insulation is capable of withstanding with a given probability of failure, corresponding to a specified probability of failure (e.g., 10% or 0.1%).

3.1.42 surge: A transient wave of current, potential, or power in an electric circuit.

3.1.43 surge arrester: A protective device for limiting surge voltages on equipment by discharging or bypassing surge current; it limits the flow of power follow current to ground and is capable of repeating these functions as specified.

3.1.44 switching overvoltage: Any combination of switching surge(s) and temporary overvoltage(s) associated with a single switching episode.

3.1.45 switching surge: A heavily damped transient electrical disturbance associated with switching. ~~System insulation flashover may precede or follow the switching in some cases but not all.~~

3.1.46 system voltage: The root-mean-square (rms) phase-to-phase power frequency voltage on a three-phase alternating-current electric system.

3.1.47 temporary overvoltage (TOV): An oscillatory overvoltage associated with switching or faults (for example, load rejection, single-phase faults) and/or nonlinearities (ferroresonance effects, harmonics) of relatively long duration, which is undamped or slightly damped.

3.1.48 transmission-line arrester: A surge arrester installed on a transmission line, usually for the purpose of protecting transmission-line insulation.

3.1.49 traveling wave: The resulting wave when an electrical variation in a circuit such as a transmission line takes the form of translation of energy along a conductor, such energy being always equally divided between current and potential forms.

3.1.50 unit operation: Discharge of a surge through an arrester while the arrester is energized.

3.1.51 valve arrester: An arrester that includes one or more valve elements.

3.1.52 valve element: A resistor that, because of its nonlinear current-voltage characteristic, limits the voltage across the arrester terminals during the flow of discharge current and contributes to the limitation of follow current at normal power-frequency voltage.

3.1.53 virtual duration of wave front: (of an impulse) The virtual value for the duration of the wave front is as follows:

- a) For voltage waves with wave front durations less than 30 μ s, either full or chopped on the front, crest, or tail, 1.67 times the time for the voltage to increase from 30% to 90% of its crest value.
- b) For voltage waves with wave front durations of 30 μ s or more, the time taken by the voltage to increase from actual zero to maximum crest value.
- c) For current waves, 1.25 times the time for the current to increase from 10% to 90% of crest value.

3.1.54 virtual zero point: (of an impulse) The intersection with the time axis of a straight line drawn through points on the front of the current wave at 10% and 90% crest value or through points on the front of the voltage wave at 30% and 90% crest value.

3.1.55 wave front: (of an impulse) That part of an impulse that occurs prior to the crest value.

3.1.56 wave shape: (of an impulse test wave) The graph of an impulse test wave as a function of time.

3.1.57 wave shape designation: (of an impulse)

- a) The wave shape of an impulse (other than rectangular) of a current or voltage is designated by a combination of two numbers. The first, an index of the wave front, is the virtual duration of the wave front in microseconds. The second, an index of the wave tail, is the time in microseconds from virtual zero to the instant at which one-half

of the crest value is reached on the wave tail. Examples are
1.2/50 and 8/20 waves.

- b) The wave shape of a rectangular impulse of current or voltage is designated by two numbers. The first designates the minimum value of current or voltage that is sustained for the time in microseconds designated by the second number. An example is the 75 A · 2000 μ s wave.

3.1.58 wave tail: (of an impulse) That part between the crest value and the end of the impulse.

3.1.59 withstand voltage: The voltage that an insulation is capable of withstanding with a given probability of failure. In terms of insulation, this is expressed as either conventional withstand voltage or statistical withstand voltage.

3.2 Acronyms and abbreviations

<u>BIL</u>	<u>basic lightning impulse insulation level</u>
<u>BSL</u>	<u>basic switching impulse insulation level</u>
<u>CFO</u>	<u>critical flashover voltage</u>
<u>COG</u>	<u>coefficient of grounding</u>
<u>CVT</u>	<u>capacitor voltage transformer</u>
<u>CWW</u>	<u>chopped wave withstand</u>
<u>dc</u>	<u>direct current</u>
<u>EHV</u>	<u>extra high voltage</u>
<u>FACTS</u>	<u>flexible alternating current transmission systems</u>
<u>FOR</u>	<u>flashover rate of lines (flashovers per 100 km per year)</u>
<u>FOW</u>	<u>front of wave (protective level)</u>
<u>FW</u>	<u>full wave (lightning test)</u>
<u>FWW</u>	<u>front of wave withstand</u>
<u>GFD</u>	<u>ground flash density (flashes to ground per square kilometer per year)</u>
<u>GIS</u>	<u>gas-insulated substation</u>
<u>GTO</u>	<u>gate turnoff transistor</u>
<u>HVDC</u>	<u>high-voltage direct current</u>
<u>IGBT</u>	<u>insulated gate bipolar transistor</u>
<u>IV</u>	<u>induced voltage</u>
<u>LPL</u>	<u>lightning protective level</u>
<u>MCOV</u>	<u>maximum continuous operating voltage</u>
<u>MOSA</u>	<u>metal-oxide surge arrester</u>
<u>MTBF</u>	<u>mean time between failure</u>
<u>PM</u>	<u>protective margin</u>

<u>PR</u>	<u>protective ratio</u>
<u>SPL</u>	<u>switching protective level</u>
<u>SVC</u>	<u>static VAR compensator</u>
<u>TCSC</u>	<u>thyristor controlled series capacitors</u>
<u>TLA</u>	<u>transmission-line arrester</u>
<u>TOV</u>	<u>temporary overvoltage</u>
<u>TRV</u>	<u>transient recovery voltage</u>
<u>UPFC</u>	<u>universal power flow controller</u>
<u>VAR</u>	<u>volt-ampere reactive</u>

3. Definitions, acronyms, and [abbreviations](#)

3.1 Definitions

For the purposes of this guide, the following terms and definitions apply. *The Authoritative Dictionary of IEEE Standards Terms, Seventh Edition* [B74]⁶ should be referenced for terms not defined in this clause.

3.1.1 arrester: *See:* surge arrester.

3.1.2 arrester discharge current: The current that flows through an arrester resulting from an impinging surge.

3.1.3 arrester discharge voltage: The voltage that appears across the terminals of an arrester during the passage of discharge current.

3.1.4 [arrester disconnect:](#) [A means for disconnecting an arrester in anticipation of, or after, a failure in order to prevent a permanent fault on the circuit and to give indication of a failed arrester.](#)

3.1.5 arrester duty-cycle rating: The designated maximum permissible root-mean-square (rms) value of power-frequency voltage between its line and ground terminals at which it is designed to perform its duty cycle.

3.1.6 basic lightning impulse insulation level (BIL): The electrical strength of insulation expressed in terms of the crest value of a standard lightning impulse under standard atmospheric conditions. BIL may be expressed as either statistical or conventional.

3.1.7 basic switching impulse insulation level (BSL): The electrical strength of insulation expressed in terms of the crest value of a standard switching impulse. The BSL may be expressed as either statistical or conventional.

3.1.8 coefficient of grounding (COG): The ratio, E_{LG}/E_{LL} (expressed as a percentage), of the highest root-mean-square (rms), line-to-ground, power-frequency voltage E_{LG} on a sound phase, at a selected location, during a fault to ground affecting one or more phases to the line-to-line power-frequency voltage E_{LL} that would be obtained at the selected location with the fault removed.

~~⁵NEMA publications are available from the National Electrical Manufacturers Association, 1300 N. 17th St., Ste. 1847, Rosslyn, VA 22209, USA.~~

3.1.9 conventional BIL (basic lightning impulse insulation level): The crest value of a standard lightning impulse for which the insulation shall not exhibit disruptive discharge when subjected to a specific number of applications of this impulse under specified conditions, applicable specifically to non- self-restoring insulations.

3.1.10 conventional BSL (basic switching impulse insulation level): The crest value of a standard switching impulse for which the insulation does not exhibit disruptive discharge when subjected to a specific number of impulses under specified conditions, applicable to non-self-restoring insulations.

3.1.11 conventional withstand voltage: The voltage that an insulation is capable of withstanding with a 0% probability of failure.

3.1.12 coordination of insulation: The selection of insulation strength consistent with expected overvoltages to obtain an acceptable risk of failure.

⁶ [The numbers in brackets correspond to those of the bibliography in Annex H.](#)

3.1.13 crest value: (of an impulse): The maximum value that an impulse attains. *Syn:* **peak value.**

3.1.14 critical flashover voltage (CFO): The amplitude of voltage of a given wave shape that, under specified conditions, causes flashover through the surrounding medium on 50% of the voltage applications.

3.1.15 deadfront type arrester: An arrester assembled in a shielded housing providing system insulation and conductive ground shield, intended to be installed in an enclosure for the protection of underground and padmounted distribution equipment and circuits.

3.1.16 disconnecter, surge arrester: [See: arrester disconnecter.](#)

3.1.17 disruptive discharge: The sudden and large increase in current through an insulating medium due to the complete failure of the medium under electrical stress.

3.1.18 distribution arrester:

- a) **heavy duty class:** An arrester most often used to protect overhead distribution systems exposed to severe lightning currents.
- b) **light duty class:** An arrester generally installed on and used to protect underground distribution systems where the major portion of the lightning stroke current is discharged by an arrester located at the overhead line/cable junction.
- c) **normal duty class:** An arrester generally used to protect overhead distribution systems exposed to normal lightning currents.

3.1.19 ferroresonance: [Sustained oscillations involving a capacitance in series with a nonlinear inductance, characterized by highly distorted waveforms.](#) ~~Can also occur between the capacitance to ground of an ungrounded circuit and voltage transformers with primary windings that are grounded. This phenomenon is also possible in gas insulated systems~~

3.1.20 flashover: A disruptive discharge around or over the surface of a solid or liquid insulator.

3.1.21 ground flash density (GFD): [The number of lightning strokes to ground per square kilometer per year.](#)

3.1.22 impulse: A surge of unidirectional polarity.

3.1.23 insulation level: A combination of voltage values (both power frequency and impulse) that characterize the insulation of an equipment with regard to its capability of withstanding dielectric stresses.

3.1.24 lightning overvoltage: The crest voltage appearing across an arrester or insulation caused by a lightning surge.

3.1.25 lightning surge: A transient electric disturbance in an electric circuit caused by lightning.

3.1.26 liquid-immersed type arrester: An arrester designed for use immersed in an insulating liquid.

3.1.27 maximum continuous operating voltage rating (MCOV): The maximum designated root-mean-square (rms) value of power frequency voltage that may be applied continuously between the terminals of the arrester.

3.1.28 metal-oxide surge arrester (MOSA): A surge arrester utilizing valve elements fabricated from non-linear resistance metal-oxide materials.

3.1.29 nominal rate of rise (of an impulse) For a wave front, the slope of the line that determines the virtual zero. It is usually expressed in volts or amperes per microsecond.

3.1.30 nominal system voltage: A nominal value assigned to designate a system of a given voltage class.

3.1.31 non-self-restoring insulation: An insulation that loses its insulating properties or does not recover them completely after a disruptive discharge caused by the application of a test voltage; insulation of this kind is generally, but not necessarily, internal insulation.

3.1.32 overvoltage: Abnormal voltage between two points of a system that is greater than the highest value appearing between the same two points under normal service conditions. Overvoltages may be low frequency, temporary, and transient (surge).

3.1.33 peak value: *See: crest value.*

3.1.34 riser pole type arrester: An arrester for pole mounting most often used to protect underground distribution cable and equipment.

3.1.35 self-restoring insulation: Insulation that completely recovers its insulating properties after a disruptive discharge caused by the application of an overvoltage; insulation of this kind is generally, but not necessarily, external insulation.

3.1.36 series gap: An intentional gap(s) between spaced electrodes in series with the valve elements across which all or part of the impressed arrester terminal voltage appears.

3.1.37 standard lightning impulse: The wave shape of the standard impulse used is 1.2/50 μs [voltage wave](#) (when not in conflict with products standards).

3.1.38 standard switching impulses: The wave shapes of standard impulse tests depend on equipment being tested:

- a) For air insulation and switchgear: 250/2500 μs
- b) For transformer products: 100/1000 μs
- c) For arrester sparkover tests ([the tail duration is not critical](#)):
 - 1) 30 μs to 60 μs /90 μs to 180 μs
 - 2) 150 μs to 300 μs /450 μs to 900 μs
 - 3) 1000 μs to 2000 μs /3000 μs to 6000 μs

3.1.39 statistical basic lightning impulse insulation level (BIL): The crest values of a standard lightning impulse for which the insulation exhibits a 90% probability of withstand (or a 10% probability of failure) under specified conditions, applicable specifically to self-restoring insulations.

3.1.40 statistical [basic switching impulse insulation level](#) (BSL): The crest value of a standard switching impulse for which the insulation exhibits a 90% probability of withstand (or a 10% probability of failure), under specified conditions, applicable to self-restoring insulations.

3.1.41 statistical withstand voltage: The voltage that an insulation is capable of withstanding with a given probability of failure, corresponding to a specified probability of failure (e.g., 10% or 0.1%).

3.1.42 surge: A transient wave of current, potential, or power in an electric circuit.

3.1.43 surge arrester: A protective device for limiting surge voltages on equipment by discharging or bypassing surge current; it limits the flow of power follow current to ground and is capable of repeating these functions as specified.

3.1.44 switching overvoltage: Any combination of switching surge(s) and temporary overvoltage(s) associated with a single switching episode.

3.1.45 switching surge: A heavily damped transient electrical disturbance associated with switching. ~~System insulation flashover may precede or follow the switching in some cases but not all.~~

3.1.46 system voltage: The root-mean-square (rms) phase-to-phase power frequency voltage on a three-phase alternating-current electric system.

3.1.47 temporary overvoltage [\(TOV\)](#): An oscillatory overvoltage associated with switching or faults (for example, load rejection, single-phase faults) and/or nonlinearities (ferroresonance effects, harmonics) of relatively long duration, which is undamped or slightly damped.

3.1.48 [transmission-line arrester:](#) [A surge arrester installed on a transmission line, usually for the purpose of protecting transmission-line insulation.](#)

3.1.49 traveling wave: The resulting wave when an electrical variation in a circuit such as a transmission line takes the form of translation of energy along a conductor, such energy being always equally divided between current and potential forms.

3.1.50 unit operation: Discharge of a surge through an arrester while the arrester is energized.

3.1.51 valve arrester: An arrester that includes one or more valve elements.

3.1.52 valve element: A resistor that, because of its nonlinear current-voltage characteristic, limits the voltage across the arrester terminals during the flow of discharge current and contributes to the limitation of follow current at normal power-frequency voltage.

3.1.53 virtual duration of wave front: (of an impulse) The virtual value for the duration of the wave front is as follows:

- a) For voltage waves with wave front durations less than 30 μs , either full or chopped on the front, crest, or tail, 1.67 times the time for the voltage to increase from 30% to 90% of its crest value.
- b) For voltage waves with wave front durations of 30 μs or more, the time taken by the voltage to increase from actual zero to maximum crest value.
- c) For current waves, 1.25 times the time for the current to increase from 10% to 90% of crest value.

3.1.54 virtual zero point: (of an impulse) The intersection with the time axis of a straight line drawn through points on the front of the current wave at 10% and 90% crest value or through points on the front of the voltage wave at 30% and 90% crest value.

3.1.55 wave front: (of an impulse) That part of an impulse that occurs prior to the crest value.

3.1.56 wave shape: (of an impulse test wave) The graph of an impulse test wave as a function of time.

3.1.57 wave shape designation: (of an impulse)

- a) The wave shape of an impulse (other than rectangular) of a current or voltage is designated by a combination of two numbers. The first, an index of the wave front, is the virtual duration of the wave front in microseconds. The second, an index of the wave tail, is the time in microseconds from virtual zero to the instant at which one half of the crest value is reached on the wave tail. Examples are 1.2/50 and 8/20 waves.
- b) The wave shape of a rectangular impulse of current or voltage is designated by two numbers. The first designates the minimum value of current or voltage that is sustained for the time in microseconds designated by the second number. An example is the 75 A · 2000 μs wave.

3.1.58 wave tail: (of an impulse) That part between the crest value and the end of the impulse.

3.1.59 withstand voltage: The voltage that an insulation is capable of withstanding with a given probability of failure. In terms of insulation, this is expressed as either conventional withstand voltage or statistical withstand voltage.

3.2 Acronyms and abbreviations

<u>BIL</u>	<u>basic lightning impulse insulation level</u>
<u>BSL</u>	<u>basic switching impulse insulation level</u>
<u>CFO</u>	<u>critical flashover voltage</u>
<u>COG</u>	<u>coefficient of grounding</u>
<u>CVT</u>	<u>capacitor voltage transformer</u>
<u>CWW</u>	<u>chopped wave withstand</u>
<u>dc</u>	<u>direct current</u>
<u>EHV</u>	<u>extra high voltage</u>
<u>FACTS</u>	<u>flexible alternating current transmission systems</u>
<u>FOR</u>	<u>flashover rate of lines (flashovers per 100 km per year)</u>
<u>FOW</u>	<u>front of wave (protective level)</u>
<u>FW</u>	<u>full wave (lightning test)</u>
<u>FWW</u>	<u>front of wave withstand</u>
<u>GFD</u>	<u>ground flash density (flashes to ground per square kilometer per year)</u>
<u>GIS</u>	<u>gas-insulated substation</u>
<u>GTO</u>	<u>gate turnoff transistor</u>
<u>HVDC</u>	<u>high-voltage direct current</u>
<u>IGBT</u>	<u>insulated gate bipolar transistor</u>
<u>IV</u>	<u>induced voltage</u>
<u>LPL</u>	<u>lightning protective level</u>
<u>MCOV</u>	<u>maximum continuous operating voltage</u>
<u>MOSA</u>	<u>metal-oxide surge arrester</u>
<u>MTBF</u>	<u>mean time between failure</u>
<u>PM</u>	<u>protective margin</u>
<u>PR</u>	<u>protective ratio</u>
<u>SPL</u>	<u>switching protective level</u>
<u>SVC</u>	<u>static VAR compensator</u>
<u>TCSC</u>	<u>thyristor controlled series capacitors</u>
<u>TLA</u>	<u>transmission-line arrester</u>
<u>TOV</u>	<u>temporary overvoltage</u>
<u>TRV</u>	<u>transient recovery voltage</u>
<u>UPFC</u>	<u>universal power flow controller</u>
<u>VAR</u>	<u>volt-ampere reactive</u>

4. General considerations

4.1 Overvoltages

Overvoltages in power systems may be generated by external events, such as lightning; by internal ~~events~~conditions including faults, switching, ferroresonance, load rejection, loss of ground, and ~~by internal conditions including faults~~, so on, or by any combination of the above. The magnitude of these overvoltages can be above maximum permissible levels and therefore need to be reduced and protected against if damage to equipment and possible undesirable system performance are to be avoided.

4.1.1 Lightning currents and overvoltages

Lightning surge voltages that arrive at the line entrance of a station ~~are~~may be caused ~~either~~ by the following factors:

- a) A lightning flash terminating on the overhead shield wire or structure with a subsequent flashover to the phase conductor (denoted as a ~~or by~~ backflash)
- b) A lightning flash terminating on the phase conductor (denoted as a shielding failure)-
- c) A nearby lightning strike that induces a surge into the conductors

The lightning surge voltage magnitudes and wave shapes that enter a station are functions of the magnitude, polarity, and shape of the lightning stroke current, the tower and line surge impedance, the tower footing impedance, and the lightning impulse critical flashover voltage (CFO) of the line insulation.

The crest magnitude of the surge voltage arriving at the station caused by a backflash is generally considered to be 1 to 1.2 times the positive polarity CFO of the line insulation. This represents a reasonable worst-case condition. The steepness of the incoming surge (rate of rise) is dependent on the distance between the station and the backflash location. The steepness decreases approximately as an inverse function of this distance d , and it ranges from about $700/d$ kV/ μ s for a single-phase conductor to about

$1700/d$ kV/ μ s for a three- to four-conductor bundle where d is in kilometers. Steepnesses in the range of 500 kV/ μ s to 2000 kV/ μ s are typically encountered. The tail of the incoming surge described is generally in the range of 10 μ s to 20 μ s decay to half value.

Lightning surge crest voltages caused by shielding failures generally do not exceed the negative polarity CFO of the line insulation. The wave fronts and tails at the location of the shielding failure are equal to those of the lightning stroke current. Therefore, the steepness of the incoming surge at the station is less than those from a backflash, whereas the tail is longer, with an average time to half value of about 92 μ s.

For lines that are effectively shielded, for the same reliability criterion, the surge voltages caused by a backflash are usually more severe. That is, they have greater steepness and greater crest voltage and, therefore, are the only ones generally considered for analysis of station protection.

4.1.2 Switching overvoltages

Switching overvoltages occur on all systems (AIEE Committee Report [B1]; IEEE Committee Report [B87]; and IEEE Committee Report [B88]) and usually result from a circuit-breaker operation or the occurrence of a fault. These overvoltages are an important consideration in systems above 115 kV and in all systems where the effective surge impedance as observed from the arrester location is low (e.g., cable and capacitor bank circuits).

The switching surge duty on metal-oxide arresters applied on overhead transmission lines increases for increased system voltage and increased length of switched line. Typically, transients occurring from high-speed reclosing impose greater duty than energizing.

On extra high-voltage (EHV) systems, it is important that transients on the high-voltage network do not transfer excessive energy to arresters on the low-side windings of step-down transformers. This situation arises when a line is switched at one end and the other end of the line is transformer terminated. The per-unit protective levels of the low-side arrester should be higher than that of the high-voltage winding arresters so they do not respond to high-side surges.

Because of the likelihood of unusually high discharge currents, the application of arresters to shunt capacitor banks or cables may require a special review, such as a detailed analytical system study. Arresters

of higher energy capability or parallel arresters may be required (see 5.5).

4.1.3 Temporary overvoltages

Temporary overvoltages consist of lightly damped power frequency voltage oscillations, often with harmonics, usually lasting a period of hundreds of milliseconds or longer. Situations that may give rise to these overvoltages include single line-to-ground faults, ferroresonance, load rejection, loss of ground, long unloaded transmission lines (Ferranti rise), coupled-line resonance, and transformer-line inrush. The system configuration and operating practices should be reviewed to identify the most probable forms of temporary overvoltages that may occur at the arrester location. In addition, proper application of metal-oxide arresters requires that the duration of these overvoltages be known (see 4.2.4).

When detailed system studies or detailed calculations are unavailable, as a minimum, the overvoltages due to line-to-ground faults should be addressed. Single line-to-ground faults are ~~the most~~ a common type of ~~system disturbance~~ temporary overvoltage. The magnitudes of these overvoltages are related to system grounding and can be estimated by the “coefficient of grounding” (COG) as outlined in 5.2.1.2.1. Arresters on a well-grounded system are normally exposed to low-magnitude temporary overvoltages during single line-to-ground faults, whereas they are exposed to higher voltages when the system is either ungrounded or grounded through an impedance. This is also true of arresters installed on the neutral of reactance- or resistance-grounded transformers and for systems using resonant grounding and Peterson coils (Clarke [B31]).

4.2 Metal-oxide arresters

4.2.1 Design

Metal-oxide arresters fall into three broad design categories as follows: gapless arresters, shunt-gapped arresters, and series-gapped arresters. The general principles of these three design types are described in 4.2.1.1 through 4.2.1.3.

⁶The numbers in brackets correspond to those of the bibliography in annex D.

4.2.1.1 Gapless arresters

Gapless arresters utilize a single stacked column or two or more parallel columns of metal-oxide valve elements, as schematically shown in Figure 1(a). A typical volt-ampere characteristic for such an arrester is illustrated in Figure 1(b). Above the knee of the volt-ampere curve, the metal-oxide elements exhibit a very nonlinear behavior that may be approximated by the relationship $I = kV^\alpha$. Alpha (α) values will normally vary from 10 to 50, depending on the metal-oxide formulation and current range being studied. Typically, higher current values and wider ranges will yield lower values of α . For example, α may be 50 over a current range of 1 A to 600 A and may average 26 over the wider range of 1 A to 10 000 A. The arrester discharge voltage for a given surge-current magnitude is directly proportional to the height of the valve element stack and is thus more or less proportional to the arrester-rated voltage. Additionally, the arrester discharge voltage is a function of the rate of rise of the current surge, with higher voltages occurring for ~~faster~~^{greater} rates of rise and lower voltages for lower rates of rise. Typically, for the same current magnitude, the voltage occurring for a current cresting in 1 μ s is 8% to 12% higher than that occurring for a standard 8/20 ~~μ s~~-lightning current wave. The voltage occurring for a current cresting in 45 μ s to 60 μ s is 2% to 4% lower than that for the 8/20 ~~μ s~~-wave.

The maximum continuous operating voltage (MCOV) of the arrester is typically in the range of 75% to 85% of the duty-cycle voltage rating. At MCOV, the arrester current is usually not more than a few milliamperes, typically less than 10 mA. On the arrival of a surge, the increasing surge current is accompanied by a rise in arrester voltage to a maximum level determined by the volt-ampere characteristic.

As the surge current decreases, the discharge voltage will decrease back toward the presurge level.

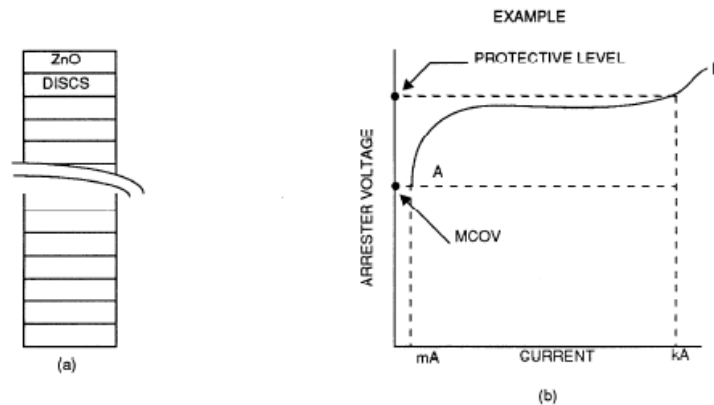


Figure 1—Gapless metal-oxide surge arrester

4.2.1.2 Shunt-gapped arresters

For surge currents above a certain magnitude, the discharge voltage of a column or columns of metal-oxide valve elements can be reduced by shunting a portion of the stack. This is the basic principle of a shunt-gapped arrester, which is schematically shown in Figure 2(a). A typical volt-ampere characteristic of such an arrester is illustrated in Figure 2(b). On arrival of a surge, the arrester voltage initially increases with increasing surge-current magnitude according to the volt-ampere characteristics A-B. When the surge current magnitude reaches 250 A to 500 A (range B to C on volt-ampere characteristic), the sparkover of a gap electrically connected in parallel with a few metal-oxide valve elements results in a shunting of the surge current around these valve elements, thereby proportionally lowering the discharge voltage (in the range D to E). For further increases in surge current, the voltage increases according to the characteristic E- F. As the surge current decreases, the arrester voltage decreases accordingly, following the characteristic F- G until the shunt gaps extinguish at a low level of current. Following After the extinction of the arrester leakage current, the arrester operating point returns to A.

From an energy standpoint, the energy absorption capability is less after gap sparkover than before.

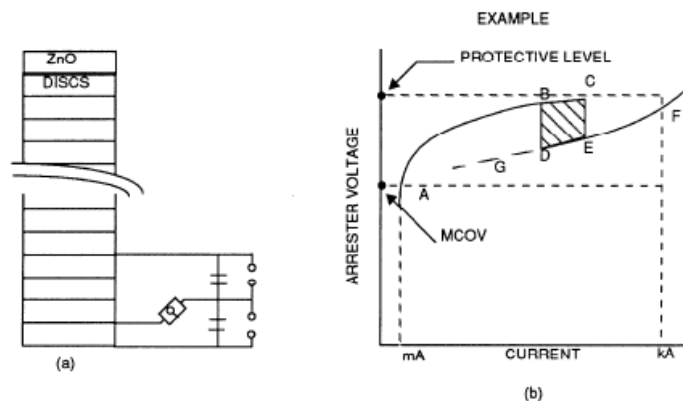


Figure 2—Shunt-gapped metal-oxide surge arrester

4.2.1.3 Series-gapped arresters

Another approach to obtain ~~reduced~~ lower discharge voltage (greater protective levels margin) is to use fewer valve elements in conjunction with series-connected spark gaps, as depicted in Figure 3(a). The series gaps are shunted by a ~~linear-component~~ impedance network of such characteristics that the applied voltage is divided between the impedance network and the metal-oxide elements. A typical volt-ampere characteristic is illustrated in Figure 3(b). On the arrival of a surge, the arrester voltage begins to rise (A-B), the total voltage being the vector sum of the voltages across the metal-oxide elements and the series gap impedance network. At a level of current in the vicinity of 1 A (depending on rate of rise in the range B to C), the gap's sparkover and the arrester voltage is reduced to the discharge voltage of the metal-oxide elements only. For further increase in surge current, the voltage increases according to the characteristic D-E-F. As the surge current decreases, the arrester voltage decreases accordingly, following the characteristic F-G until the series gaps extinguish at a low level of current.

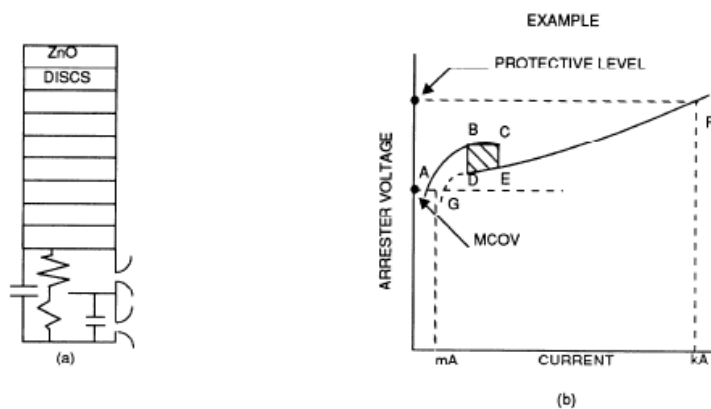


Figure 3—Series-gapped metal-oxide surge arrester

4.2.2 Test procedures

IEEE Std C62.11™-2005 contains test procedures that consider all three types of arrester design. The standard includes tests for both series- and shunt-gapped arresters to obtain the protective level that is the higher of either the gap sparkover or the discharge voltage. Protective levels for metal-oxide arresters can be treated in the same manner, irrespective of whether the levels are limited by sparkover or by discharge voltage (see 4.3).

4.2.2.1 Usual operating conditions

Arresters are designed to operate properly in continuous air temperatures in the general vicinity of the arrester between -40°C and 40°C , in temporary maximum air temperatures due to external heat sources near the arrester that do not exceed 60°C , and at altitudes that do not exceed 1800 m (6000 ft).

NOTE—Usual operating temperatures for special-application arresters, such as oil- or liquid-immersed, gas-insulated, and dead-front arresters, will typically differ from the above, ~~but such operating temperatures had not been standardized at the time this guide was prepared.~~ (see IEEE Std C62.11-2005 for further information).⁷

⁷ Notes in text, tables, and figures of a standard are given for information only and do not contain requirements needed to implement this standard.

4.2.2.2 Unusual conditions

In addition to operation beyond the limits of 4.2.2.1, exposure to damaging fumes, vapors, steam, salt spray, or excessive amounts of contamination may require special consideration. Arresters should not be installed where they may be subjected to excessive mechanical stresses or to abnormal vibrations or shocks.

4.2.3 Standard voltage ratings

The present metal-oxide design standard, IEEE Std C62.11-2005, specifies a dual voltage rating for each arrester. ~~The conventional~~ Each duty-cycle voltage rating ~~now~~ has a corresponding MCOV rating. Throughout this document, wherever an arrester is designated by a voltage, the voltage refers to the duty-cycle rating unless qualified as MCOV.

In applying the metal-oxide arrester, it is critically important that the arrester MCOV rating be equal to or greater than the maximum continuous voltage to which the arrester is exposed at any time.

4.2.4 Temporary overvoltage capability

The MCOV rating defines the maximum continuous voltage at which an arrester is designed to operate. However, metal-oxide arresters are capable of operating for limited periods of time at voltages in excess of the MCOV rating. ~~All~~ Manufacturers publish information on overvoltage capability. A typical 60 Hz temporary overvoltage capability curve is shown in Figure 4, and the test to confirm this capability is specified in IEEE Std C62.11-2005.

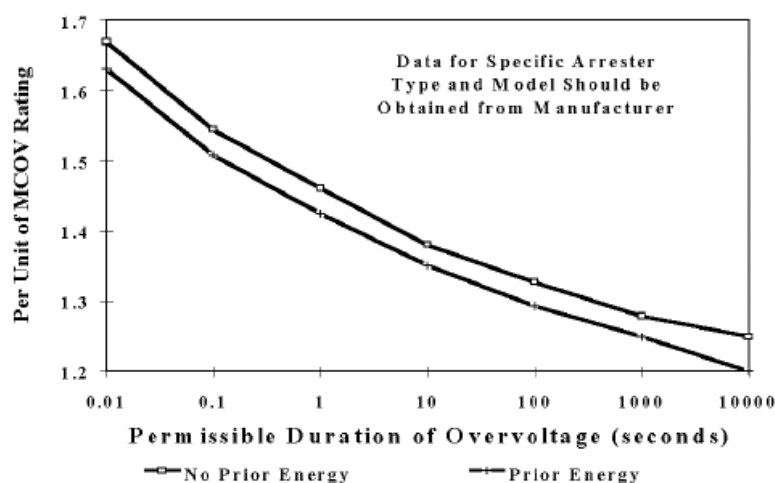


Figure 4—Example of typical arrester temporary overvoltage (TOV) data
(do not use for application)

4.2.5 Energy handling capability

Metal-oxide arresters protect the equipment from high-voltage surges by absorbing the energy from the surge arrester. The energy handling capability (or also called “energy absorption capability” or “energy withstand capability”) is an important consideration in the design and application of metal-oxide arresters. Most manufacturers publish energy capability values of arresters; however, there are no specified tests either in current versions of IEEE or IEC standards, so there may be confusion in using these important application parameters. Both the IEEE and the IEC are contemplating writing standardized tests for the arrester energy handling capability.

When metal-oxide arresters are energized, valve elements of the arrester will absorb energy, which results in a temperature increase of the valve elements. Under normal operating conditions (i.e., absence of overvoltage), there is a balance between the heat generated by the valve elements and the heat dissipated by the arrester through conduction, convection, and radiation, such that a stable operating condition is maintained. Overvoltage events disturb this stable condition by causing the valve elements to absorb increased levels of energy for some limited amount of time—~~the overvoltage exceeds the normal operating voltage~~. The subsequent response of the arrester depends greatly on the magnitude and rate of energy input and on the specific design of the arrester.

For simple applications where overvoltages are well defined, the resulting energy absorbed by the arrester can be determined by calculation (use arrester minimum voltage characteristics ~~should be used for energy calculation~~). For complex situations, computer simulation studies using programs such as the Electromagnetic Transients Program (EMTP) may be required. These studies require knowledge of the arrester minimum and maximum voltage-current characteristics, which are usually available from the arrester manufacturer, for modeling in EMTP. ~~Both the minimum as well as the maximum characteristics shall be used in order to calculate the actual energy and protective levels respectively.~~

4.2.5.1 Arrester failure modes

If the temperature rise of the valve elements due to energy absorption is too high, the arrester can be driven into a state of thermal runaway, ~~a~~ in this condition, heat generated exceeds heat dissipated, resulting in further increase in valve element temperature. ~~If it is possible for the temperature of a valve element to reach a high enough level to cause damage to the valve elements can occur~~ element material, leading to an electrical breakdown and failure of the arrester.

If the energy density is sufficiently high or if the distribution of energy density within the valve element is nonuniform to cause locally high temperature gradients, then thermomechanical damage in the form of valve element cracking or puncture may occur. This is possible even if the overall temperature rise of the valve elements would not have been high enough to drive the arrester into thermal runaway.

~~The energy that an arrester can absorb during an overvoltage event without impairing the arrester's ability to serve the intended function following the event is usually called “energy handling capability” or “energy withstand capability of metal-oxide arresters is often expressed in terms of kilojoules per kV kilovolt of arrester MCOV or per kV kilovolt of arrester duty-cycle rating. Because it is dependent on the specific form (magnitude, waveshape and duration) of the overvoltage, the energy handling capability cannot be expressed by a single value of kJ/kV. Manufacturers typically publish some information on energy handling capability, but it should be recognized that, at present, there are no standardized tests for determination of arrester's energy handling capability. Users are advised to consult with manufacturers on appropriate use of information provided.~~

First, the users must be aware to compare the right parameters, because the kilojoules per kilovolt MCOV rating can be 25% higher than the kilojoules per kilovolt of duty-cycle rating. Some manufacturers also publish the kilojoules per kilovolt values that are applicable for single shot energy discharge and another (higher) value for multishot (usually two or three) discharges within a 1 min period. The spacing between the shots gives time for the heat to distribute throughout the disk.

The energy-handling capability is dependent on the specific form (magnitude, wave shape, and duration) of the current discharged through the arrester; hence, it cannot be uniquely expressed by a single value of kilojoules per kilovolt. The arrester energy ratings are typically specified by the manufacturers based on transmission-line discharge (switching surge) tests. Manufacturers should be consulted for the specific types of discharges for which the published kilojoules per kilovolt values apply.

The energy capability of a metal-oxide surge arrester (MOSA) is also dependent on the operating voltage present subsequent to the discharge current. The arrester can potentially absorb more energy than its rating, without going into thermal instability if the postevent voltage is less than MCOV. Published arrester energy withstand data typically do not provide the necessary information to assess the influence of postevent voltage on arrester energy capability. For special applications where the arrester is applied substantially below its MCOV rating, the manufacturer should be consulted.

4.2.5.2 Discharge event characteristics and arrester energy duty

Some power system transients can be characterized as an approximately constant-current source of discharge current. For these events, the energy duty is approximately proportional to the arrester's residual discharge voltage. Other events can be characterized as a relatively stiff voltage source. The energy duty of arresters subjected to these events can significantly increase with decreasing residual voltage.

The discharge source characteristics of common classes of power system transients are summarized as follows:

Lightning: Lightning stroke currents are virtual constant-current sources. Because there are typically other paths for current than the arrester, there is some dependence of energy duty on arrester characteristics. Arresters having a lower discharge voltage will tend to discharge a larger portion of the lightning stroke current than arresters with higher discharge voltages. For critical applications, transient simulation should be performed using typical lightning stroke parameters and the given power system topology and parameters.

Switching transients: For worst-case line and capacitor bank restrike events, the prospective (without arrester) overvoltage will be on the order of two to three times crest operating voltage for a typical grounded transmission system. The discharge current magnitude and wave shape for a capacitor or line- switching transient, however, is highly dependent on the nature of the event and the system characteristics. The characteristics of the system on the source side of the switching location can be as important as the characteristics of the line or device that is switched. Line and capacitor switching transient arrester energy duties are only somewhat sensitive to arrester discharge voltage characteristics, with lower discharge voltages yielding increasing arrester current and energy.

Reactor switching transients. Due to current chopping, reactor switching transients create short-duration arrester discharge currents. This phenomenon can be characterized as a current source at the chopped current value. Generally, current chopping during reactor switching does not create critical arrester duty.

Temporary overvoltages: The temporary overvoltage classification covers a wide range of phenomena, which differ in their impact on arrester energy. Fundamental frequency overvoltages due to a neutral shift during unbalanced faults in poorly grounded systems can be characterized as a relatively stiff voltage source for which arrester discharge voltage characteristics will have a large influence on energy duty. Arrester discharge current will typically be relatively small, but each discharge may be on the order of 1 ms in duration and repeated twice per 60 Hz cycle. The arrester energy capabilities can be quickly exceeded if a fundamental frequency (power frequency) TOV causes arrester discharge. In general, manufacturers' published TOV withstand curves are recommended for TOV duty evaluation, instead of calculating arrester energy.

Harmonic resonance overvoltages, such as might occur during transformer energization in a weak system, present a weaker source than fundamental frequency overvoltages, and discharge current durations are not as long. The evaluation of energy duty by simulation provides more accuracy than the use of TOV capabilities based on fundamental frequency overvoltages.

Ferroresonance, despite the high overvoltage possible without an arrester, can result in very low discharge current magnitudes because the effective overvoltage source has high impedance. In many situations, the energy dissipated by an arrester is at a slow enough rate that significant heat may be conducted to the ambient environment. Tests have shown that metal-oxide arresters can limit ferroresonant overvoltages for an indefinite duration in certain circumstances. In such a case, the arrester energy capability is not as relevant as steady-state thermal resistance (power capability).

Approximate techniques for estimating arrester energy duty for various common events are described and illustrated in Annex G. Additional information on metal-oxide valve element energy handling capability is given in IEEE Working Group Report [B98] and Ringler et al. [B157].

4.3 Protective levels

The protective level of an arrester is the maximum crest voltage that appears across the arrester terminals under specified conditions of operation. For metal-oxide arresters without gaps, the protective level is the arrester discharge voltage for a specified discharge current. For arresters with gaps (shunt or series), the protective level is the higher of the gap sparkover voltage or the discharge voltage.

4.3.1 Classification current

IEEE Std C62.11-2005 specifies the magnitudes of lightning impulse "classification current" for each class of arrester. For station-class arresters, the classification current magnitude also depends on the voltage of the system to which the arresters are applied. For station- and intermediate-class arresters, IEEE Std C62.11-2005 also specifies the magnitudes of switching impulse classification current. These classification currents are, in effect, reference discharge currents and represent appropriate levels of discharge current for general considerations of insulation coordination (see 5.2.2.1). IEEE

Std C62.11-2005 requires that certain tests, including discharge voltage measurements, be made at the specified classification current magnitude.

4.3.2 Lightning impulse protective level (LPL)

LPL is the higher of the discharge voltages established by tests using 8/20 ~~µs~~-discharge current impulses or gap sparkover voltages for specified surge voltage waves. The discharge voltage is a function of current magnitude. IEEE Std C62.11-2005 specifies that tests should be made with 8/20 ~~µs~~-currents of 1500 A, 3000 A, 5000 A, 10 000 A, and 20 000 A. If the arrester lightning impulse classification current shown in IEEE Std C62.11-2005 is not one of these, then an additional test must be made at the classification current given for the particular arrester class.

4.3.3 Front-of-wave protective level (FOW)

FOW protective level for metal-oxide arresters is the higher of:

- a) The crest discharge voltage resulting from a current wave through the arrester of lightning impulse classifying current magnitude with a rate-of-rise high enough to produce arrester crest voltage in 0.5 ~~µs~~ ~~or~~
- b) Gap sparkover for specified rates-of-rise of wave shapes in IEEE Std C62.11-2005

4.3.4 Switching impulse protective level (SPL)

SPL is the higher of either:

- a) The crest discharge voltage measured with a current wave through the arrester of switching impulse classifying current magnitude and a time to actual current crest of 45 ~~µs~~ to 60 ~~µs~~ ~~or~~
- b) Gap sparkover voltage on similar wave shapes:

The switching impulse classifying currents given in IEEE Std C62.11-2005 are for a two-line substation and were calculated by dividing the line charge voltage (E), minus the switching surge-protective level of the minimum arrester rating used at that voltage, by one half of the surge impedance (Z_L). These currents are considered conservative for most arrester applications, but they may be exceeded in applications involving capacitor banks or cables or in other low-impedance circuits. The manufacturers should be consulted for information on protective levels for currents that exceed the switching impulse classifying current.

4.4 Insulation withstand

Insulation strength is expressed in terms of conventional or statistical basic lightning impulse insulation levels (BILs) and basic switching impulse insulation levels (BSLs). The withstand voltages of interest in arrester applications are taken from the list of preferred BIL and BSL values in IEEE Std 1313.1™-1996.

The following withstand levels for equipment and bus insulation are of interest in arrester application:

- a) ~~Chopped Wave Withstand (CWW)~~: Tests are made with a 1.2/50 ~~µs~~-impulse chopped by the action of a gap in a minimum time as specified in the appropriate product standard.

- b) ~~Basic Lightning Impulse Insulation Level (BIL)~~: Tests are made with full-wave 1.2/50 impulses as specified in the appropriate equipment standard.
- c) ~~Basic Switching Impulse Insulation Level (BSL)~~: The test impulse depends on the type of equipment.

Transmission- and distribution-line insulation strength is usually statistically described by a ~~critical Bashover voltage (CFO)~~ at which the insulation exhibits a 50% probability of flashover and by a standard deviation σ , which is approximately 5% of the CFO.

The insulation strength of apparatus within a station is expressed in terms of a BIL, a chopped-wave voltage, and for higher system voltages, a BSL. As noted from the definitions, the BIL and BSL may be either conventional or statistical. The statistical BIL (or BSL) is equal to CFO -1.28σ .

4.5 Separation effects

The voltage at the protected insulation will usually be higher than at the arrester terminals due to oscillations on connecting leads (Witzke and Bliss [B188]). This rise in voltage is called a separation effect.

Separation effects increase with the increasing rate of rise of the incoming surge and with increasing distances between the arrester and protected equipment. For evaluation of separation effects due to lightning surges, refer to Annex C. Due to the relatively slow rates of rise of switching surges, separation effects need not be considered in applying the fundamental protective ratio formula to switching surge withstand (BSL).

Other considerations in locating arresters are discussed in 5.2.3.

4.6 Insulation coordination

Insulation coordination is defined in IEEE Std 1313.1-1996 and in this guide as “the selection of insulation strength consistent with expected overvoltages to obtain an acceptable risk of failure.”

The degree of coordination is measured by the protective ratio (PR). The fundamental definition of PR is as follows:

$$PR = \frac{\text{Insulation withstand level}}{\text{Voltage at protected equipment}} \quad (1)$$

“Voltage at protected equipment” includes a separation effect, if significant. If not, it is equal to arrester protective level.

Three protective ratios are in common use, comparing protective levels with corresponding insulation withstands.

$$PR_{LI} = \frac{CWW}{FOW} \quad (2)$$

[\(A ratio of 1.2 is generally considered acceptable for non-self-restoring insulation.\)](#)

$$PR_{L2} = \text{BIL} / \text{LPL} \quad (3)$$

[\(A ratio of 1.2 is generally considered acceptable for non-self-restoring insulation.\)](#)

$$PR_s = \text{BSL} / \text{SPL} \quad (4)$$

[\(A ratio of 1.15 is generally considered acceptable for non-self-restoring insulation.\)](#)

The protective margin (*PM*) in percent is defined as follows: $PM = (PR - 1)100$. *PR* and *PM* applications are covered in Clause 5 and Clause 6. [For transformers, see 5.2.5.3](#)

A graphical approach to insulation coordination is also discussed in 5.2.5

5. Protection of transmission ~~systems~~[equipment and substations](#)

5.1 Introduction

The general procedures given here are applicable where transformers and other equipment and station components have a chopped-wave voltage withstand level at least 1.10 times the BIL. For this withstand level, the procedures for the selection and location of arresters in relation to the insulation system to be protected can generally be reduced to a series of steps. These are summarized in 5.2 ~~and elaborated upon in 5.3 through 5.8.~~

Arrester applications for transformer or other series windings, unloaded windings, and ungrounded neutrals are discussed in 5.3.

Where a lower chopped-wave insulation level is specified in equipment such as dry-type transformers, the protection procedures are covered in 5.4.

[Special surge protection application considerations for other substation and transmission equipment is covered in the remainder of this Clause 5. Surge protection of shunt capacitor banks, transmission cables, gas-insulated substations, high-power static devices, series capacitor banks, and circuit breakers is discussed in 5.5 through 5.10.](#)

Basic to the application theory presented by this guide are the presumptions that:

- a) Surge arrester ground terminals are connected to the grounded parts of the protected equipment.
- b) Both line and ground surge arrester connections are as short as practical.
- c) The station is shielded against direct strokes.

5.2 Transformer protection, step-by-step procedures

A summary of the steps required to select arresters is provided in Figure 5.

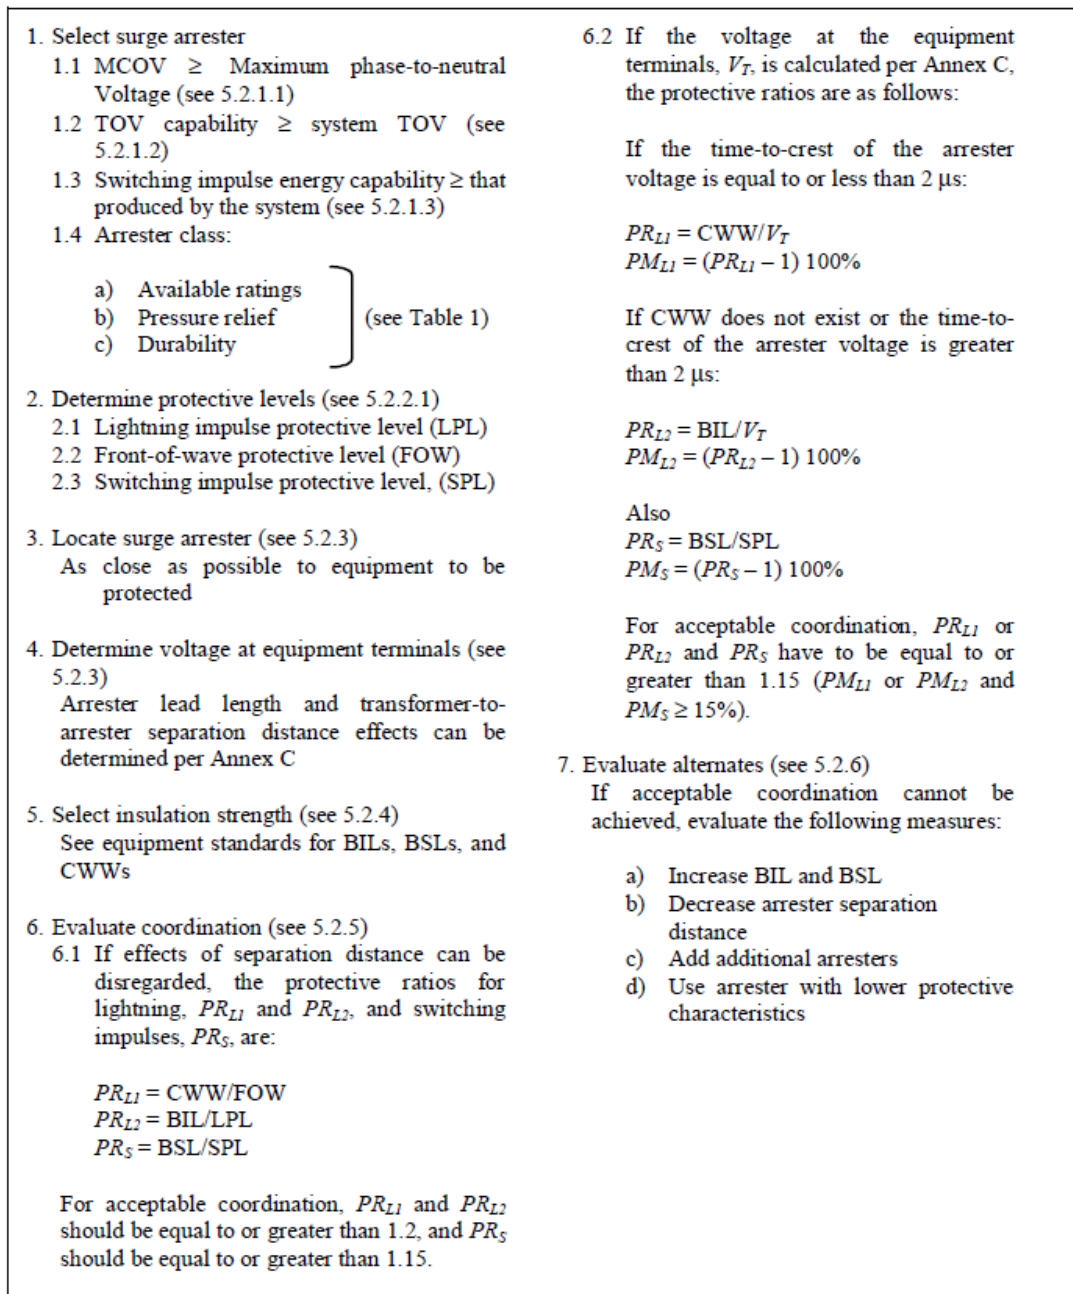


Figure 5—Summary of procedures for arresters selection and insulation coordination for transformer protection

The following sequence is used:

- a) Select an arrester and determine its protective characteristics
- b) Select (or determine) the insulation withstand
- c) Evaluate the insulation coordination

Other sequences may be equally acceptable. The key step is insulation coordination evaluation. Withstand voltages may be selected to match the characteristics of certain arresters, or arresters may be matched to available insulation. The typical characteristics of station class and intermediate class arresters are given in Table 1. The distribution class arresters are sometimes used in stations, and typical characteristics of such arresters may be found in Table 9. Protective levels are given in per-unit values and typical per-unit values may be converted to kilovolts and used ranges. The per-unit base is the fundamental-frequency voltage crest of the arrester rms MCOV rated voltage. The protective levels and ranges in Table 1 are only illustrative, are from IEEE Std C62.22-1991, and are not up to date. For arrester selection, refer to protective levels in manufacturers' current publications. Values in the columns under "Durability Characteristics" are specified requirements for the range of ratings as prescribed in IEEE Std C62.11-2005.

5.2.1 Arrester selection [\(Figure 5, item 1\)](#)

For a given application, the selection of an appropriate arrester (Figure 5, item 1) involves considerations of maximum continuous operating voltage, protective characteristics (lightning and switching impulse), durability (temporary overvoltage and switching surge), service conditions, and pressure-relief requirements. Durability and protective level considerations will primarily determine the class of arrester selected: station class, intermediate class, or occasionally, distribution class.

Station class arresters are designed for heavy-duty applications. They have the widest range of ratings (see Table 1), the lowest protective characteristics, and the most durability. Intermediate class arresters are designed for moderate-duty and for maximum system voltages of 169 kV and below (with the exception of transmission-line surge arresters, see 7.2). Distribution class arresters (see Table 8 and Table 9 of Clause 6) are used to protect lower voltage transformers, as well as transmission and distribution lines where the system-imposed duty is minimal and there is a need for an economical design.

5.2.1.1 ~~Maximum continuous operating voltage (MCOV)~~

For each arrester location, arrester MCOV must equal or exceed the expected MCOV of the system. Proper application requires that the system configuration (single-phase, delta, or wye) and the arrester connection (phase to ground, phase to phase, or phase to neutral) be evaluated. For example, in EHV systems, the arrester is typically connected phase to ground, and therefore, it is exposed to system phase-to-ground voltages on a steady-state basis. However, an arrester connected to a tertiary winding with one corner grounded, or to a delta-connected system with a fault on one phase, is exposed to phase-to-phase voltage.

**Table 1—Typical station and intermediate class arrester characteristics from
IEEE Std C62.22-1991**

Refer to the manufacturer's current data

Station Class									
Steady-state operation system voltage and arrester ratings effectively grounded systems (NOTE 1)				Protective levels range of industry maxima per unit (crest of 60 Hz) of MCOV			Durability characteristics IEEE Std C62.11-2005		
Max system rms L-L voltage kV*	Max system rms L-G voltage kV*	Min rms MCOV rating kV	Duty- cycle rms voltage rating kV	0.5 μ s FOW protective level (NOTE 2)	8/20 μ s protective level (NOTE 3)	Switching surge protective level (NOTE 4)	High crest current withstand A	Trans. line discharge mi	Pressure relief rms symmetrical current kA (NOTE 5)
4.37	2.52	2.55	3	2.32–2.48	2.10–2.20	1.70–1.85	65 000	150	40–80
8.73	5.04	5.1	6–9	2.33–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
13.1	7.56	7.65	9–12	2.33–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
13.9	8.00	8.4	10–15	2.33–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
14.5	8.37	8.4	10–15	2.33–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
26.2	15.1	15.3	18–27	2.33–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
36.2	20.9	22	27–36	2.43–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
48.3	27.8	29	36–48	2.43–2.48	1.97–2.23	1.70–1.85	65 000	150	40–80
72	41.8	42	54–72	2.19–2.40	1.97–2.18	1.64–1.84	65 000	150	40–80
121	69.8	70	90–120	2.19–2.40	1.97–2.18	1.64–1.84	65 000	150	40–80
145	83.7	84	108–144	2.19–2.39	1.97–2.17	1.64–1.84	65 000	150	40–80
169	97.5	98	120–172	2.19–2.39	1.97–2.17	1.64–1.84	65 000	175	40–80
242	139	140	172–240	2.19–2.36	1.97–2.15	1.64–1.84	65 000	175	40–80
362	209	209	258–312	2.19–2.36	1.97–2.15	1.71–1.85	65 000	200	40–80
550	317	318	396–564	2.01–2.47	2.01–2.25	1.71–1.85	65 000	200	40–80
800	461	462	576–612	2.01–2.47	2.01–2.25	1.71–1.85	65 000	200	40–80
Intermediate class									
4.37–145	2.52–83.7	2.8–84	3–144	2.38–2.85	2.28–2.55	1.71–1.85	65 000	100	16.1

* Voltage Range A, ANSI C84.1-2006

NOTE 1—See Table 8 and 6.4 for typical arrester ratings for systems with noneffectively grounded neutral. NOTE 2—Equivalent FOW producing a voltage wave cresting in 0.5 μ s.

NOTE 3—The protective level is the maximum discharge voltage for a 10 kA impulse current wave on arrester duty-cycle rating through 312 kV, 15 kA for duty-cycle ratings 396 kV to 564 kV, and 20 kA for duty-cycle ratings 576 kV to 612 kV, per IEEE Std C62.11-2005.

NOTE 4—Switching surge characteristics based on maximum switching surge classifying current (based on an impulse current wave with a time to actual crest of 45 μ s to 60 μ s) of 500 A on arrester duty-cycle ratings 3 kV to 108 kV, 1000 A on duty-cycle ratings 120 kV to 240 kV, and 2000 A on duty-cycle ratings above 240 kV, per IEEE Std C62.11-2005.

NOTE 5—Test values for arresters with porcelain tops have not been standardized. Pressure relief classification is in 5 kA steps.

5.2.1.2 Temporary overvoltage TOV capability

In addition to considerations affecting the selection of arrester MCOV, the user must also select the arrester to withstand the temporary overvoltages in the system at the arrester location. The basic requirement is that the power frequency voltage versus time characteristic of the arrester should be higher than the TOV amplitude versus duration characteristic of the system for all times of concern.

Figure 4 is a typical generic TOV curve for station and intermediate class arresters. The upper curve shows the time the arrester withstands given overvoltages and subsequently thermally recovers when MCOV is applied. The lower curve is similar to the upper but applies to a condition where the arrester has absorbed prior energy from two transmission-line discharges. For station and intermediate class arresters, the test procedure is described in IEEE Std C62.11-2005, and each manufacturer may publish different test results. Figure 4 is shown for illustrative purposes only. For applications, TOV data should be obtained from the manufacturers.

The selected arrester must have both MCOV and temporary overvoltage capability appropriate for the operating system. Sometimes the MCOV is decisive, and sometimes TOV considerations are decisive.

A change in relay setting or use of faster breakers may sometimes allow use of arresters based on MCOV when TOV would otherwise have been decisive.

5.2.1.2.1 Fault conditions

~~5.3.2.1.1 Overvoltage amplitude considerations~~

The most common source of TOV is voltage rise on unfaulted phases during a line-to-ground fault. The curves of Annex B may be used to determine quickly the temporary overvoltages during fault conditions for applications involving short lines operating at voltages through 242 kV.

The numbers adjacent to each of the curves of Annex B are the coefficients of grounding in percent. From known values of R_0/X_1 and X_0/X_1 [at the fault location](#), the corresponding coefficient of grounding can be determined by interpolating between curves as necessary. Multiply the coefficient of grounding by the maximum system phase-to-phase operating voltage to determine the temporary overvoltage to

ground at the point of fault. Alternatively, the voltage can be calculated from the equations in Figure 6 using equivalent system impedances as seen from the fault location. The effect of shunt reactors, shunt and series capacitors, and distributed line capacitances have to be included in the calculations where significant. This applies particularly to applications involving long lines and EHV lines (AIEE Committee Report [B1]). Where the shunt capacitance of lines is large, there may be significant additional voltage rise due to line-charging currents, harmonics due to transformer saturation, and (less frequently) resonance effects.

NOTE—Annex A of IEEE Std C62.92.1™-2000 contains additional information for determining the coefficients of ground—ing, more thoroughly addressing this subject.

5.3.2.1.2 Overvoltage duration considerations

The duration of overvoltages from line-to-ground faults depends on the adopted short-circuit relaying protection. In the absence of other information, the following typical values may be used:

Grounded neutral systems: TOV duration:

Line protection: 0.2 s

Back-up protection: 1 s ([overcurrent relays may be slower](#))

Resonant grounded or isolated neutral systems:

Without ground fault clearing: 3 h

With ground fault clearing: 4 s

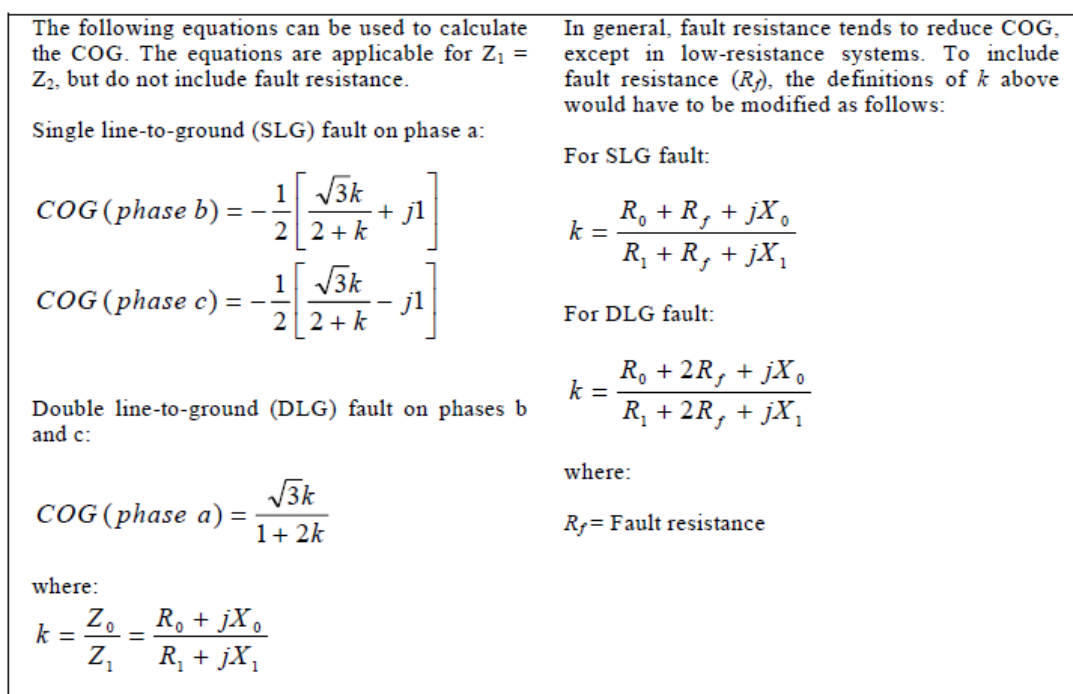


Figure 6—COG calculations

5.2.1.2.2 Load rejection

After disconnection of loads, the voltage rises at the source side of the operating circuit breaker. The amplitude of the overvoltage depends on the disconnected load and on the short-circuit power of the feeding substation. The temporary overvoltages can have particularly high amplitudes after full load rejection at generator transformers due to magnetizing and overspeed conditions. The amplitudes of load rejection overvoltages are usually not constant during their durations. When the time dependence of the amplitudes is known, a suitable representation of the overvoltage is the maximum amplitude with a duration equal to the time that the amplitude exceeds 90% of this value. Accurate calculations of temporary overvoltage have to consider many parameters and typically require detailed electromagnetic transient simulations.

As a guidance, the following typical values of such overvoltages may be used:

- In ~~moderately extended~~ systems with lines of moderate length, a full load rejection can give rise to phase-to-ground overvoltages with amplitude usually below 1.2 pu. The overvoltage duration depends on the operation of voltage-control equipment and may be up to several minutes.
- In ~~extended~~ systems with long lines, after a full load rejection, the phase-to-ground overvoltages may reach 1.5 pu or even more when Ferranti or resonance effects occur. Their durations may be in the order of some seconds.
- Where load is rejected from the load side of a generator step-up transformer, the temporary overvoltages may reach amplitudes up to 1.4 pu for turbo generators and up to 1.5 pu for hydro generators. The duration is approximately 3 s.
- When the time dependence of the amplitudes is known, a suitable representation of the overvoltage is the maximum amplitude with a duration equal to the time that the amplitudes exceed 90% of this value.

Other causes of temporary overvoltages need consideration in some ~~eases~~ situations, such as the following:

- a) Resonance effects (e.g., when charging long unloaded lines or when resonances exist between systems). Temporary overvoltages due to ferroresonance should be considered and are addressed in 6.4.4. Temporary overvoltages due to ferroresonance should not form the basis for the surge arrester selection ~~and should be eliminated.~~
- b) Voltage rise along long lines (Ferranti effect)
- c) Harmonic overvoltages (e.g., when switching transformers)
- d) Accidental contact with conductors of higher system voltage
- e) Backfeed through interconnected transformer windings (e.g., dual transformer station with common secondary bus during fault clearing or single-phase switched three-phase transformer with an unbalanced secondary load)
- f) Loss of system grounding

Sequences of causes of temporary overvoltages (e.g., load rejection caused by a ground fault) need consideration when the overvoltages due to the load rejection are comparable ~~severity. In such cases,~~

~~however, the amount of rejected load dependent on the fault location and the arrester location has to be carefully examined~~ with the overvoltages due to the ground fault.

Combinations of causes such as ground faults caused by load rejection may result in higher temporary overvoltage values than the single events. When such combinations with overlapping durations are considered sufficiently probable, the load rejection overvoltage factor may need ~~for each cause have~~ to be multiplied, ~~taking into account the actual system by the ground fault overvoltage factor, with consideration of the system~~ configuration.

5.2.1.3 Switching surge durability

Surge arresters dissipate switching surges by absorbing thermal energy. The amount of energy is related to the prospective switching surge magnitude, its wave shape, the system impedance, circuit topology, the arrester voltage-current characteristics, and the number of operations (single/multiple events). The selected arrester should have an energy capability greater than the energy associated with the expected switching surges on the system.

The actual amount of energy discharged by a metal-oxide arrester during a switching surge can be determined through detailed system studies performed with a transient network analyzer (TNA) and/or a digital circuit analysis program such as the ~~Electromagnetic Transients Program (EMTP)~~. When such study results are not available, the approximate arrester duty due to energizing and reclosing operations on transmission lines can be estimated from Equation (5) and curves.

The energy discharged by an arrester J in kilojoules; may be conservatively estimated by the equation:

$$J = 2D_L E_A I_A / v \quad (5)$$

where

E_A is the arrester switching impulse discharge voltage (in kilovolts) for I_A

I_A is the switching impulse current (in kiloamperes)

D_L is the line length (in ~~miles or~~ kilometers)

v is the speed of light, 300 km/ms) ~~or 186 000 mi/s.~~

The equation assumes that the entire line is charged to a prospective switching surge voltage (which exists at the arrester location) and is discharged through the arrester during twice the travel time of the line. The discharge voltage and current are related by the equation:

$$I_A = (E_s - E_A) / Z \quad (6)$$

where

E_s is the prospective switching surge voltage (in kilovolts)

Z is the single-phase surge impedance of line (in ohms)

To determine the prospective discharge energy, manufacturer data should be consulted to first determine consistent values of E_A and I_A per Equation (5) and Equation (6). The calculated energy can then be plotted in curve form for varying quantities of line length, switching impulse voltage, and surge impedance. A typical curve is shown in Figure 7 for a 209 kV MCOV rated arrester (258 kV duty-cycle rating) on a 345 kV, 160 km (100 miles) transmission line that dissipates approximately 0.33 MJ of energy during a 2.56 pu switching surge. Because arresters are constructed with series repeated sections, the energy can be presented in per-unit of MCOV or duty-cycle rating. In this case, 0.33 MJ translates to 1.58 kJ/kV of MCOV or 1.28 kJ/kV of duty-cycle rating. The energy capability of station class arresters is within the range of 4.0 kJ/kV to 20.0 kJ/kV of MCOV and is a function of the volume, formulation, and processing of the metal-oxide disk. The number of discharges allowed in a short period of time (approximately 1 minute or less) is the arrester energy capability divided by the energy per discharge. A curve is also shown for a ~~276~~ 220 kV ~~duty-cycle~~ MCOV rated arrester. Additional information is contained in the application guides of the manufacturer.

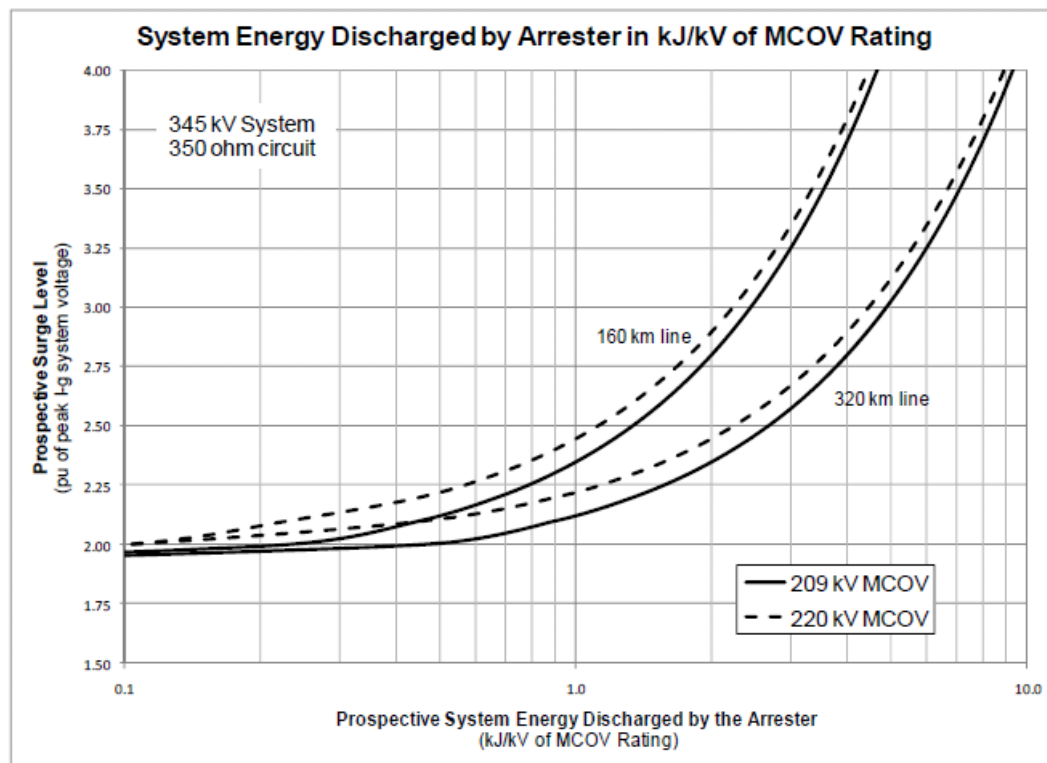


Figure 7—Typical curve for a prospective switching surge voltage versus arrester discharge energy for a 345 kV line

5.2.1.4 Tentative selection of arrester voltage rating

The arrester voltage rating should be tentatively selected on the basis of MCOV (5.2.1.1), TOV (5.2.1.2), and switching surge durability (5.2.1.3).

Special conditions that should be considered in choosing the arrester voltage rating are as follows:

- a) *Abnormal system operating voltages.* The selection of arrester voltage ratings based on maximum system voltages assumes that, in service, the maximum system voltage is exceeded only under abnormal operating conditions, and only for durations within the arrester TOV capability. However, if maximum system voltages used in determining temporary overvoltages, as in 5.2.1.2 are likely to be exceeded frequently, increasing the probability of arrester operations during such conditions, it may be necessary to use an arrester with a higher voltage rating. Other causes of TOV as listed in 5.2.1.2 require consideration on an individual basis; no general rules are applicable. If any grounding source could be disconnected by sectionalizing, the effect on the COG and the arrester rating should be checked.
- b) *Abnormal system frequency.* Normal system frequency of less than 48 Hz or more than 62 Hz may require special consideration in the design or application of surge arresters and should be a subject of discussion between the user and the manufacturer.

5.2.1.5 Selection of arrester class

The arrester class should be selected on the basis of required level of protection (protective levels summarized in Table 1) and the following:

- a) Available voltage ratings
- b) Pressure relief current limits, which should not be exceeded by the system's available short-circuit current and duration at the arrester location
- c) Durability characteristics (see Table 1) that are adequate for systems requirements

The class of arrester selected may be influenced by the importance of the station or equipment to be protected. For example, station-class arresters should be used in large substations. Intermediate-class arresters may be used in smaller substations and on subtransmission lines and cable terminal poles at 161 kV and below. Distribution-class arresters might be used in small distribution substations to protect distribution voltage buses.

5.2.2 Protective levels of arrester (Figure 5, item 2)

5.2.2.1 Determination of protective levels

Protective levels are determined by either sparkover voltages or discharge voltages of the arrester under consideration, based on the measurement procedure outlined in 8.3 and 8.4 of IEEE Std C62.11-2005. The following protective levels should be considered:

- a) *FW*: The higher value of FW sparkover or arrester discharge voltage cresting in 0.5 μ s at the classifying current.
- b) *LPL*: The higher value of lightning impulse sparkover for a 1.2/50 lightning impulse or arrester discharge voltage that results from an 8/20 current wave. The appropriate current magnitude is determined by the system voltage per Table 2.
- c) *SPL*: The higher value of switching impulse sparkover or arrester discharge voltage that