
INTERNATIONAL STANDARD



3827 / I

INTERNATIONAL ORGANIZATION FOR STANDARDIZATION • МЕЖДУНАРОДНАЯ ОРГАНИЗАЦИЯ ПО СТАНДАРТИЗАЦИИ • ORGANISATION INTERNATIONALE DE NORMALISATION

Shipbuilding — Co-ordination of dimensions in ships' accommodation — Part I : Principles of dimensional co-ordination

Construction navale — Coordination dimensionnelle pour l'ameublement des navires — Partie I : Principes de la coordination dimensionnelle

First edition — 1977-02-01

UDC 629.12 : 389.63

Ref. No. ISO 3827/I-1977 (E)

Descriptors : shipbuilding, ships, appointments, furnishing, prefabrication, dimensional co-ordination, modular structures.



Documents

Document Sharing Hub
Price based on 22 pages

FOREWORD

ISO (the International Organization for Standardization) is a worldwide federation of national standards institutes (ISO member bodies). The work of developing International Standards is carried out through ISO technical committees. Every member body interested in a subject for which a technical committee has been set up has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work.

Draft International Standards adopted by the technical committees are circulated to the member bodies for approval before their acceptance as International Standards by the ISO Council.

International Standard ISO 3827/I was developed by Technical Committee ISO/TC 8, *Shipbuilding*, and was circulated to the member bodies in June 1975.

It has been approved by the member bodies of the following countries :

Austria	Israel	South Africa, Rep. of
Belgium	Italy	Spain
Brazil	Japan	Sweden
Czechoslovakia	Netherlands	Turkey
Finland	Norway	United Kingdom
Germany	Poland	Yugoslavia
Ireland	Romania	

The member body of the following country expressed disapproval of the document on technical grounds :

France

Shipbuilding — Co-ordination of dimensions in ships' accommodation —

Part I : Principles of dimensional co-ordination

0 INTRODUCTION

The rationalization of traditional shipbuilding methods and the increasing use of prefabricated assemblies necessitates the utilization of standardized components wherever possible. In the outfitting of ships, in order to achieve the maximum benefit from the use of these components a systematic design method, applying both to the components and the space within which they are used, must be adopted which will give a common basis for layout, production and assembly.

Dimensional co-ordination is a system of applying a range of related dimensions to the sizing of components and assemblies and the structures incorporating them. This method of standardizing sizes or dimensions, which are not necessarily related to particular components, materials or manufacturing processes, permits its application to the widest possible range of components and assemblies, and will give the following advantages :

- 1) the maximum economy in the production of components by variety reduction;
- 2) the reduction in manufacture of non-standard units;
- 3) the avoidance of wastage in cutting components on site by achieving maximum flexibility in assembly;
- 4) the interchangeability of components giving more choice and flexibility for designers.

Modular co-ordination is a particular form of dimensional co-ordination in which the range of related dimensions is restricted by utilizing a standard step or module, the size of which is selected in order to satisfy the following requirements :

- a) it should be sufficiently small to give multiples which satisfy the sizes required for the various components in shipboard use and provide suitable increments to minimize alterations to existing sizes;
- b) it should be sufficiently large to achieve an effective

measure of simplification to the existing number of sizes;

- c) for ease of application, it should be expressed as a whole number bearing a simple relationship to existing systems of measurement;
- d) it should be selected to give the widest possible agreement with any national or international standards for dimensional co-ordination in shipbuilding or for related components.

The advantages of dimensional and modular co-ordination have been internationally recognized for many years and an International Standard has been agreed for the increments or modules to be used in the construction industry.

The ultimate aim in publishing recommendations for dimensional co-ordination is the establishment of standardized ranges of sizes for components, and in order to achieve the maximum utilization of these components it is necessary to establish a comprehensive system which will form a framework for sizing, positioning and assembling co-ordinated components.

In shipbuilding the main advantages in utilizing co-ordinated components occur in the accommodation areas where repetitive components are used which are common to the other industries operating dimensional co-ordination.

1 SCOPE AND FIELD OF APPLICATION

This International Standard sets out the basic principles of dimensional co-ordination, with particular reference to the co-ordination of dimensions in ships' accommodation.

2 DEFINITIONS

For the purpose of this International Standard the definitions given in ISO 3827/II are applicable.

3 THE BASIS OF DIMENSIONAL CO-ORDINATION

TABLE 1 – Standard modules

Preference	1st	2nd	3rd
	300	100	50

TABLE 2 – Co-ordinating sizes

Preference	1st	2nd	3rd
300			50
		100	150
		200	250
			350
		400	450
		500	550
	600		
	↓	↓	↓


3.1 Dimensional framework

In order to ensure that dimensionally co-ordinated components or assemblies of components fit the spaces allocated to them a dimensional framework, or reference system, is employed which is common to both.

3.1.1 Modular grids


The dimensional framework is represented by a grid, in which the grid lines are spaced in multiples of the standard modules, or increments of size, and the grid lines indicate the boundaries for the component and the space allocated to it.

The use of a grid on drawings is an aid in locating components and in reading the drawings; as such it is a tool for communication.

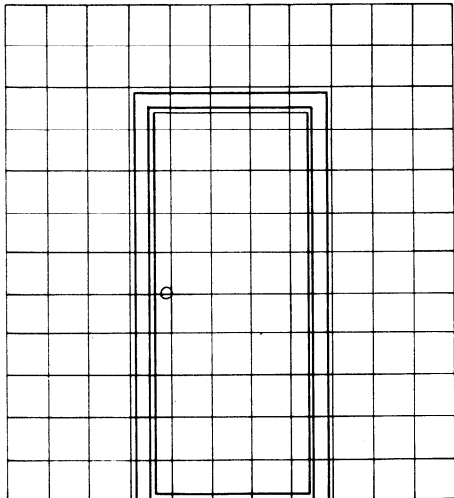


3.2 Modular components

The size of components should be co-ordinated in accordance with the preferences given in tables 1 and 2. A component having a co-ordinating size derived from these preferences is a modular component.

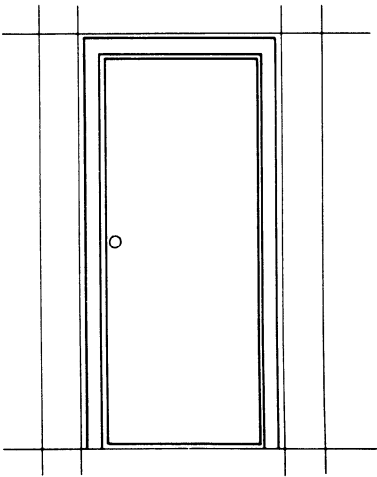

The co-ordinating size of a component is equivalent to the size of the co-ordinating space allocated to it. Both include the work size of the component plus an allowance for its joints and tolerances.

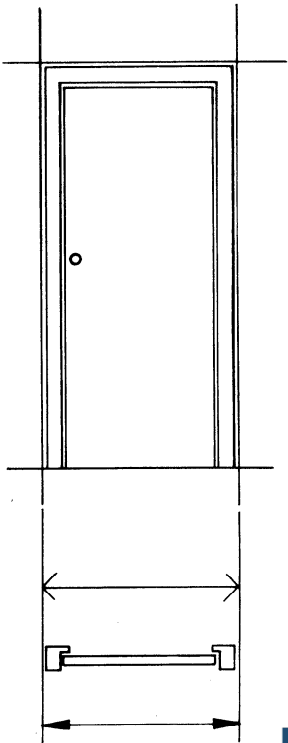

NOTE — In the accompanying sketches certain conventions are used to identify different spaces and sizes. These conventions are :


Reference lines : Normally indicated as a continuous line.



Centre and axial lines : Are normally also reference lines but are indicated as a thin chain line.




Controlling lines : Indicated by a circle at the end of a reference line.




Controlling dimensions : Represented by an enclosed arrow.



Co-ordinating space and size : Represented by an open arrow-head.



Work size : Indicated by a solid arrow-head.



4 THE CONTROLLING REFERENCE SYSTEM

In establishing a dimensional framework, or reference system, which can be related to both dimensionally co-ordinated components and the structure incorporating them it is essential to establish certain controls over the principal dimensions of the reference system.

The initial control is based on the use of the standard modules given in table 1 but, in order to reduce the considerable number of permutations possible with these modules, further controls are necessary.


Certain known datum lines, which are related to user requirements, can be identified within the structure and the structure can be divided by these datum lines into a number of spaces. Some of these spaces are termed "usable spaces", for example cabin interiors, and others termed "zones" are the spaces surrounding the usable space and are allocated to the structure or services. These terms are described later in this clause. The principal dimensions of these zones and spaces can be standardized to give a limited range of sizes, which are multiples of the standard modules, but achieve a considerable degree of variety reduction, in relation to particular components. These dimensions are therefore termed "controlling dimensions". The identified datum lines which define the zones and usable spaces are termed "controlling lines" and in three-dimensional considerations the planes which these lines represent on plans, sections and elevations are termed "key reference planes". The entire framework of planes, zones and dimensions is described as the "controlling reference system".

4.1 Lines and planes

4.1.1 Controlling lines

"A line representing a key reference plane."

Controlling lines are the identifiable datum lines which indicate the main structural items such as deck levels, ceiling levels, bulkheads, etc.

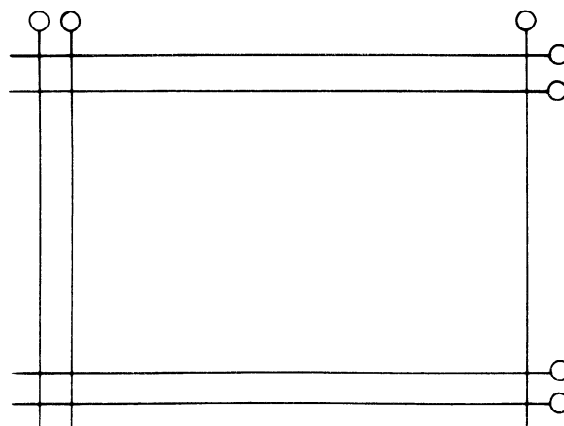


4.1.2 Key reference planes

"A reference plane which defines the boundary of a controlling zone or the axis of a bulkhead, etc."

These are the three dimensional planes represented by the controlling lines on plans, elevations, etc.


4.1.2.1 VERTICAL KEY REFERENCE PLANES

These are the planes relating to the finished surfaces of bulkheads, linings, casings, etc.

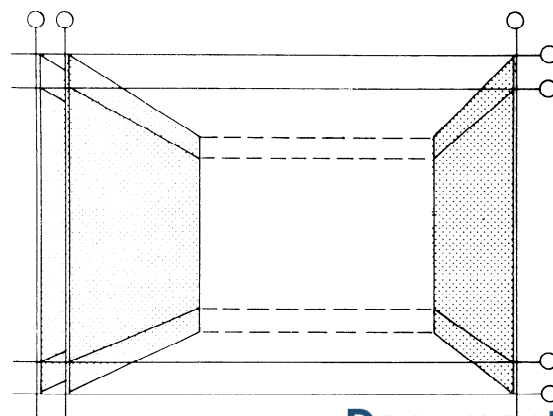

4.1.2.2 HORIZONTAL KEY REFERENCE PLANES


These are planes relating to finished horizontal surfaces such as floor, deck, ceiling, etc.

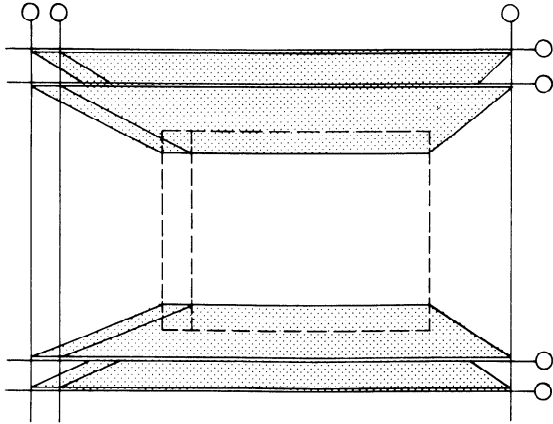

4.2.2 Usable space

“The space between controlling zones in which human or mechanical activity takes place.”

Vertically, usable spaces are bounded by finished floor and ceiling planes and horizontally they are the spaces between bulkheads or linings.

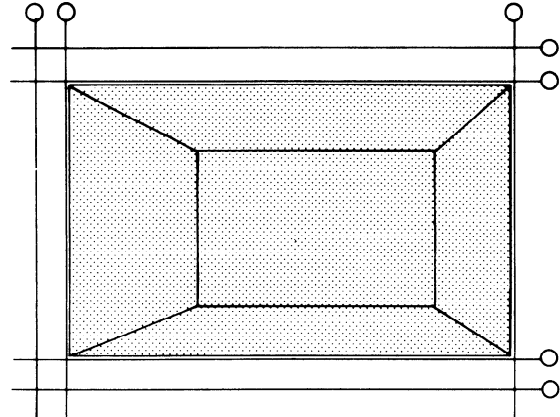


4.2 Zones and spaces

The effect of delineating the key reference planes on the structure is to divide it into a number of zones and usable spaces. When the principal dimensions of these zones and spaces are standardized a controlling reference system is achieved which will accept modular components.

4.2.1 Controlling zones

“A zone between key reference planes provided for a deck, deckhead, bulkhead or lining.”


This is a space, having standardized dimensions, which is allocated to a part of the structure. It may be occupied, but not always filled, by one or more components. In principle, finishes should be contained within the zone.

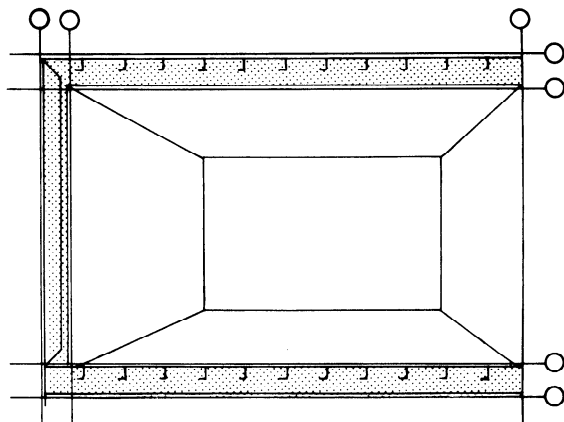

4.2.3 Controlling dimensions

“A dimension between key reference planes, for example deck to ceiling height, and width of controlling zones.

These are the standardized principal dimensions of zones and spaces and are expressed as a selection from the range of multiples of standard modules. The controlling dimensions will be given in a separate part of the International Standard on dimensional co-ordination in shipbuilding.

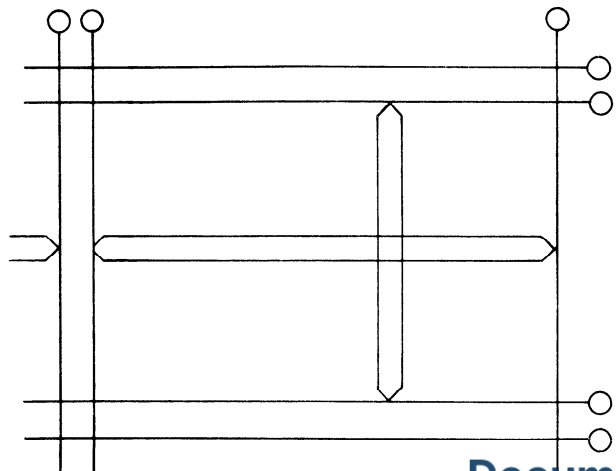


5 CONTROL : BOUNDARY AND AXIAL CONTROLLING LINES

In applying the controlling reference system to a design there are two methods for locating the controlling lines in relation to the structural or subdivision zones.


5.1 Method 1 (preferred) : Controlling lines on the boundaries of zones

Controlling lines on the boundaries of zones, i.e. on either face of the zone, are recommended as the method which will give the most benefit in accommodation areas, especially where repetitive arrangements occur, such as a row of similar cabins.

The main advantage of face dimensioning, where the controlling lines occur on the boundaries of zones, i.e. at the junction of components, is that there is then a usable space for components and assemblies which bears a direct relationship to the controlling dimensions regardless of the size of the zones.

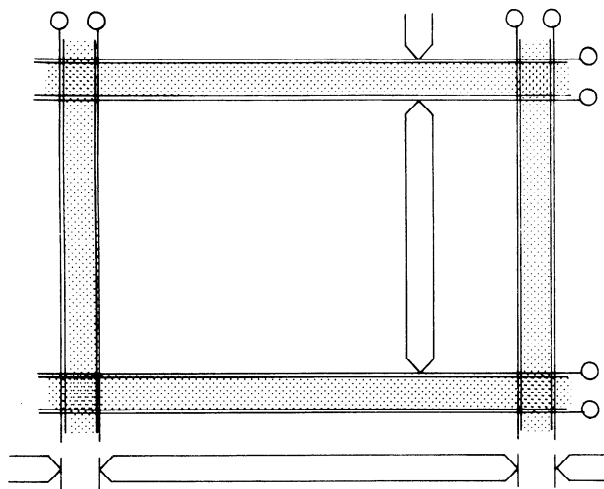

In practical applications this method enables co-ordinated components abutting bulkheads, linings, etc. to be positioned within the usable space, without the need for special fitting or make-up pieces to compensate for the variations in the width of the zones which contain the bulkheads, etc.

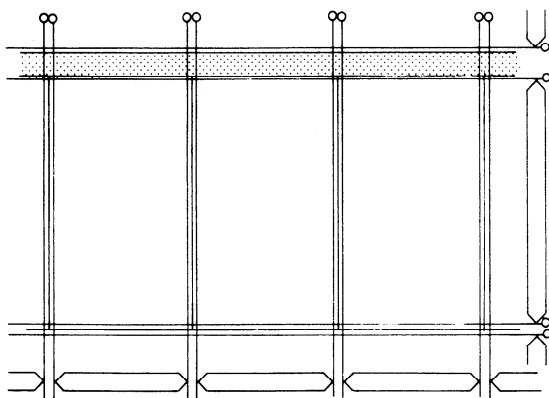


5.2 Method 2 : Controlling lines on the axial lines of the zones

NOTE — The lines are generally placed on the true axis of the zone but may be positioned anywhere within the zone.

This method may be employed in the positioning of zones, but the varying width of zones for bulkheads, linings, etc., will necessitate special fittings or make-up pieces in order to utilize modular components.

It may, however, be desirable to integrate both methods in certain instances in order to obtain the maximum utilization of modular components.

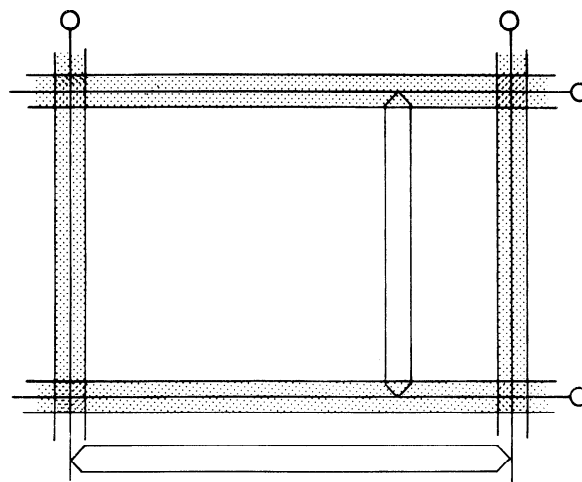

6 CONTROL : CONTROLLING DIMENSIONS


Recommendations for the sizes of controlling dimensions are given in ISO 3827/IV. The object of these recommendations is to provide a framework of controlling dimensions for use in the design of ships' deckhouses and accommodation and for guidance in the selection of co-ordinated sizes for components.

6.1 Vertical controlling dimensions

Vertical controlling dimensions are the dimensions for the deck to ceiling height.

In order to make the maximum use of dimensionally co-ordinated components, a rectilinear structure is preferable and ISO 3827/IV contains a recommendation that wherever possible flat decks without camber or sheer should be arranged and the recommendations are based on this

premise. If camber and/or sheer is present careful consideration should be given to the design in order to give the maximum possible degree of co-ordination.

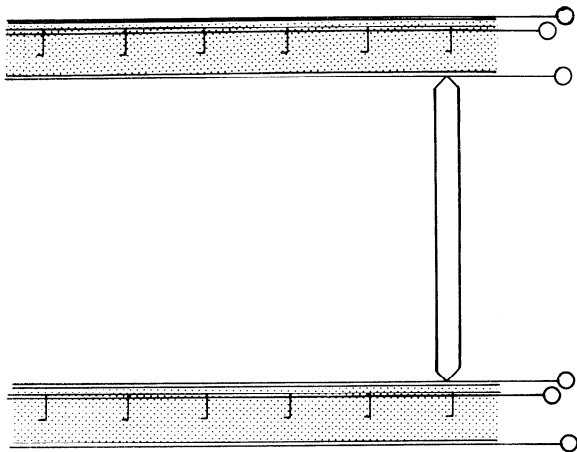

6.1.1 Deck to ceiling height


Controlling dimensions for the deck to ceiling height are measured between controlling lines situated on the boundaries of the finished floor to ceiling zones.

This dimension is of primary importance in the co-ordination of dimensions for shipbuilding as the maximum benefit would appear to derive from standard components for deckhouse subdivision, i.e. bulkhead and lining panels.

Heights in multiples of 100 mm (preferred) or 50 mm may be selected.

6.1.2 Intermediate vertical controlling dimensions

Intermediate vertical controlling dimensions are the dimensions for the height of window, sidelight and doorset heads and for the height of window and sidelight sills above the controlling plane at floor finish level. In relation to windows and sidelights these dimensions govern the position of the openings in linings to take window boxes rather than the position of the window itself.

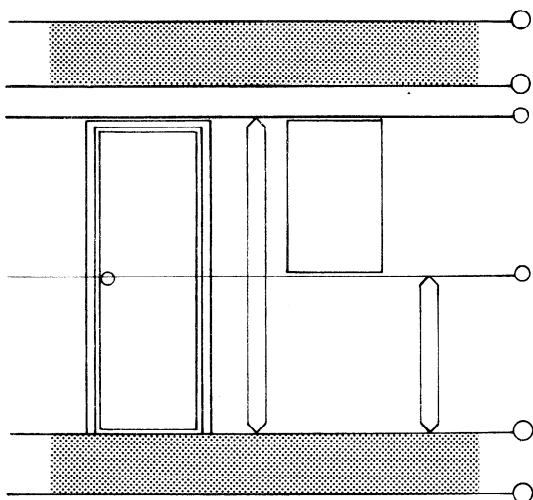

6.1.3 Height of zones


The zones which contain the deck and finish, services and ceiling are governed by the physical requirements for these items together with the deck structure. The height of the zones will be decided by these physical requirements and the tween deck height in order to achieve a preferred dimension for the deck to ceiling height.

6.2 Horizontal controlling dimensions

Horizontal controlling dimensions are for the width and spacing of controlling zones for the structural bulkheads, linings, etc., and for the spacing of zones for subdivision bulkheads.

The controlling lines to which the dimensions are located may be positioned either on the boundaries or on the axes of the zones.

As in the vertical controlling dimensions, a rectilinear structure is preferable for the maximum use of co-ordinated standard components and ISO 3827/IV makes a recommendation that, wherever possible, raked and/or cambered house fronts, shaped house sides and sloping side shell should be avoided or obviated internally. Wherever shaping is present, consideration must be given to its effect in order to obtain the maximum possible degree of co-ordination.

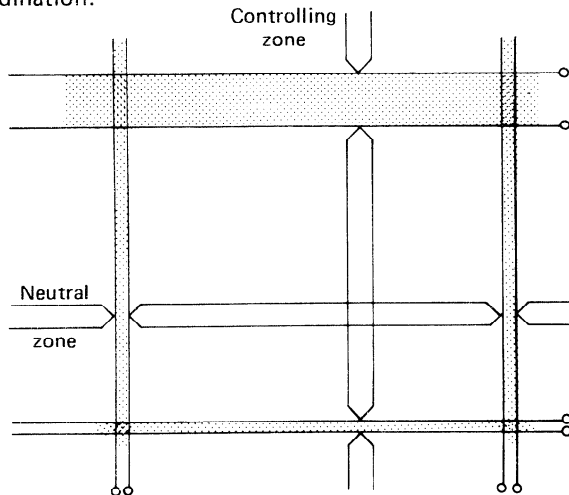

6.2.1 Spacing of zones

Horizontal controlling dimensions given in the table for the spacing of zones are applicable to both axial and boundary methods and refer to the horizontal distances between the controlling lines for the zones.

First preference Multiples of 300 mm from 300
Second preference Multiples of 100 mm from 300

6.2.2 Width of controlling zones

Horizontal controlling dimensions for the width of controlling zones refer to the dimensions within the boundaries of zones.