



***Society of Cable
Telecommunications
Engineers***

**ENGINEERING COMMITTEE
INTERFACE PRACTICES SUBCOMMITTEE**

AMERICAN NATIONAL STANDARD

ANSI/SCTE 144 2012

**Test Procedure for Measuring Transmission and
Reflection**

NOTICE

The Society of Cable Telecommunications Engineers (SCTE) Standards are intended to serve the public interest by providing specifications, test methods and procedures that promote uniformity of product, interchangeability and ultimately the long term reliability of broadband communications facilities. These documents shall not in any way preclude any member or non-member of SCTE from manufacturing or selling products not conforming to such documents, nor shall the existence of such standards preclude their voluntary use by those other than SCTE members, whether used domestically or internationally.

SCTE assumes no obligations or liability whatsoever to any party who may adopt the Standards. Such adopting party assumes all risks associated with adoption of these Standards, and accepts full responsibility for any damage and/or claims arising from the adoption of such Standards.

Attention is called to the possibility that implementation of this standard may require the use of subject matter covered by patent rights. By publication of this standard, no position is taken with respect to the existence or validity of any patent rights in connection therewith. SCTE shall not be responsible for identifying patents for which a license may be required or for conducting inquiries into the legal validity or scope of those patents that are brought to its attention.

Patent holders who believe that they hold patents which are essential to the implementation of this standard have been requested to provide information about those patents and any related licensing terms and conditions. Any such declarations made before or after publication of this document are available on the SCTE web site at <http://www.scte.org>.

All Rights Reserved

© Society of Cable Telecommunications Engineers, Inc. 2012
140 Philips Road
Exton, PA 19341

TABLE OF CONTENTS

1.0	PREFACE	2
2.0	SCOPE AND DEFINITIONS	3
3.0	REFERENCES	6
4.0	EQUIPMENT.....	5
5.0	SETUP	6
6.0	PRODEDURE.....	8
7.0	APPENDIX 1 TEST METHOD FOR SPLITTERS	10
8.0	APPENDIX 2 TEST METHOD FOR DIRECTIONAL COUPLERS.....	12

LIST OF FIGURES

FIGURE 1. S-PARAMETER DIAGRAM FOR A 2-PORT DEVICE	3
---	---

LIST OF TABLES

TABLE 1 – S-PARAMETER DEFINITIONS AND DESCRIPTIONS	3
TABLE 2 – TEST SEQUENCE TO COMPLETELY CHARACTERIZE A 2-WAY SPLITTER	11
TABLE 3 – MATRIX OF ALL THE 3-PORT S-PARAMETERS AND CORRESPONDING SPLITTER MEASUREMENTS	12
TABLE 4 – TEST SEQUENCE TO COMPLETELY CHARACTERIZE A 3-WAY SPLITTER	12
TABLE 5 – MATRIX OF ALL THE 4-PORT S-PARAMETERS AND THE CORRESPONDING SPLITTER MEASUREMENTS	13
TABLE 6 – TEST SEQUENCE TO COMPLETELY CHARACTERIZE A DIRECTIONAL COUPLER	14
TABLE 7 – MATRIX OF ALL THE 3-PORT S-PARAMETERS AND CORRESPONDING COUPLER MEASUREMENTS	14

1.0 PREFACE

The measurement of RF reflection and transmission spans several generations of test equipment. The fundamental components of these measurements are a sweep generator, a coaxial switcher, a directional coupler bridge, switchable attenuators, an RF amplifier, an RF detector and a scalable display.

The fundamental transmission measurement process is to generate an RF signal that sweeps through a user defined frequency range. This CW signal is routed through two paths by means of a coaxial spdt relay at each end of the two paths. One path is a reference that conducts the generator output through a reference attenuator directly to the detector. The other path travels through the device under test. As the signal alternates rapidly between the two paths, a differential image of the frequency response of the two paths is displayed. Measurements at each frequency are inferred by the difference between the two traces.

The same technique is applied to reflection measurements by inserting a directional coupler bridge in place of the device under test. The tap port of the bridge is connected to the device port to separate the incident from the reflected signals. The quality of the return loss measurement depends upon the directivity of the bridge.

This early method of measurement is scalar. This means that only the magnitude of the signal power is recovered on the display. Early network analyzers packaged these basic functions into one test instrument, and the use of internal microprocessors enabled a more accurate display of the difference between the reference and the device under test. Examples of early **scalar** network analyzers are Agilent 8711 and 8713.

However, the phase of the test signal is also important. The magnitude and phase define a complex data set at each test frequency that completely characterizes the behavior of a signal as it encounters an RF device. This requires an advanced layer of signal processing. A network analyzer capable of rendering the complex parameters of a waveform is called a **vector** network analyzer. Most of the early scalar network analyzers are now obsolete but the vector analyzer market has continued to evolve. These instruments have become widely accessible, and the complex output data is far more useful in applications from circuit and component design to manufacturing.

Therefore, while a scalar measurement approach to measuring return loss and insertion loss or gain is sufficient, a vector network analyzer is recommended for this generalized test procedure primarily because the results are far more applicable and the error correction capabilities enable greater measurement precision.

2.0 SCOPE AND DEFINITIONS

2.1 SCOPE

The purpose of this test procedure is to determine the reflection at any port, or the transmission between any two ports of a properly terminated device, as measured across a frequency range of interest. Depending on use of the data, return loss, insertion gain or loss, isolation, response variation or bandwidth can be derived. This specification is applicable to the testing of 75Ω devices.

2.2 DEFINITIONS

2.2.1 S-Parameters: Scattering parameters are a convention used to characterize the way a device modifies signal flow. S-parameters are always a ratio of two complex quantities. S-parameter notation identifies these quantities using the numbering convention $S(\text{out in})$ where the first number refers to the device port the signal is emerging from and the second number is the device port where the signal is incident. For example, the s-parameter S_{21} identifies the measurement as the complex ratio of the signal emerging at device port 2 to the incident signal at device port 1.

Figure 1 is a representation of the s-parameters of a two-port device. In the illustration, “a” represents the signal entering the device and “b” represents the signal emerging.

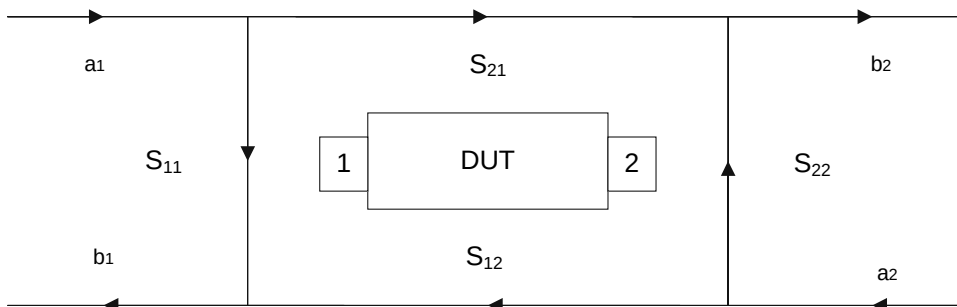


Figure 1 – S-parameter diagram for a 2-port device

S-Parameter	Definition	Description	Direction
S_{11}	$b1/a1$ $a2=0$	Input Reflection	FWD
S_{21}	$b2/a1$ $a2=0$	Forward Transmission	FWD
S_{12}	$b1/a2$ $a1=0$	Reverse Transmission	REV
S_{22}	$b2/a2$ $a1=0$	Output Reflection	REV

Table 1 – S-parameter definitions and descriptions