



BSI Standards Publication

Intelligent transport systems — Communication access for land mobiles (CALM) — Non-IP networking

Part 1: Fast networking & transport layer protocol (FNTF)

National foreword

This British Standard is the UK implementation of ISO 29281-1:2013+A1:2017. It supersedes BS ISO 29281-1:2013, which is withdrawn.

The start and finish of text introduced or altered by amendment is indicated in the text by tags. Tags indicating changes to ISO text carry the number of the amendment. For example, text altered by ISO amendment 1 is indicated in the text by A1 A1.

The UK participation in its preparation was entrusted to Technical Committee EPL/278, Intelligent transport systems.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

ISBN 978 0 580 85485 9

ICS 35.240.60; 03.220.01

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 30 April 2013.

Amendments/corrigenda issued since publication

Date	Text affected
31 March 2018	Implementation of ISO amendment 1:2017

INTERNATIONAL
STANDARD

ISO
29281-1

First edition
2013-04-15

**Intelligent transport systems —
Communication access for
land mobiles (CALM) — Non-IP
networking —**

**Part 1:
Fast networking & transport layer
protocol (FNTTP)**

*Systèmes intelligents de transport — Accès aux communications des
services mobiles terrestres (CALM) — Réseautique non-IP —*

Partie 1: Réseautique rapide et protocole de la couche transport



Reference number
ISO 29281-1:2013(E)

Documents
Document Sharing Hub
© ISO 2013



COPYRIGHT PROTECTED DOCUMENT

© ISO 2013, Published in Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Ch. de Blandonnet 8 • CP 401
CH-1214 Vernier, Geneva, Switzerland
Tel. +41 22 749 01 11
Fax +41 22 749 09 47
copyright@iso.org
www.iso.org

Contents

Page

Foreword	v
Introduction	vi
1 Scope	1
2 Normative references	1
3 Terms and definitions	2
4 Abbreviated terms	2
5 Architectures	2
5.1 Modes of operation	2
5.1.1 General context and purpose of FNTTP	2
5.1.2 Basic mode of operation	2
5.1.3 Extended mode of operation	2
5.2 FNTTP reference architecture	3
5.3 Communication principles	3
5.3.1 Transmission	3
5.3.2 Reception	4
5.3.3 FNTTP ITS-SPs	4
5.4 Implementation architectures	4
6 Protocol elements	6
6.1 Service access points	6
6.1.1 IN-SAP	6
6.1.2 NF-SAP	6
6.1.3 MN-SAP	6
6.1.4 SN-SAP	7
6.2 FNTTP NPDU	7
6.2.1 Structure	7
6.2.2 FNTTP header	7
6.2.3 FNTTP body	11
6.3 Protocol management elements	11
6.3.1 Service look-up table	11
6.3.2 Forwarding table	11
7 Protocol procedures	13
7.1 Service access points	13
7.1.1 General	13
7.1.2 IN-SAP	13
7.1.3 NF-SAP	13
7.1.4 MN-SAP	13
7.1.5 SN-SAP	13
7.2 Port management	13
7.3 Maintenance of entries in forwarding tables	13
7.4 Initial settings of forwarding tables in ITS-S hosts	14
7.4.1 Allocation and deletion of a port	14
7.4.2 Assignment of communication interfaces	14
7.5 Initial settings of forwarding tables in ITS-S routers	15
7.5.1 Assignment of communication interfaces	15
7.6 Transmitting packets	15
7.6.1 NF-SAP transmission request	15
7.6.2 Basic procedure	16
7.6.3 Extended procedure	16
7.6.4 Forwarding host to router procedure	17
7.7 Receiving packets	18
7.7.1 Checking of FNTTP header	18
7.7.2 ITS-SP check and forwarding Table update	18

7.7.3	Basic delivery procedure	19
7.7.4	Extended delivery procedure	19
7.7.5	N-hop broadcast procedure	19
7.7.6	Forwarded delivery procedure	20
7.7.7	Send procedure	20
7.7.8	Forwarding router to host procedure	20
7.8	Management of forwarding tables	20
7.8.1	Settings of forwarding tables	20
7.8.2	Notification of changes in forwarding tables	20
7.9	CIP management	21
7.9.1	Purpose of CIPs	21
7.9.2	Forwarding of CIPs from ITS-S host to ITS-S router	21
7.9.3	Forwarding of CIPs from ITS-S router to ITS-S host	21
8	NF-SAP services	22
8.1	Overview	22
8.2	NF-FNTP-PORT	22
8.2.1	NF-FNTP-PORT.request	22
8.2.2	NF-FNTP-PORT.confirm	23
8.3	NF-FNTP-COMM	23
8.3.1	NF-FNTP-COMM.request	23
8.3.2	NF-FNTP-COMM.confirm	24
8.3.3	NF-FNTP-COMM.indication	25
9	Conformance	26
10	Test methods	26
	Bibliography	27

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2. www.iso.org/directives

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received. www.iso.org/patents

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

The committee responsible for this document is ISO/TC 204, *Intelligent transport systems*.

This first edition of ISO 29281-1, together with ISO 29281-2, cancels and replaces ISO 29281:2011.

ISO 29281 consists of the following parts, under the general title *Intelligent transport systems — Communication access for land mobiles (CALM) — Non-IP networking*:

- *Part 1: Fast networking and transport layer protocol (FNTP)*
- *Part 2: Legacy system support*

Introduction

This part of ISO 29281 is part of a series of International Standards for communications access for land mobiles (CALM). An introduction to the whole set of International Standards is provided in [ISO 21217](#).

This part of ISO 29281 is part 1 of a multipart standard which determines the intelligent transport systems (ITS) non-IP communications.

An essential protocol for non-IP communications is the “Fast networking & transport layer protocol” (FNTP). FNTP distinguishes:

- a basic port mapper protocol, primarily used for single-hop communications between ITS stations;
- protocol extensions for
 - N-hop groupcast;
 - LPP;
 - secured communication;
 - ITS station-internal forwarding of packets between ITS-S host ITS-SCUs and ITS-S router ITS-SCUs.

FNTP is validated in the CVIS project.

Intelligent transport systems — Communication access for land mobiles (CALM) — Non-IP networking —

Part 1: Fast networking & transport layer protocol (FNTTP)

1 Scope

This part of ISO 29281 specifies a protocol of the ITS-S networking and transport layer in support of efficient ad hoc single-hop communications with optional N-hop broadcast.

This protocol supports ITS station-internal forwarding of packets, i.e. between ITS-S routers and ITS-S hosts and vice versa. The protocol is named “Fast Networking & Transport Protocol” (FNTTP).

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

[ISO/IEC 8825-2](#), *Information technology — ASN.1 encoding rules: Specification of Packed Encoding Rules (PER) — Part 2*

[ISO 21217](#), *Intelligent transport systems — Communications access for land mobiles (CALM) — Architecture*

[ISO 21218](#), *Intelligent transport systems — Communications access for land mobiles (CALM) — Access technology support*

[ISO 24102-1](#), *Intelligent transport systems — Communications access for land mobiles (CALM) — ITS station management — Part 1: Local management*

[ISO 24102-3](#), *Intelligent transport systems — Communications access for land mobiles (CALM) — ITS station management — Part 3: Service access points*

[ISO 24102-4](#), *Intelligent transport systems — Communications access for land mobiles (CALM) — ITS station management — Part 4: Station-internal management communications*

[ISO 24102-5](#), *Intelligent transport systems — Communications access for land mobiles (CALM) — ITS station management — Part 5: Fast service advertisement protocol (FSAP)*

ETSI TS 102 985-1, *Intelligent Transport Systems (ITS); Communications Access for Land Mobiles (CALM); Test specifications for non-IP networking (ISO 29281); Part 1: Protocol implementation conformance “statement (PICS) proforma*

ETSI TS 102 985-2, *Intelligent Transport Systems (ITS); Communications Access for Land Mobiles (CALM); Test specifications for non-IP networking (ISO 29281); Part 2: Test suite structure & test purposes (TSS&TP)*

ETSI TS 102 985-3, *Intelligent Transport Systems (ITS); Communications Access for Land Mobiles (CALM); Test specifications for non-IP networking (ISO 29281); Part 3: Abstract test suite and partial PIXIT (ATS) specification*

3 Terms and definitions

For the purposes of this document, the terms and definitions given in [ISO 21217](#), [ISO 24102-3](#), [ISO 24102-4](#) and the following apply.

3.1

ITS-S port

source and/or destination “endpoint” for communications identified by an integer number

4 Abbreviated terms

FNTP Fast networking & transport protocol

ITS-SP ITS-S port

5 Architectures

5.1 Modes of operation

5.1.1 General context and purpose of FNTP

The “fast networking & transport layer protocol” (FNTP) specified in this part of ISO 29281 is designed as a protocol of the ITS-S networking and transport layer of the ITS station (ITS-S) architecture which recognizes the concepts of the bounded, secured and managed ITS-S; and supports the concept of ITS station communication units (ITS-SCU) to implement roles of an ITS-S in physical units specified (see [ISO 21217](#), [ISO 24102-1](#), [ISO 24102-3](#) and [ISO 24102-4](#)).

FNTP is primarily designed to enable single-hop communication between peer ITS stations with minimum protocol overhead, and supports optional features.

NOTE [ISO 15628](#) legacy systems support specified in [2] makes use of FNTP.

FNTP supports any kind of ad hoc access technology, e.g. CALM M5, CALM IR. FNTP may be used to connect source and destination “endpoints” identified by “ITS-S port” (ITS-SP) numbers in peer ITS stations, where peer ITS stations are uniquely identified by a Link-ID (usually MAC address contained in it) of the access layer specified in [ISO 21218](#). Consequently, FNTP is a port mapper protocol, usually located in the transport layer of the OSI model.

5.1.2 Basic mode of operation

The basic mode of operation is the simplest option of FNTP, which is just providing single-hop communications between instances of ITS stations without applying any of the options of FNTP.

5.1.3 Extended mode of operation

The extended mode of operation supports options of the FNTP, e.g.:

- ITS station-internal forwarding;
- secure communications;
- N-hop broadcast;
- LPP support;
- CIP management.

ITS station-internal forwarding is a special option referred to as “station-internal forwarding mode of operation”.

Other options may be added in a future revision of this part of ISO 29281.

5.2 FNTF reference architecture

[Figure 1](#) illustrates the location of FNTF in the ITS station (ITS-S) specified in [ISO 21217](#), and the communication relations with other protocol entities.

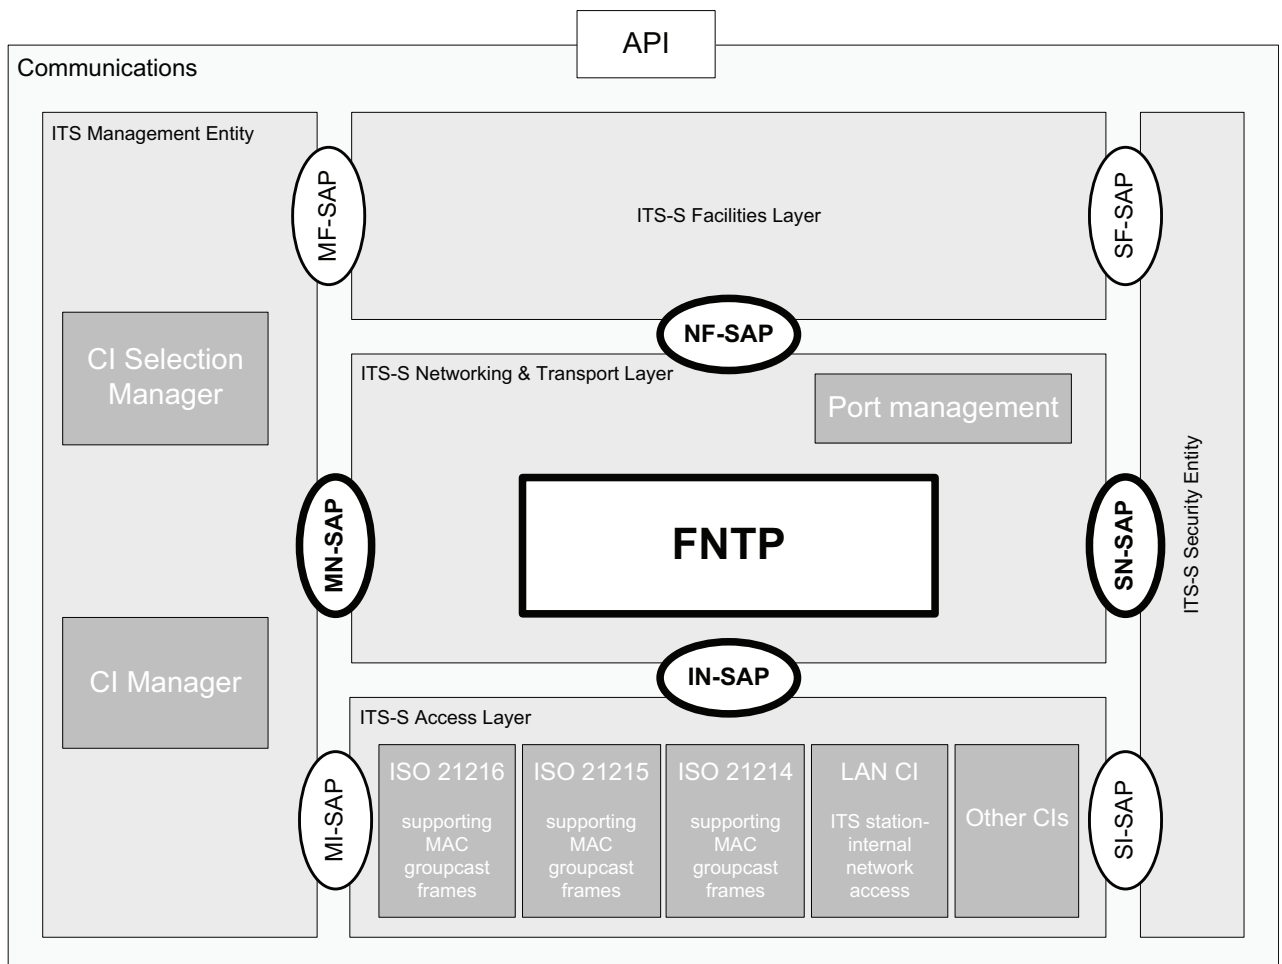


Figure 1 — FNTF reference architecture

The “Port management” is specified as part of FNTF, but may also be used for other ITS-S networking and transport layer protocols.

The “CI Selection Manager” is specified in [ISO 24102-1](#). The “CI Manager” is specified in [ISO 24102-1](#) and [ISO 21218](#). These two managers are supporting FNTF, but FNTF does not necessarily depend on these managers.

5.3 Communication principles

5.3.1 Transmission

Transmission requests may be presented by the ITS-S facilities layer via the NF-SAP. Sources and destinations of messages in the ITS-S facilities layer are identified by ITS-SP numbers.

Valid transmission requests to a groupcast MAC address are given by a “well-known” destination port address in combination with an existing groupcast VCI. The value of the source port address is irrelevant with respect of validity of a transmission request in case no reply is expected. Replies to groupcast messages are expected, e.g. in case of the service advertisement message specified in [ISO 24102-5](#).

Valid transmission requests to a unicast MAC address are given by any valid destination port address in combination with an existing unicast VCI. The value of the source port address is irrelevant with respect of validity of a transmission request in case no reply is expected.

Transmission requests are presented by the FNTTP to the ITS-S access layer using services of the IN-SAP.

NOTE In a CALM compliant ITS station, assignment of VCIs to ITS-S applications is done automatically by the CI selection management specified in [ISO 24102-1](#).

5.3.2 Reception

Reception notifications may be presented by the ITS-S access layer to the FNTTP using services of the IN-SAP. Sources and destinations of messages are identified by ITS-SP numbers contained in the FNTTP NPDU.

Valid notified packets addressed to an ITS-SP are given by a known destination port address. Which CI was used for reception of the packet, and which is the source port address of the packet, are not relevant for the validity of the packet, but are relevant for a potential reply.

Notifications of received packets are presented by the FNTTP to the ITS-S facilities layer using services of the NF-SAP.

5.3.3 FNTTP ITS-SPs

Allocation and deletion of dynamic and static well-known “ITS-S port” (ITS-SP) numbers is specified in [8.2](#).

NOTE Static well-known ITS-SP numbers are assigned to ITS applications by a registration authority, see [4].

5.4 Implementation architectures

FNTTP may support the implementation architectures introduced in [ISO 21217](#) and illustrated in [Figures 2, 3](#) and [4](#) with the peer ITS stations A and B, indicating FNTTP in the ITS-S networking and transport layer.

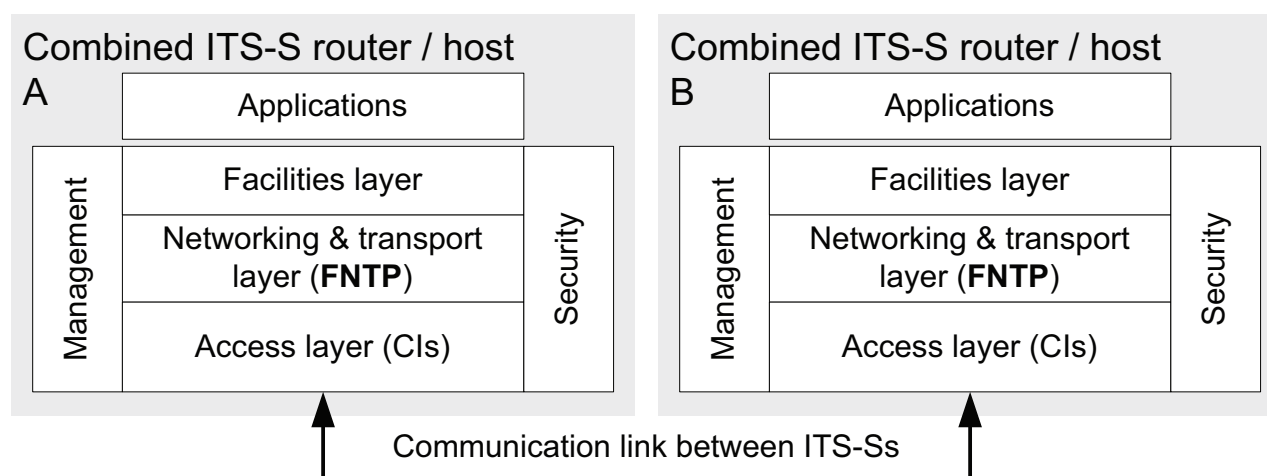


Figure 2 — Implementation architecture I