

DIN EN 62453-303-1

ICS 35.160; 35.240.50

**Field Device Tool (FDT)-Schnittstellenspezifikation –
Teil 303-1: Integration von Kommunikationsprofilen –
Kommunikationsprofile (CP) 3/1 und 3/2 nach IEC 61784
(IEC 62453-303-1:2009);
Englische Fassung EN 62453-303-1:2009**

Field device tool (FDT) interface specification –
Part 303-1: Communication profile integration –
IEC 61784 CP 3/1 and CP 3/2 (IEC 62453-303-1:2009);
English version EN 62453-303-1:2009

Spécification des interfaces des outils des dispositifs de terrain (FDT) –
Partie 303-1: Intégration des profils de communication –
CEI 61784 CP 3/1 et CP 3/2 (CEI 62453-303-1:2009);
Version anglaise EN 62453-303-1:2009

Gesamtumfang 63 Seiten

DKE Deutsche Kommission Elektrotechnik Elektronik Informationstechnik im DIN und VDE

Beginn der Gültigkeit

Die von CENELEC am 2009-08-01 angenommene EN 62453-303-1 gilt als DIN-Norm ab 2010-02-01.

Nationales Vorwort

Vorausgegangener Norm-Entwurf: E DIN IEC 62453-303-1:2008-02.

Für diese Norm ist das nationale Arbeitsgremium K 956 „Feldbus“ der DKE Deutsche Kommission Elektrotechnik Elektronik Informationstechnik im DIN und VDE (www.dke.de) zuständig.

Die enthaltene IEC-Publikation wurde vom SC 65E „System: engineering and management“ erarbeitet.

Das IEC-Komitee hat entschieden, dass der Inhalt dieser Publikation bis zu dem Datum (maintenance result date) unverändert bleiben soll, das auf der IEC-Website unter „<http://webstore.iec.ch>“ zu dieser Publikation angegeben ist. Zu diesem Zeitpunkt wird entsprechend der Entscheidung des Komitees die Publikation

- bestätigt,
- zurückgezogen,
- durch eine Folgeausgabe ersetzt oder
- geändert.

Enthält eine Schnittstellenfestlegung für Entwickler von FDT-Programmbausteinen, um Datenzugriff und Programmablauf in einer Client-Server-Architektur zu entwerfen. Das vorliegende Schriftstück beschreibt die Integration des Profibus DP und PA-Protokolls (DIN EN 61158-x-3) in die FDT-Spezifikationen nach DIN EN 62453-2.

Da sich die Benutzer der vorliegenden Norm der englischen Sprache als Fachsprache bedienen, wird die Englische Fassung der EN 62453-303-1 veröffentlicht. Für die meisten der verwendeten Begriffe existieren keine gebräuchlichen deutschen Benennungen, da sich die deutschen Anwender in der Regel ebenfalls der englischen Benennungen bedienen. Diese Norm steht nicht in unmittelbarem Zusammenhang mit Rechtsvorschriften und ist nicht als Sicherheitsnorm anzusehen.

Das Präsidium des DIN hat mit Präsidialbeschluss 1/2004 festgelegt, dass DIN-Normen, deren Inhalt sich auf internationale Arbeitsergebnisse der Informationsverarbeitung gründet, unter bestimmten Bedingungen allein in englischer Sprache veröffentlicht werden dürfen. Diese Bedingungen sind für die vorliegende Norm erfüllt.

Für den Fall einer undatierten Verweisung im normativen Text (Verweisung auf eine Norm ohne Angabe des Ausgabedatums und ohne Hinweis auf eine Abschnittsnummer, eine Tabelle, ein Bild usw.) bezieht sich die Verweisung auf die jeweils neueste gültige Ausgabe der in Bezug genommenen Norm.

Für den Fall einer datierten Verweisung im normativen Text bezieht sich die Verweisung immer auf die in Bezug genommene Ausgabe der Norm.

Der Zusammenhang der zitierten Normen mit den entsprechenden Deutschen Normen ergibt sich, soweit ein Zusammenhang besteht, grundsätzlich über die Nummer der entsprechenden IEC-Publikation. Beispiel: IEC 60068 ist als EN 60068 als Europäische Norm durch CENELEC übernommen und als DIN EN 60068 ins Deutsche Normenwerk aufgenommen.

**Field device tool (FDT) interface specification —
Part 303-1: Communication profile integration —
IEC 61784 CP 3/1 and CP 3/2
(IEC 62453-303-1:2009)**

Spécification des interfaces des outils
des dispositifs de terrain (FDT) —
Partie 303-1: Intégration des profils
de communication —
CEI 61784 CP 3/1 et CP 3/2
(CEI 62453-303-1:2009)

Field Device Tool (FDT)-
Schnittstellenspezifikation —
Teil 303-1: Integration von
Kommunikationsprofilen —
Kommunikationsprofile
(CP) 3/1 und 3/2 nach IEC 61784
(IEC 62453-303-1:2009)

This European Standard was approved by CENELEC on 2009-08-01. CENELEC members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration.

Up-to-date lists and bibliographical references concerning such national standards may be obtained on application to the Central Secretariat or to any CENELEC member.

This European Standard exists in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CENELEC member into its own language and notified to the Central Secretariat has the same status as the official versions.

CENELEC members are the national electrotechnical committees of Austria, Belgium, Bulgaria, Cyprus, the Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, the Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland and the United Kingdom.

CENELEC

European Committee for Electrotechnical Standardization
Comité Européen de Normalisation Electrotechnique
Europäisches Komitee für Elektrotechnische Normung

Central Secretariat: Avenue Marnix 17, B - 1000 Brussels

Foreword

The text of document 65E/127/FDIS, future edition 1 of IEC 62453-303-1, prepared by SC 65E, Devices and integration in enterprise systems, of IEC TC 65, Industrial-process measurement, control and automation, was submitted to the IEC-CENELEC parallel vote and was approved by CENELEC as EN 62453-303-1 on 2009-08-01.

Each part of the EN 62453-3xy series is intended to be read in conjunction with EN 62453-2.

The following dates were fixed:

- latest date by which the EN has to be implemented
at national level by publication of an identical
national standard or by endorsement (dop) 2010-05-01
- latest date by which the national standards conflicting
with the EN have to be withdrawn (dow) 2012-08-01

Annex ZA has been added by CENELEC.

Endorsement notice

The text of the International Standard IEC 62453-303-1:2009 was approved by CENELEC as a European Standard without any modification.

In the official version, for Bibliography, the following notes have to be added for the standards indicated:

- | | |
|-----------------|--|
| [5] IEC 61158-6 | NOTE Harmonized as EN 61158-6:2004 (not modified). |
| [7] IEC 61158-5 | NOTE Harmonized as EN 61158-5:2004 (not modified). |

CONTENTS

INTRODUCTION.....	6
1 Scope.....	7
2 Normative references	7
3 Terms, definitions, symbols, abbreviated terms and conventions	8
3.1 Terms and definitions	8
3.2 Symbols and abbreviated terms.....	8
3.3 Conventions	8
3.3.1 Data type names and references to data types	8
3.3.2 Vocabulary for requirements	8
3.3.3 Use of UML	8
4 Bus category	9
5 Access to instance and device data	9
5.1 Process Channel objects provided by DTM.....	9
5.2 DTM services to access instance and device data	9
6 Protocol specific behavior.....	9
6.1 PROFIBUS device model	9
6.2 Configuration and parameterization of PROFIBUS devices	10
6.2.1 General	10
6.2.2 Monolithic DTM for a modular PROFIBUS device	11
6.2.3 Modular DTM for a modular PROFIBUS device.....	11
6.3 Support for DPV0 configuration	11
6.4 PROFIBUS slaves operating without a cyclic PROFIBUS master	12
6.5 PROFIBUS-related information of a slave DTM	12
6.5.1 General	12
6.5.2 Bus Master Configuration Part (BMCP).....	13
7 Protocol specific usage of general data types	24
8 Protocol specific common data types.....	26
9 Network management data types.....	26
9.1 General.....	26
9.1.1 Configuration.....	26
9.1.2 Process Channel	27
9.1.3 Parameterization	27
9.2 Master-bus parameter set.....	28
9.3 Slave bus parameter set.....	28
9.4 Module and channel data	29
9.5 GSD information.....	32
9.5.1 General	32
9.5.2 GSD for gateway devices	32
10 Communication data types	33
10.1 General.....	33
10.2 Error information provided by Communication Channel	33
10.3 DPV0 communication	33
10.4 DPV1 communication	40
11 Channel parameter data types.....	43

12	Device identification	46
12.1	General	46
12.2	Protocol specific handling of the data type STRING	46
12.3	Common device type identification data types	46
12.4	Topology scan data types	51
12.5	Scan identification data types	52
12.6	Device type identification data types – provided by DTM	54
12.7	Identification information in GUI	57
13	ProfiSafe	57
13.1	Motivation	57
13.2	General parameter handling	57
13.3	ProfiSafe individual device parameter	58
	Bibliography	60
	Annex ZA (normative) Normative references to international publications with their corresponding European publications	61
	Figure 1 – Part 303-1 of the IEC 62453 series	6
	Figure 2 – FDT PROFIBUS device model	10
	Figure 3 – Example for IO data within datagrams	30
	Figure 4 – F-Parameter and individual device parameter	58
	Figure 5 – Data structure of ProfiSafe individual device parameters	59
	Table 1 – Protocol identifiers	9
	Table 2 – Physical layer identifiers	9
	Table 3 – BMPC Part1 – General configuration	14
	Table 4 – BMPC Part2 – Parameter data	14
	Table 5 – BMPC Part3 – Configuration data	15
	Table 6 – Part 4: Address table and slave user parameters	16
	Table 7 – Part 4: Extended Prm data	16
	Table 8 – Complete BMCP	17
	Table 9 – Protocol specific usage of general data types	24
	Table 10 – Bus parameter set for master device	28
	Table 11 – Bus parameter set for slave device	29
	Table 12 – Signal channels within the data frame	31
	Table 13 – Simple DPV0 communication data types	34
	Table 14 – Structured DPV0 Communication data types	34
	Table 15 – Availability of services for Master Class1 (C1)	39
	Table 16 – Availability of services for Master Class2 (C2)	39
	Table 17 – Simple DPV1 communication data types	40
	Table 18 – Structured DPV1 communication data types	41
	Table 19 – Mapping of DPV1 data types to FDT data types	43
	Table 20 – Simple ChannelParameter data types	44
	Table 21 – Structured ChannelParameter data types	45
	Table 22 – Identification data types with Profibus DP specific mapping	47
	Table 23 – Identification data types with Profibus I&M specific mapping	48

Table 24 – Identification data types with Profibus PA specific mapping	50
Table 25 – Simple identification data types with protocol independent semantics.....	51
Table 26 – Structured identification data types with protocol independent semantics	51
Table 27 – Simple topology scan data types	51
Table 28 – Structured topology scan data types.....	51
Table 29 – Simple scan identification data types.....	52
Table 30 – Structured scan identification data types	52
Table 31 – Structured device identification data types.....	55

INTRODUCTION

This part of IEC 62453 is an interface specification for developers of FDT (Field Device Tool) components for function control and data access within a client/server architecture. The specification is a result of an analysis and design process to develop standard interfaces to facilitate the development of servers and clients by multiple vendors that need to interoperate seamlessly.

With the integration of fieldbuses into control systems, there are a few other tasks which need to be performed. In addition to fieldbus- and device-specific tools, there is a need to integrate these tools into higher-level system-wide planning- or engineering tools. In particular, for use in extensive and heterogeneous control systems, typically in the area of the process industry, the unambiguous definition of engineering interfaces that are easy to use for all those involved is of great importance.

A device-specific software component, called DTM (Device Type Manager), is supplied by the field device manufacturer with its device. The DTM is integrated into engineering tools via the FDT interfaces defined in this specification. The approach to integration is in general open for all kinds of fieldbuses and thus meets the requirements for integrating different kinds of devices into heterogeneous control systems.

Figure 1 shows how IEC 62453–303-1 is aligned in the structure of the IEC 62453 series.

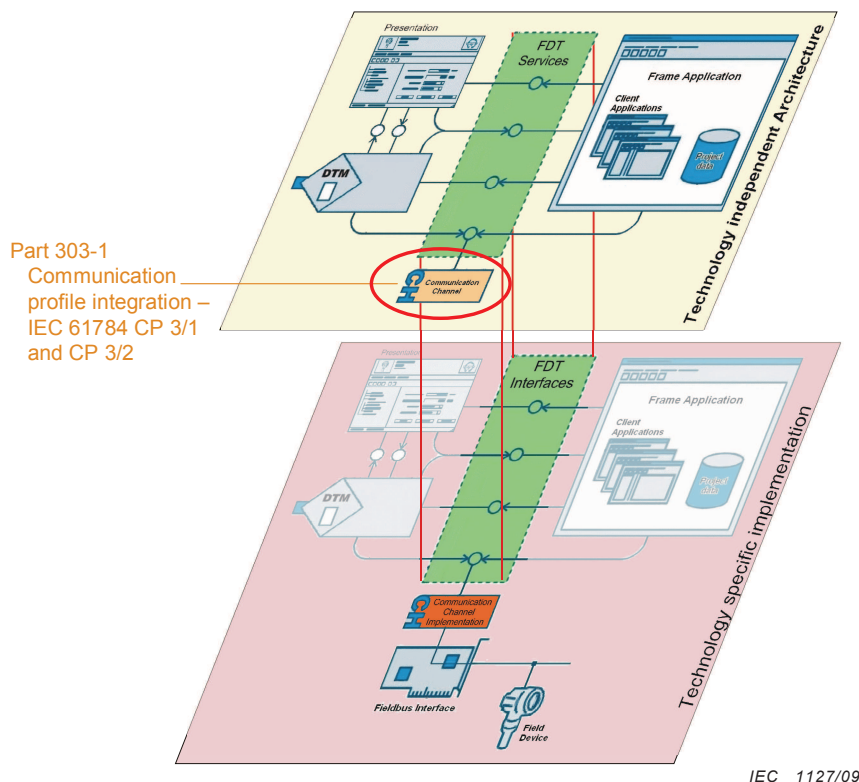


Figure 1 – Part 303-1 of the IEC 62453 series

FIELD DEVICE TOOL (FDT) INTERFACE SPECIFICATION –

Part 303-1: Communication profile integration – IEC 61784 CP 3/1 and CP 3/2

1 Scope

Communication Profile 3/1 and Communication Profile 3/2 (commonly known as PROFIBUS™¹) defines communication profiles based on IEC 61158-2 Type 3, IEC 61158-3-3, IEC 61158-4-3, IEC 61158-5-3, and IEC 61158-6-3. The basic profiles CP 3/1 (PROFIBUS DP) and CP 3/2 (PROFIBUS PA) are defined in IEC 61784-1.

This part of IEC 62453 provides information for integrating the PROFIBUS protocol into the FDT interface specification (IEC 62453–2).

This part of the IEC 62453 specifies communication and other services.

This specification neither contains the FDT specification nor modifies it.

2 Normative references

The following referenced documents are indispensable for the application of this specification. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies

IEC 61131-3:2003, *Programmable controllers – Part 3: Programming languages*

IEC 61158 (all parts), *Industrial communication networks – Fieldbus specifications*

IEC 61158-2, *Industrial communication networks – Fieldbus specifications – Part 2: Physical layer specification and service definition*

IEC 61158-3-3, *Industrial communication networks – Fieldbus specifications – Part 3-3: Data-link layer service definition – Type 3 elements*

IEC 61158-4-3, *Industrial communication networks – Fieldbus specifications – Part 4-3: Data-link layer protocol specification – Type 3 elements*

IEC 61158-5-3, *Industrial communication networks – Fieldbus specifications – Part 5-3: Application layer service definition – Type 3 elements*

IEC 61158-6-3, *Industrial communication networks – Fieldbus specifications – Part 6-3: Application layer protocol specification – Type 3 elements*

IEC 61784-1, *Industrial communication networks – Profiles – Part 1: Fieldbus profiles*

¹ PROFIBUS™ is a trade name of the non-profit organization PROFIBUS Nutzerorganisation e.V. (PNO). This information is given for the convenience of users of this International Standard and does not constitute an endorsement by IEC of the trade name holder or any of its products. Compliance to this standard does not require use of the registered logos for PROFIBUS™. Use of the registered logos for PROFIBUS™ requires permission of PNO.

IEC 62453-1:2009, *Field Device Tool (FDT) interface specification – Part 1: Overview and guidance*

IEC 62453-2:2009, *Field Device Tool (FDT) interface specification – Part 2: Concepts and detailed description*

3 Terms, definitions, symbols, abbreviated terms and conventions

3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in IEC 62453–1 and IEC 62453–2 apply.

3.1.1

bus interface module

module of a field device that provides the connection to the fieldbus

3.1.2

CP 3/1

Communication profile of CPF3, featuring asynchronous transmission; RS 485 (ANSI TIA/EIA RS-485-A); optional RS 485-IS; plastic fiber; glass multi mode fiber or glass single mode fiber; PCF fiber

3.1.3

CP 3/2

Communication profile of CPF3, featuring synchronous transmission; manchester coded and bus powered (MBP); optional intrinsically safe (MBP-IS) and lower power (MBP-LP)

3.2 Symbols and abbreviated terms

For the purposes of this document, the symbols and abbreviations given in IEC 62453–1, IEC 62453–2 and the following apply.

BIM	Bus Interface Module
BMCP	Bus Master Configuration Part
GSD	General Station Description

3.3 Conventions

3.3.1 Data type names and references to data types

The conventions for naming and referencing of data types are explained in IEC 62453-2, Clause A.1

3.3.2 Vocabulary for requirements

The following expressions are used when specifying requirements.

Usage of “shall” or “mandatory”	No exceptions allowed.
Usage of “should” or “recommended”	Strong recommendation. It may make sense in special exceptional cases to differ from the described behaviour.
Usage of “can” or “optional”	Function or behaviour may be provided, depending on defined conditions.

3.3.3 Use of UML

Figures in this document are using the UML notation as defined in Annex A of IEC 62453–1.

4 Bus category

CP 3/1 and CP 3/2 protocols are identified in the protocolId element of the structured data type 'fdt:BusCategory' by the following unique identifiers (Table 1):

Table 1 – Protocol identifiers

Identifier value	ProtocolId name	Description
036D1497-387B-11D4-86E1-00E0987270B9	'Profibus DP/V0'	Support of Profibus DP V0 protocol
036D1499-387B-11D4-86E1-00E0987270B9	'Profibus DP/V1'	Support of Profibus DP V1 protocol

CP 3/1 AND CP 3/2 protocols are using the following unique identifiers in physicalLayer members within PhysicalLayer data type (Table 2):

Table 2 – Physical layer identifiers

Identifier value	Description
036D1590-387B-11D4-86E1-00E0987270B9	IEC 61158-2 (Profibus PA)
036D1591-387B-11D4-86E1-00E0987270B9	RS485
036D1592-387B-11D4-86E1-00E0987270B9	Fiber
036D1593-387B-11D4-86E1-00E0987270B9	Ethernet

5 Access to instance and device data

5.1 Process Channel objects provided by DTM

The minimum set of provided data should be: Process values modelled as channel objects including the ranges and scaling

5.2 DTM services to access instance and device data

The services InstanceDataInformation and DeviceDataInformation shall provide access to at least all parameters of the Physical Block and the status and Out value of the Function Blocks shall be exposed.


According to IEC 62453-2, at least one set of semantic information (one per supported fieldbus protocol) shall be provided for each accessible data object, using the 'SemanticInformation' general data type. The corresponding data type 'applicationDomain' shall have a value defined for Profibus and the data type 'semanticId' shall have an appropriate value, as specified in Table 9.

6 Protocol specific behavior


6.1 PROFIBUS device model

FDT extends the PROFIBUS device model by using Process Channels for description of I/O values (see Figure 2).

Classical View of PROFIBUS device

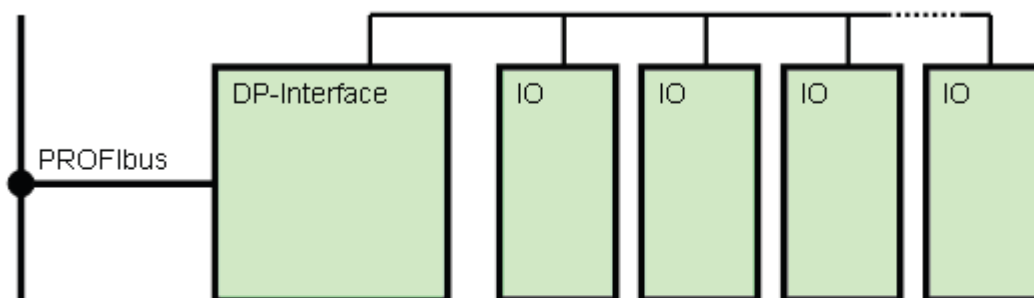

PROFIBUS notations from a monolithic DPV1 or PA device DTMs point of view

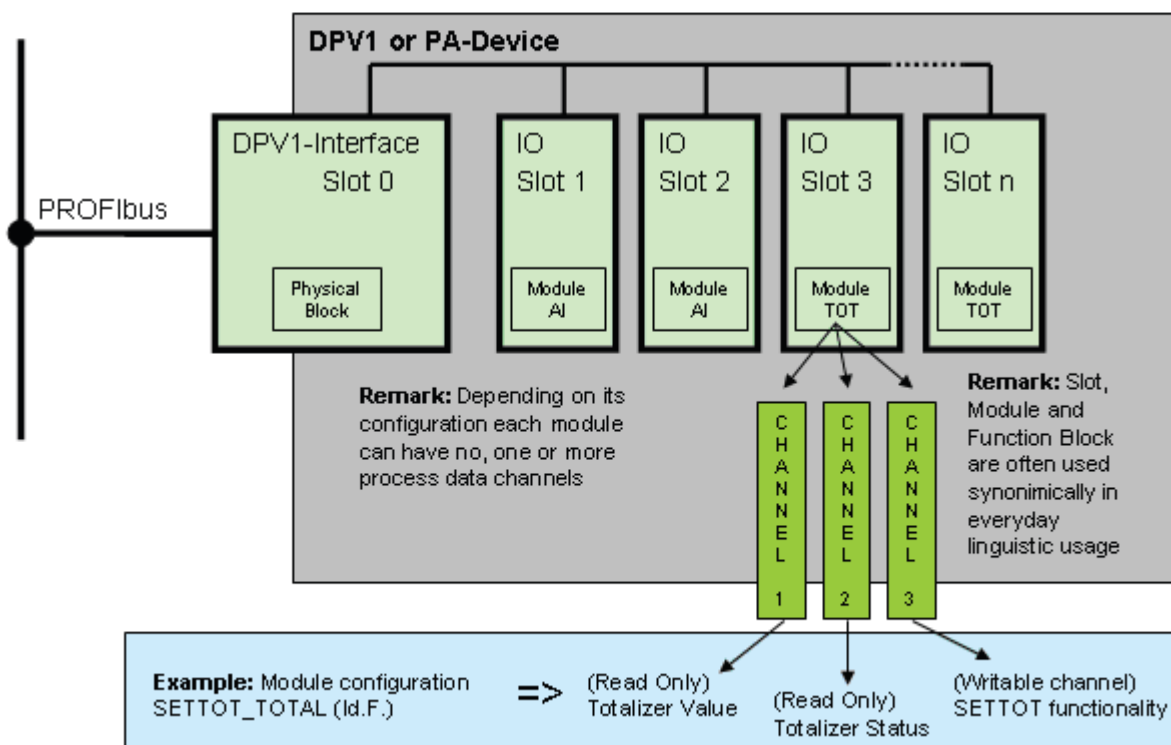

IEC 1128/09

Figure 2 – FDT PROFIBUS device model

6.2 Configuration and parameterization of PROFIBUS devices

6.2.1 General

In a GSD-based configuration tool the user defines the configuration and sets the appropriate parameters for the modules. The configuration tool creates the configuration string and the parameter string that are used to set up the slave properly.

With FDT the configuration and parameterization of the devices is no longer executed only by a central component; it moved partly into the DTMs. A DTM is responsible for providing configuration and parameterization information for the cyclic master that puts the PROFIBUS slaves in operation.

A DTM is used to adjust a field device to its specific application. Within PROFIBUS, there are three different aspects of adjustment:

- parameterization: user prm data (used in the PROFIBUS service SET_PRM for setting up the cyclic communication and the specific behavior of the device);

- application parameterization: application specific parameters (transmitted via acyclic read/write PROFIBUS services);
- configuration: configuration data (used in the PROFIBUS service CHK_CFG for definition of the format and length of the input/output data that are transmitted within cyclic communication).

The application parameterization transmitted via acyclic communication is not in the scope of this document. Within this document the term parameterization represents communication parameterization (SET_PRM).

6.2.2 Monolithic DTM for a modular PROFIBUS device

A monolithic DTM is one single DTM that represents the complete device with its Bus Interface Module (BIM) and its I/O modules. In general, such a DTM offers a configuration dialog (presentation object) that allows definition of the used BIM and modules. The configuration dialog must be available via the FDT standard function "Configure" (see [1] 4.3 Operation Configuration).

Not all PROFIBUS devices require a configuration dialog. That is why not all DTMs provide the "Configure" function. This is valid only for non-modular PROFIBUS devices if the `Usr_Prm-Data` cannot be changed.

The configuration dialog allows changing the data only in offline mode if the data set can be locked.

6.2.3 Modular DTM for a modular PROFIBUS device

Separate DTMs represent the BIM (Device DTM) and the particular I/O modules (Module DTMs). The effort developing such a modular DTM is normally higher than in the case of a monolithic DTM, because:

- a private protocol has to be implemented between BIM and I/O modules to ensure that only a Module DTM can be added to the BIM DTM. This requires an own protocol ID and the adaptation / creation of communication;
- in some cases, additional private interfaces are necessary to exchange information between Device DTM for BIM and Module DTMs.

Implementing a Modular DTM results in the following advantages:

- the project represents the device structure;
- the user is able to access module-related information directly as a function of the Module DTM;
- the FDT specification defines a mechanism to identify DTMs. With these mechanisms it is possible to provide support for scanning the modules below the BIM and generate the topology automatically;
- supporting a new type of BIM or I/O module requires an additional DTM "only" and does not affect existing components. This may result in reduced test effort.

The configuration data to set up the PROFIBUS configuration must be provided by the Device DTM (representing the BIM). This configuration data may be generated from information of the instantiated Child DTMs and by using a configuration dialog.

Modular DTMs should be provided for modular devices (e.g. a plant operator may add/remove modules). Monolithic DTMs are used to represent devices that show no modularity (e.g. PA devices).

6.3 Support for DPV0 configuration

A PROFIBUS slave is configured by a cyclic master and communicates via PROFIBUS DP. In addition to this the slave may support DPV1 communication.

A Gateway DTM for a PROFIBUS slave does not have to provide communication for the DPV0 communication schema. For example, there is a remote I/O system with HART modules. It may have a Gateway DTM that requires the DPV1 protocol and provides the HART protocol (defined in the information document and in the parameter document). This enables HART Device DTMs to communicate with their devices via the Gateway DTM and via Communication DTM for DPV1. Following the specification the Gateway DTM delivers channel parameter documents for both protocols DPV1 and HART. The protocolId is a member of NetworkManagementInfo data type.

The Process Channels must provide ChannelParameter documents for DPV1 including all information to allow integration into the control system (e.g. DPAAddress of the IO value if available).

6.4 PROFIBUS slaves operating without a cyclic PROFIBUS master

In most cases, a PROFIBUS slave is configured and parameterized by a cyclic PROFIBUS master device. So a running master device in the network is required.

Some slaves are able to allow acyclic communication without a running cyclic master. Especially in the case of gateway functionality this is an eminent advantage because they allow the parameterization of field devices connected to them by using an acyclic bus master. So instrument specialists are able to work with field devices also in case the controller is not yet working.

If a master starts communication, these devices start to detect bus speed and settings to react properly. This may take some time.

In the following, two cases are described that a user may keep in mind when working with such devices.

Use case 1:

The user performs a network scan. The Communication DTM tries to read diagnostic data via a GetDiagnose Request but does not receive a response. The device is not detected by the Communication DTM. This occurs mostly when the device has a low PROFIBUS address. The reason is that the device has not completed bus speed / bus setting detection as it was asked for their diagnostic data. The workaround is to give these devices a higher PROFIBUS address.

Use Cases 2:

The user tries to connect a field device linked to the gateway that supports DPV1 without a running cyclic master. This can lead to an error message because the gateway device has not completed bus speed / bus setting detection as it was asked for a connection. So the user has to try to connect again. This happens only in very rare situations.

6.5 PROFIBUS-related information of a slave DTM

6.5.1 General

The information used by a cyclic master device to set up the PROFIBUS network properly and allow cyclic communication between control system and slave devices is provided by a DTM in

- Bus Master Configuration Part (BMCP);
- GSD information;
- internal topology,
- process channels.

A DTM of a PROFIBUS slave must deliver these parts of PROFIBUS-related information to get integrated into a FDT-based Engineering System. In the next subclauses, a more detailed

description is given on how to generate and how to provide this information. This depends on the kind of DTM (see 6.2 Configuration and parameterization of PROFIBUS devices).

6.5.2 Bus Master Configuration Part (BMCP)

6.5.2.1 BMCP introduction

The BMCP of one single DTM instance describes the actual parameter and configuration data of the corresponding PROFIBUS slave. Each DTM representing a PROFIBUS slave device must provide a Bus Master Configuration Part. The BMCP is provided in the `busMasterConfigurationPart` member of `NetworkManagementInfo` data type. This information is obtained by calling service `NetworkManagementInfoRead`.

The BMCP includes information about the configuration and the parameters for the slave. The BMCP is provided by the DTM and is required in order to generate the master configuration.

The BMCP contains data which might be changed during master configuration. That means that the BMCP may be changed and transferred back to the slave DTM by calling `NetworkManagementInfoWrite`. A Slave DTM must accept the new information and recompute the configuration / internal parameters to match the new BMCP.

DTM must check whether the new values are according to the capabilities of the device. The `NetworkManagementInfoWrite` call will be refused if the device can not handle the new values.

6.5.2.2 Creating the BMCP

This subclause explains the meaning of the individual elements of the BMCP in details.

The BCMP may be generated from the GSD information of a PROFIBUS device.

The BMCP is divided into four parts that are explained in the following subclauses.

The explanations use the GSD keywords and reference the PROFIBUS specification. See also the table with complete BMCP in 6.5.2.2.1 .

6.5.2.2.1 Part 1: From Slave_Para_Len to Octet 15

The first part consists of a fixed set of bytes described in the table below.

Table 3 – BMPC Part1 – General configuration

Byte	Name	Defined in	Notice
0	Slave_Para_Len	[5] 6.2.12.1	Length of the BMCP including this value
1			
2	SI_Flag	[5] 6.2.12.2	<p>The following GSD values are used [6]:</p> <ul style="list-style-type: none"> • Bit 0 : reserved, • Bit 1: Extra_Alarm_SAP, • Bit 2: DPV1_Data_Types, • Bit 3: DPV1_Supported, • Bit 4: Publisher_Enable, • Bit 5 : Fail_Safe, . <p>The following bits are not based on GSD values:</p> <ul style="list-style-type: none"> • Bit 6 : New_Prm, • Bit 7 : Active
3	Slave Type	[5] 6.2.12.3	Value is 0 (= DP-Slave)
4	Max_Diag_Data_Len	[5] 6.2.12.4	The following GSD value is used [6]: Max_Diag_Data_Len
5	Max_Alarm_Len	[5] 6.2.12.5	
6	Max_Channel_Data_Len	[5] 6.2.12.6	<p>This field defines how much data can be transferred between slave and master. In this case, the maximum of these GSD values [6] must be calculated:</p> <ul style="list-style-type: none"> • Max_Data_Len, • C1_Max_Data_Len plus 4 Bytes (Function Num, Slot_Number, Length)
7	Diag_Update_Delay	[5] 6.2.12.7	The following GSD value is used [6]:Diag_Update_Delay
8	Alarm_Mode	[5] 6.2.12.8	
9	Add_SI_Flag	[5] 6.2.12.9	
10	C1_Timeout	[5] 6.2.12.10	The following GSD value is used [6]:C1_Response_Timeout
11			
12	Reserved		
13			
14			
15			

6.5.2.2.2 Part 2: Parameter data

Part 2 of the BMCP are the slave parameter data.

Table 4 – BMPC Part2 – Parameter data

Byte	Name	Defined in	Notice
16	Prm_Data_Len	[5] 6.2.12.11	Length of the Parameter Data including this value
17			
18	Station Status	[5] 6.2.4.1	<p>The following GSD values are used [6]:</p> <ul style="list-style-type: none"> • Bit 0-2: reserved, • Bit 3: WD_On, • Bit 4: Freeze_Req, • Bit 5: Sync_Req, • Bit 6,7(Lock/Unlock Request): [5] Table 402
19	WatchDog1	[5] 6.2.4.2	These values (WD_Fact_1 and WD_Fact_2) depend on the baud rate. A master should set these values and slaves should handle new values
20	WatchDog2	[5] 6.2.4.3	
21	Min Tsdr	[5] 6.2.4.4	Default value is 11 bit times [1]

Byte	Name	Defined in	Notice
22	Ident_Number	[5] 6.2.3.5	The following GSD value is used [6]: Ident_Number
23			
24	Group_Ident	[5] 6.2.4.5	Indicates the group assignment of the slave in a bitwise coded form
25	DPV1_Status_1	[5] 6.2.4.7	<p>The following GSD values are used [6]:</p> <ul style="list-style-type: none"> • Bit 0,1: reserved, • Bit 2: WD_Base_1ms, • Bit 3 – 5: reserved, • Bit 6: Fail_Safe, • Bit 7 : DPV1_Enable, <p>These bits report the slave capabilities to the master and are changed by the MS0 master following its capabilities</p>
26	DPV1_Status_2	[5] 6.2.4.8	<p>The following GSD values are used [6]:</p> <ul style="list-style-type: none"> • Bit 0: Check_Cfg_Mode, • Bit 1: reserved, • Bit 2: Enable_Update_Alarm, • Bit 3: Enable_Status_Alarm, • Bit 4: Enable_Manufacturer_Specific_Alarm, • Bit 5: Enable_Diagnostic_Alarm, • Bit 6: Enable_Process_Alarm, • Bit 7: Enable_Pull_Plug_Alarm, <p>These bits report the slave capabilities to the master and are changed by the MS0 master following its capabilities</p>
27	DPV1_Status_3	[5] 6.2.4.9	<ul style="list-style-type: none"> • Bit 0-2: — , • Bit 3: Prm_Structure, • Bit 4: IsoM_Req, • Bit 5-6: reserved, • Bit 7: Prm_Cmd
28	User_Prm_Data		From Byte 28 of the BMCP, a DTM has to insert additional user parameter data. The information is given in the GSD file via value of User_Prm_Data
...			
<p>NOTE 1 It is possible that a module does not have user parameter data. In this case, no parameter string is inserted into the BMCP for this module.</p> <p>NOTE 2 Some slaves have some fixed modules besides the BIM. Even if these modules do not appear in the configuration dialog or are not represented as Module DTMs, they have to be considered in the BCMP if they have parameters.</p> <p>NOTE 3 The three DPV1 status bytes are defined by the MS0 master.</p>			

6.5.2.2.3 Part 3: Configuration data

The configuration data are provided as part 3:

Table 5 – BMPC Part3 – Configuration data

Byte	Name	Source	Notice
16+Prm_Data_Len	Cfg_Data_Len	[5] 6.2.12.13	Length including this value
16+Prm_Data_Len + 1			
16+Prm_Data_Len +2	Cfg_Data		Configuration data (if available)
...			

From byte position (16+Prm_Data_Len +2), the configuration strings for the BIM and the modules are provided in ascending order. The information is given in the GSD file via value module.

NOTE 1 Some slaves have some fixed modules besides the BIM. Even if these modules do not appear in the configuration dialog or are not represented as Module DTMs, they have to be considered in the BCMP if they have parameters.

NOTE 2 Empty slots have to be considered in the configuration data. Refer to the GSD file as to which configuration string has to be used.

6.5.2.2.4 Part 4: Address table and slave user parameters

In Part 4 of the BMCP, the address table and the slave user parameter section is provided.

Table 6 – Part 4: Address table and slave user parameters

Byte	Name	Source	Hints
16 + Prm_Data_Len + Cfg_Data_Len	Add_Tab_Len	[5] 6.2.12.15	Length including this value
16 + Prm_Data_Len + Cfg_Data_Len + 1			
16 + Prm_Data_Len + Cfg_Data_Len + Add_Tab_Len	Slave_User_Data_Len	[6] 6.2.12.21	Length including this value
16 + Prm_Data_Len + Cfg_Data_Len + Add_Tab_Len + 1			
16 + Prm_Data_Len + Cfg_Data_Len + Add_Tab_Len + 2	Slave_User_Data		Slave user parameter (if available)
...			

After Add_Tab_Len the address table data is inserted into the BMCP. If the master does not support this table the Add_Tab_Len is set to 2 and no data is inserted.

After Slave_UserDataLen the slave user data is inserted into the BMCP. If the master does not support this data the Slave_User_Data_Len is set to 2 and no data is inserted.

Table 7 – Part 4: Extended Prm data

Byte	Name	Source	Hints
16 + Prm_Data_Len + Cfg_Data_Len + Add_Tab_Len + Slave_User_Data_Len	Ext_Prm_Data_Len	[5] 6.2.12.23	Length including this value
16 + Prm_Data_Len + Cfg_Data_Len + Add_Tab_Len + Slave_User_Data_Len + 1			

After Ext_Prm_Data_Len the extended prm data is inserted into the BMCP. If the master does not support this data the Ext_Prm_Data_Len is set to 2 and no data is inserted.

6.5.2.2.5 Complete slave bus parameter set

All values are provided from the Slave DTM. It is responsibility of the Slave DTM to be compatible with the Slave GSD. The Master DTM could change some of these initial values sent by Slave DTM if they depend on the capabilities of the master.

Example

Within the GSD file, it is stated that the device supports the Freeze Mode by the keyword "Freeze_Mode_supp". The master sets the value "Freeze_Mode_Req" within the Slave Bus Parameter Set because only the master knows whether it supports this mode.

The following table explains which component is the source of the parameter values ("Parameter provided by"). Some of the values can be changed by the system or by user interaction. For those values it is indicated which component is allowed to change the values ("Configuration by"). If possible, the default values for the parameters are defined ("Default Value").

Table 8 – Complete BMCP

Byte	Name	Note	Parameter provided by	Configuration by	Default Value
0	Slave_Para_Len	Length of the BMCP including this value	Calculated by Slave DTM	-	-
1					
2	SI_Flag	Bit coded. The meaning of the bits:	-	-	-
		Bit 0: reserved	-	-	0
		Bit 1: Extra_Alarm_SAP	Slave DTM shows with this bit that the feature is supported	Master DTM	Extra_Alarm_SAP_sup p within GSD
		Bit 2: DPV1_Data_Types	Slave DTM shows what data types are used by the slave DTM	Master DTM	DPV1_Data_Types within Slave GSD
		Bit 3: DPV1_Supported	Slave DTM shows with this bit that the feature is supported	Master DTM	DPV1_Slave within GSD
		Bit 4: Publisher_enable	Slave DTM shows with this bit that the feature is supported	Master DTM	Publisher_supp within GSD
		Bit 5: Fail_Safe	Slave DTM can show by this flag that the slave needs fail safe (Fail_Safe or Fail_Safe_Required of the GSD)	Master DTM	Value within Slave GSD
		Bit 6: New_Prm	If the Slave DTM set this value, it requests that the MS0 master should set the changed slave parameter. (see [5] 6.2.12.2)	-	0
		Bit 7: Active	If the Slave DTM has finished the module configuration set it to 1.	-	0
3	Slave Type	0 = DP-Slave	Slave DTM shows that it is a DP-Slave	-	0
4	Max_Diag_Data_Len		Slave DTM provides this information by Max_Diag_Data_Len in the GSD	-	Value within Slave GSD
5	Max_Alarm_Len	Length of the alarm structure see [5] table 396	Slave DTM, Conditions: One of GSD keywords:- Diagnostic_Alarm_supp - Process_Alarm_supp - Pull_Plug_Alarm_supp - Status_Alarm_supp - Updata_Alarm_supp - Manufacturer_Specific_Alarm_supp OR - Alarm_Type_Mode_supp	-	Is calculated on the base of the different GSD values.
6	Max_Channel_Data_Len		Slave DTM: This field defines how much data can be transferred between slave and master. In this case the maximum of these values must be calculated and set by the slave DTM. Rule for calculation: Max_Data_Len C1_Max_Data_Len plus 4 Bytes (Function Num, Slot_Number, Length)	-	Value within Slave GSD
7	Diag_Update_Delay		Slave DTM	-	Slave GSD [6] Diag_Update_Delay