

INTERNATIONAL STANDARD

NORME INTERNATIONALE



**Alarm and electronic security systems –
Part 11-31: Electronic access control systems – Core interoperability protocol
based on Web services**

**Systèmes d'alarme et de sécurité électroniques –
Partie 11-31: Systèmes de contrôle d'accès électronique – Protocole de base
d'interopérabilité en fonction des services Web**



THIS PUBLICATION IS COPYRIGHT PROTECTED

Copyright © 2016 IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

Droits de reproduction réservés. Sauf indication contraire, aucune partie de cette publication ne peut être reproduite ni utilisée sous quelque forme que ce soit et par aucun procédé, électronique ou mécanique, y compris la photocopie et les microfilms, sans l'accord écrit de l'IEC ou du Comité national de l'IEC du pays du demandeur. Si vous avez des questions sur le copyright de l'IEC ou si vous désirez obtenir des droits supplémentaires sur cette publication, utilisez les coordonnées ci-après ou contactez le Comité national de l'IEC de votre pays de résidence.

IEC Central Office
3, rue de Varembe
CH-1211 Geneva 20
Switzerland

Tel.: +41 22 919 02 11
Fax: +41 22 919 03 00
info@iec.ch
www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigenda or an amendment might have been published.

IEC Catalogue - webstore.iec.ch/catalogue

The stand-alone application for consulting the entire bibliographical information on IEC International Standards, Technical Specifications, Technical Reports and other documents. Available for PC, Mac OS, Android Tablets and iPad.

IEC publications search - www.iec.ch/searchpub

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee,...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and also once a month by email.

Electropedia - www.electropedia.org

The world's leading online dictionary of electronic and electrical terms containing 20 000 terms and definitions in English and French, with equivalent terms in 15 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

IEC Glossary - std.iec.ch/glossary

65 000 electrotechnical terminology entries in English and French extracted from the Terms and Definitions clause of IEC publications issued since 2002. Some entries have been collected from earlier publications of IEC TC 37, 77, 86 and CISPR.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: csc@iec.ch.

A propos de l'IEC

La Commission Electrotechnique Internationale (IEC) est la première organisation mondiale qui élabore et publie des Normes internationales pour tout ce qui a trait à l'électricité, à l'électronique et aux technologies apparentées.

A propos des publications IEC

Le contenu technique des publications IEC est constamment revu. Veuillez vous assurer que vous possédez l'édition la plus récente, un corrigendum ou amendement peut avoir été publié.

Catalogue IEC - webstore.iec.ch/catalogue

Application autonome pour consulter tous les renseignements bibliographiques sur les Normes internationales, Spécifications techniques, Rapports techniques et autres documents de l'IEC. Disponible pour PC, Mac OS, tablettes Android et iPad.

Recherche de publications IEC - www.iec.ch/searchpub

La recherche avancée permet de trouver des publications IEC en utilisant différents critères (numéro de référence, texte, comité d'études,...). Elle donne aussi des informations sur les projets et les publications remplacées ou retirées.

IEC Just Published - webstore.iec.ch/justpublished

Restez informé sur les nouvelles publications IEC. Just Published détaille les nouvelles publications parues. Disponible en ligne et aussi une fois par mois par email.

Electropedia - www.electropedia.org

Le premier dictionnaire en ligne de termes électroniques et électriques. Il contient 20 000 termes et définitions en anglais et en français, ainsi que les termes équivalents dans 15 langues additionnelles. Egalement appelé Vocabulaire Electrotechnique International (IEV) en ligne.

Glossaire IEC - std.iec.ch/glossary

65 000 entrées terminologiques électrotechniques, en anglais et en français, extraites des articles Termes et Définitions des publications IEC parues depuis 2002. Plus certaines entrées antérieures extraites des publications des CE 37, 77, 86 et CISPR de l'IEC.

Service Clients - webstore.iec.ch/csc

Si vous désirez nous donner des commentaires sur cette publication ou si vous avez des questions contactez-nous: csc@iec.ch.

INTERNATIONAL STANDARD

NORME INTERNATIONALE



**Alarm and electronic security systems –
Part 11-31: Electronic access control systems – Core interoperability protocol
based on Web services**

**Systèmes d'alarme et de sécurité électroniques –
Partie 11-31: Systèmes de contrôle d'accès électronique – Protocole de base
d'interopérabilité en fonction des services Web**

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

COMMISSION
ELECTROTECHNIQUE
INTERNATIONALE

ICS 13.320

ISBN 978-2-8322-3778-6

**Warning! Make sure that you obtained this publication from an authorized distributor.
Attention! Veuillez vous assurer que vous avez obtenu cette publication via un distributeur agréé.**

CONTENTS

FOREWORD.....	10
INTRODUCTION.....	12
1 Scope.....	13
2 Normative references	13
3 Terms, definitions and abbreviated terms	15
3.1 Terms and definitions.....	15
3.2 Abbreviated terms.....	16
4 Overview	17
4.1 General.....	17
4.2 Web services	17
4.3 IP configuration.....	18
4.4 Device discovery.....	18
4.5 Device management	19
4.5.1 General	19
4.5.2 Capabilities.....	19
4.5.3 Network	19
4.5.4 System	20
4.5.5 Retrieval of system information.....	20
4.5.6 Firmware upgrade.....	20
4.5.7 SystemRestore	20
4.5.8 Security	20
4.6 DeviceIO.....	21
4.7 Event handling	21
4.8 Security	21
5 Web services framework.....	21
5.1 General.....	21
5.2 Services overview	22
5.2.1 General	22
5.2.2 Services requirements	22
5.3 WSDL overview	22
5.4 Namespaces	23
5.5 Types.....	24
5.6 Messages	24
5.7 Operations	25
5.7.1 General	25
5.7.2 One-way operation type.....	26
5.7.3 Request-response operation type	26
5.8 Port types	27
5.9 Binding	27
5.10 Ports.....	27
5.11 Services.....	28
5.12 Error handling	28
5.12.1 General	28
5.12.2 Protocol errors.....	28
5.12.3 SOAP errors	28
5.13 Security	31

5.13.1	Authentication.....	31
5.13.2	User-based access control	31
5.14	String representation	33
5.14.1	Character set.....	33
5.14.2	Allowed characters in strings	33
5.15	Proprietary extensions	33
6	IP configuration	33
7	Device discovery	34
7.1	General.....	34
7.2	Modes of operation	34
7.3	Discovery definitions.....	35
7.3.1	Endpoint reference	35
7.3.2	Hello.....	35
7.3.3	Probe and probe match	36
7.3.4	Resolve and resolve match.....	37
7.3.5	Bye.....	37
7.3.6	SOAP fault messages.....	37
8	Device management	37
8.1	General.....	37
8.2	Capabilities.....	38
8.2.1	Get WSDL URL	38
8.2.2	Capability exchange	38
8.3	Network	40
8.3.1	Get hostname	40
8.3.2	Set hostname	40
8.3.3	Set hostname from DHCP.....	41
8.3.4	Get DNS settings.....	41
8.3.5	Set DNS settings	42
8.3.6	Get NTP settings	42
8.3.7	Set NTP settings.....	43
8.3.8	Get dynamic DNS settings	43
8.3.9	Set dynamic DNS settings	44
8.3.10	Get network interface configuration	44
8.3.11	Set network interface configuration.....	45
8.3.12	Get network protocols.....	46
8.3.13	Set network protocols	47
8.3.14	Get default gateway.....	47
8.3.15	Set default gateway	48
8.3.16	Get zero configuration	48
8.3.17	Set zero configuration.....	48
8.3.18	Get IP address filter.....	49
8.3.19	Set IP address filter	49
8.3.20	Add an IP filter address	50
8.3.21	Remove an IP filter address.....	50
8.3.22	IEEE 802.11 configuration	51
8.4	System	55
8.4.1	Device information.....	55
8.4.2	Get system URIs	55
8.4.3	Backup	56

8.4.4	Restore.....	56
8.4.5	Start system restore	57
8.4.6	Get system date and time	57
8.4.7	Set system date and time	58
8.4.8	Factory default.....	59
8.4.9	Firmware upgrade.....	59
8.4.10	Start firmware upgrade	60
8.4.11	Get system logs.....	61
8.4.12	Get support information	61
8.4.13	Reboot.....	62
8.4.14	Get scope parameters	62
8.4.15	Set scope parameters.....	62
8.4.16	Add scope parameters.....	63
8.4.17	Remove scope parameters	63
8.4.18	Get discovery mode	64
8.4.19	Set discovery mode	64
8.5	Security	65
8.5.1	General	65
8.5.2	Get access policy	65
8.5.3	Set access policy.....	65
8.5.4	Get users.....	65
8.5.5	Create users.....	66
8.5.6	Delete users	67
8.5.7	Set users settings	67
8.5.8	IEEE 802.1X configuration.....	68
8.5.9	Create self-signed certificate	71
8.5.10	Get certificates	71
8.5.11	Get CA certificates	71
8.5.12	Get certificate status.....	72
8.5.13	Set certificate status	72
8.5.14	Get certificate request	72
8.5.15	Get client certificate status	73
8.5.16	Set client certificate status.....	73
8.5.17	Load device certificate.....	74
8.5.18	Load device certificates in conjunction with its private key	74
8.5.19	Get certificate information request	75
8.5.20	Load CA certificates	76
8.5.21	Delete certificate	76
8.5.22	Get remote user.....	76
8.5.23	Set remote user	77
8.5.24	Get endpoint reference	77
8.6	Auxiliary operation	78
8.7	Monitoring events	78
8.7.1	Processor usage.....	78
8.7.2	Link status	79
8.7.3	Upload status	79
8.7.4	Operating time.....	79
8.7.5	Environmental conditions.....	81
8.7.6	Battery capacity.....	

8.7.7	Device management	82
8.8	Service specific fault codes	82
9	Device I/O	86
9.1	General	86
9.2	Relay outputs	86
9.2.1	Overview	86
9.2.2	Get relay outputs	86
9.2.3	Get relay output options	86
9.2.4	Set relay output settings	87
9.2.5	Trigger relay output	88
9.3	Digital inputs	88
9.3.1	Overview	88
9.3.2	GetDigitalInputs	88
9.4	SerialPorts	89
9.4.1	Overview	89
9.4.2	GetSerialPorts	89
9.4.3	GetSerialPortConfiguration	89
9.4.4	SetSerialPortConfiguration	89
9.4.5	GetSerialPortConfigurationOptions	90
9.4.6	Send and/or Receive serial command	90
9.5	Capabilities	92
9.6	Events	92
9.6.1	DigitalInput state change	92
9.6.2	Relay output trigger	92
9.7	Service specific fault codes	93
10	Event handling	93
10.1	General	93
10.2	Real-time Pull-Point notification interface	93
10.2.1	General	93
10.2.2	Create pull point subscription	95
10.2.3	Pull messages	95
10.2.4	Renew	96
10.2.5	Unsubscribe	96
10.2.6	Seek	97
10.2.7	Pull point lifecycle	98
10.2.8	Persistent notification storage	98
10.3	Basic notification interface	98
10.3.1	General	98
10.3.2	Summary	98
10.3.3	Requirements	99
10.4	Properties	100
10.5	Notification structure	100
10.5.1	General	100
10.5.2	Notification information	101
10.5.3	Message format	102
10.5.4	Message description language	103
10.5.5	Message content filter	104
10.6	Synchronization point	105
10.7	Topic structure	105

10.7.1	General	105
10.7.2	ONVIF topic namespace	106
10.7.3	Topic type information	106
10.7.4	Topic filter	107
10.8	Get event properties	108
10.9	Capabilities	108
10.10	SOAP fault messages	109
10.11	Notification example	110
10.11.1	General	110
10.11.2	GetEventPropertiesRequest.....	110
10.11.3	GetEventPropertiesResponse	110
10.11.4	CreatePullPointSubscription	111
10.11.5	CreatePullPointSubscriptionResponse	111
10.11.6	PullMessagesRequest	112
10.11.7	PullMessagesResponse.....	112
10.11.8	UnsubscribeRequest.....	113
10.11.9	UnsubscribeResponse	113
10.12	Persistent storage event:BeginingOfBuffer	114
10.13	Service specific fault codes.....	114
11	Security	114
11.1	General.....	114
11.2	Transport level security.....	114
11.2.1	General	114
11.2.2	Supported cipher suites	115
11.2.3	Server authentication.....	115
11.2.4	Client authentication	115
11.3	IEEE 802.1X	116
Annex A (informative)	Example for GetServices response with capabilities	117
Annex B (normative)	Device IP network lterface XML schemata.....	119
B.1	Device management service WSDL	119
B.2	Device IO service WSDL.....	161
B.3	Event service WSDL	168
B.4	Common schema	179
Bibliography		197
Figure 1 – Web services based development principles		18
Figure 2 – Sequence diagram for the Real-time Pull-Point notification interface		94
Figure 3 – Sequence diagram for the base notification interface		99
Table 1 – Defined namespaces in this document		23
Table 2 – Referenced namespaces (with prefix).....		24
Table 3 – Referenced namespaces (without prefix)		24
Table 4 – Operation description outline used in this document		25
Table 5 – Generic faults.....		30
Table 6 – HTTP errors		31
Table 7 – Access class to user level mapping		32
Table 8 – Scope parameters		36

Table 9 – GetWSDLUrl command.....	38
Table 10 – GetServices command.....	38
Table 11 – GetServiceCapabilities command	39
Table 12 – Capabilities in the GetServiceCapabilities command	39
Table 13 – GetHostname command	40
Table 14 – SetHostname command.....	41
Table 15 – SetHostnameFromDHCP command	41
Table 16 – GetDNS command.....	42
Table 17 – SetDNS command	42
Table 18 – GetNTP command	43
Table 19 – SetNTP command	43
Table 20 – GetDynamicDNS command	44
Table 21 – SetDynamicDNS command.....	44
Table 22 – GetNetworkInterfaces command	45
Table 23 – SetNetworkInterfaces command	46
Table 24 – GetNetworkProtocols command.....	47
Table 25 – SetNetworkProtocols command	47
Table 26 – GetNetworkDefaultGateway command.....	47
Table 27 – SetNetworkDefaultGateway command	48
Table 28 – GetZeroConfiguration command	48
Table 29 – SetZeroConfiguration command	49
Table 30 – GetIPAddressFilter command	49
Table 31 – SetIPAddressFilter command	50
Table 32 – AddIPAddressFilter command	50
Table 33 – RemoveIPAddressFilter command.....	51
Table 34 – GetDot11Capabilities.....	53
Table 35 – IEEE 802.11 capabilities.....	53
Table 36 – GetDot11Status.....	54
Table 37 – ScanAvailableDot11Networks	55
Table 38 – GetDeviceInformation command	55
Table 39 – GetSystemUri command	56
Table 40 – GetSystemBackup command	56
Table 41 – RestoreSystem command	57
Table 42 – StartSystemRestore command	57
Table 43 – GetSystemDateAndTime command	58
Table 44 – SetSystemDateAndTime command.....	59
Table 45 – SetSystemFactoryDefault command	59
Table 46 – UpgradeSystemFirmware command	60
Table 47 – StartFirmwareUpgrade command	60
Table 48 – GetSystemLog command.....	61
Table 49 – GetSystemSupportInformation command	61
Table 50 – SystemReboot command.....	62
Table 51 – GetScopes command	62

Table 52 – SetScopes command.....	63
Table 53 – AddScopes command.....	63
Table 54 – RemoveScopes command	64
Table 55 – GetDiscoveryMode command	64
Table 56 – SetDiscoveryMode command	64
Table 57 – GetAccessPolicy command	65
Table 58 – SetAccessPolicy command.....	65
Table 59 – GetUsers command.....	66
Table 60 – CreateUsers command	66
Table 61 – DeleteUsers command	67
Table 62 – SetUser command.....	67
Table 63 – CreateDot1XConfiguration command.....	69
Table 64 – SetDot1XConfigurationRequest command	69
Table 65 – GetDot1XConfiguration command.....	70
Table 66 – GetDot1XConfigurations command.....	70
Table 67 – DeleteDot1XConfigurations command	70
Table 68 – CreateCertificate command	71
Table 69 – GetCertificates command	71
Table 70 – GetCACertificates command.....	72
Table 71 – GetCertificatesStatus command	72
Table 72 – SetCertificatesStatus command.....	72
Table 73 – GetPkcs10Request command.....	73
Table 74 – GetClientCertificateMode command	73
Table 75 – SetClientCertificateMode command	74
Table 76 – LoadCertificates command	74
Table 77 – LoadCertificateWithPrivateKey command	75
Table 78 – GetCertificateInformation command.....	75
Table 79 – LoadCACertificates command	76
Table 80 – DeleteCertificates command.....	76
Table 81 – GetRemoteUser command.....	77
Table 82 – SetRemoteUser command	77
Table 83 – GetEndpointReference command	78
Table 84 – SendAuxiliary command	78
Table 85 – Device service specific fault codes	82
Table 86 – GetRelayOutputs command.....	86
Table 87 – GetRelayOutputOptions command.....	87
Table 88 – SetRelayOutputSettings command.....	88
Table 89 – SetRelayOutputState command.....	88
Table 90 – GetDigitalInputs command.....	89
Table 91 – GetSerialPorts command.....	89
Table 92 – GetSerialPortConfiguration command.....	89
Table 93 – SetSerialPortConfiguration command	90
Table 94 – GetSerialPortConfigurationOptions command.....	90

Table 95 – Send and/or Receive serial command.....	91
Table 96 – GetServiceCapabilities command	92
Table 97 – DeviceIO service specific fault codes	93
Table 98 – CreatePullPointSubscription command	95
Table 99 – PullMessages command	96
Table 100 – Renew command	96
Table 101 – Unsubscribe command	97
Table 102 – Seek command.....	97
Table 103 – SetSynchronizationPoint command.....	105
Table 104 – GetEventProperties command	108
Table 105 – GetServiceCapabilities command	109

INTERNATIONAL ELECTROTECHNICAL COMMISSION

ALARM AND ELECTRONIC SECURITY SYSTEMS –**Part 11-31: Electronic access control systems –
Core interoperability protocol based on Web services**

FOREWORD

- 1) The International Electrotechnical Commission (IEC) is a worldwide organization for standardization comprising all national electrotechnical committees (IEC National Committees). The object of IEC is to promote international co-operation on all questions concerning standardization in the electrical and electronic fields. To this end and in addition to other activities, IEC publishes International Standards, Technical Specifications, Technical Reports, Publicly Available Specifications (PAS) and Guides (hereafter referred to as “IEC Publication(s)”). Their preparation is entrusted to technical committees; any IEC National Committee interested in the subject dealt with may participate in this preparatory work. International, governmental and non-governmental organizations liaising with the IEC also participate in this preparation. IEC collaborates closely with the International Organization for Standardization (ISO) in accordance with conditions determined by agreement between the two organizations.
- 2) The formal decisions or agreements of IEC on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC National Committees.
- 3) IEC Publications have the form of recommendations for international use and are accepted by IEC National Committees in that sense. While all reasonable efforts are made to ensure that the technical content of IEC Publications is accurate, IEC cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 4) In order to promote international uniformity, IEC National Committees undertake to apply IEC Publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any IEC Publication and the corresponding national or regional publication shall be clearly indicated in the latter.
- 5) IEC itself does not provide any attestation of conformity. Independent certification bodies provide conformity assessment services and, in some areas, access to IEC marks of conformity. IEC is not responsible for any services carried out by independent certification bodies.
- 6) All users should ensure that they have the latest edition of this publication.
- 7) No liability shall attach to IEC or its directors, employees, servants or agents including individual experts and members of its technical committees and IEC National Committees for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication, use of, or reliance upon, this IEC Publication or any other IEC Publications.
- 8) Attention is drawn to the Normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 9) Attention is drawn to the possibility that some of the elements of this IEC Publication may be the subject of patent rights. IEC shall not be held responsible for identifying any or all such patent rights.

International Standard IEC 60839-11-31 has been prepared by IEC technical committee 79: Alarm and electronic security systems.

The text of this standard is based on the following documents:

CDV	Report on voting
79/522/CDV	79/546/RVC

Full information on the voting for the approval of this standard can be found in the report on voting indicated in the above table.

This publication has been drafted in accordance with the ISO/IEC Directives, Part 2.

A list of all parts in the IEC 60839 series, published under the general title *Alarm and electronic security systems*, can be found on the IEC website.

The committee has decided that the contents of this publication will remain unchanged until the stability date indicated on the IEC website under "<http://webstore.iec.ch>" in the data related to the specific publication. At this date, the publication will be

- reconfirmed,
- withdrawn,
- replaced by a revised edition, or
- amended.

IMPORTANT – The 'colour inside' logo on the cover page of this publication indicates that it contains colours which are considered to be useful for the correct understanding of its contents. Users should therefore print this document using a colour printer.

INTRODUCTION

The object of this document is to provide the common base for a fully interoperable network implementation comprised of products from different network vendors. This document describes the network model, interfaces, data types and data exchange patterns. This document reuses existing relevant standards where available, and introduces new specifications only where necessary.

This document is based upon work done by the ONVIF open industry forum. The ONVIF Core specification is compatible with this document.

This document is accompanied by a set of computer readable interface definitions:

- Device Service WSDL, see Clause B.1;
- Device IO Service WSDL, see Clause B.2;
- Event Service WSDL, see Clause B.3;
- Common schema, see Clause B.4.

This document is divided into the following clauses:

Document overview: Gives an overview of the different standard parts and how they are related to each other.

Web services frame work: Offers a brief introduction to Web services and the Web services basis for this document.

IP configuration: Defines the network IP configuration requirements.

Device discovery: Describes how devices are discovered in local and remote networks.

Device management: Defines the configuration of basics like network and security related settings.

Device IO: Defines the handling of input and output ports on a device.

Event handling: Defines how to subscribe to and receive notifications (events) from a device.

Security: Defines the transport and message level security requirements.

ALARM AND ELECTRONIC SECURITY SYSTEMS –

Part 11-31: Electronic access control systems – Core interoperability protocol based on Web services

1 Scope

This part of IEC 60839 defines procedures for communication between network clients and devices. This series of interoperability standards makes it possible to build an alarm and electronic security system with clients and devices from different manufacturers using common and well defined interfaces. The functions defined in this document covers discovery, device management and event framework. Supplementary dedicated services are defined in separate documents.

The management and control interfaces defined in this document are described as Web services. This document also contains full XML schema and Web Service Description Language (WSDL) definitions.

In order to offer full plug-and-play interoperability, this document defines procedures for device discovery. The device discovery mechanisms in this document are based on the WS-Discovery specification with extensions.

This document does not in any way limit a manufacturer to add other protocol or extend the protocol defined here and rules on how to accomplish this are also provided in this document.

2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

IEEE 1003.1, *The Open Group Base Specifications Issue 6, IEEE Std 1003.1, 2004 Edition*
<<http://pubs.opengroup.org/onlinepubs/009695399/>>

IEEE 802.11, *Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications*
<<http://standards.ieee.org/getieee802/download/802.11-2007.pdf>>

IEEE 802.1X, *Port-Based Network Access Control*
<<http://standards.ieee.org/getieee802/download/802.1X-2004.pdf>>

IETF RFC 952, *Internet Host Table Specification*
<<https://tools.ietf.org/html/rfc952>>

IETF RFC 1123:1989, *Requirements for Internet Hosts – Application and Support*
<<https://tools.ietf.org/html/rfc1123>>

IETF RFC 2131, *Dynamic Host Configuration Protocol*
<<http://www.ietf.org/rfc/rfc2131.txt>>

IETF RFC 2136, *Dynamic Updates in the Domain Name System (DNS UPDATE)*
<<http://www.ietf.org/rfc/rfc2136.txt>>

IETF RFC 2246, *The TLS Protocol Version 1.0*
<<http://www.ietf.org/rfc/rfc2246.txt>>

IETF RFC 2617, *HTTP Authentication: Basic and Digest Access Authentication*
<<http://www.ietf.org/rfc/rfc2617.txt>>

IETF RFC 2986, PKCS #10, *Certification Request Syntax Specification Version 1.7*
<<http://www.ietf.org/rfc/rfc2986.txt>>

IETF RFC 3268, *Advanced Encryption Standard (AES) Cipher suites for Transport Layer Security (TLS)*
<<http://www.ietf.org/rfc/rfc3268.txt>>

IETF RFC 3315, *Dynamic Host Configuration Protocol for IPv6 (DHCPv6)*
<<http://www.ietf.org/rfc/rfc3315.txt>>

IETF RFC 3927, *Dynamic Configuration of IPv4 Link-Local Addresses*
<<http://www.ietf.org/rfc/rfc3927.txt>>

IETF RFC 4122, *A Universally Unique IDentifier (UUID) URN Namespace*
<<http://www.ietf.org/rfc/rfc4122.txt>>

IETF RFC 4514, *Lightweight Directory Access Protocol (LDAP): String Representation of Distinguished Names*
<<http://www.ietf.org/rfc/rfc4514.txt>>

IETF RFC 4702, *The Dynamic Host Configuration Protocol (DHCP) Client Fully Qualified Domain Name (FQDN) Option*
<<http://www.ietf.org/rfc/rfc4702.txt>>

IETF RFC 4861, *Neighbor Discovery for IP version 6 (IPv6)*
<<http://www.ietf.org/rfc/rfc4861.txt>>

IETF RFC 4862, *IPv6 Stateless Address Auto configuration*
<<http://www.ietf.org/rfc/rfc4862.txt>>

ISO/IEC 8824-2, *Information Technology – Abstract Syntax Notation One (ASN.1): Information object specification*

ISO/IEC 8824-3, *Information Technology – Abstract Syntax Notation One (ASN.1): Constraint specification*

ISO/IEC 8824-4, *Information Technology – Abstract Syntax Notation One (ASN.1): Parameterization of ASN.1 specifications*

ISO/IEC 8825-1, *Information Technology – ASN.1 encoding rules: Specification of Basic Encoding Rules (BER), Canonical Encoding Rules (CER) and Distinguished Encoding Rules (DER)*.

OASIS WS-BaseNotification, *Web Services Base Notification 1.3 (WS-BaseNotification)*
<http://docs.oasis-open.org/wsn/wsn-ws_base_notification-1.3-spec-os.pdf>

OASIS WS-Topics, *Web Services Topics 1.3 (WS-Topics)*
<http://docs.oasis-open.org/wsn/wsn-ws_topics-1.3-spec-os.pdf>

W3C SOAP-MTOM, *SOAP Message Transmission Optimization Mechanism*
<<http://www.w3.org/TR/soap12-mtom/>>

W3C SOAP12-PART1, *SOAP 1.2 Part 1, Messaging Framework*
<<http://www.w3.org/TR/soap12-part1/>>

W3C WS-Addressing, *Web Services Addressing 1.0 – Core*
<<http://www.w3.org/TR/ws-addr-core/>>

WS-I BP 2.0, *Basic Profile Version 2.0*
<<http://www.ws-i.org/Profiles/BasicProfile-2.0-2010-11-09.html>>

XMLSOAP WS-Discovery, *Web Services Dynamic Discovery (WS-Discovery)*", J. Beatty et al., April 2005
<<http://specs.xmlsoap.org/ws/2005/04/discovery/ws-discovery.pdf>>

3 Terms, definitions and abbreviated terms

3.1 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

ISO and IEC maintain terminological databases for use in standardization at the following addresses:

- IEC Electropedia: available at <http://www.electropedia.org/>
- ISO Online browsing platform: available at <http://www.iso.org/obp>

3.1.1

ad-hoc network

independent basic service set

Note 1 to entry: "Ad-hoc network" is a vernacular term.

3.1.2

basic service set

set of IEEE 802.11 stations that have successfully joined in a common network

3.1.3

capability

command which allows a client to ask for the services provided by a device

3.1.4

public key cryptography standards

PKCS

group of standards devised and published by RSA Security

Note 1 to entry: This note only applies to the French language.

3.1.5

pre shared key

static key that is distributed to the device

3.1.6

pull point

resource for pulling messages

Note 1 to entry: By pulling messages, notifications are not blocked by firewalls.

3.1.7

service set ID

identity of an IEEE 802.11 wireless network

[SOURCE: IEEE 802.11-2007]

3.1.8

Wi-Fi protected access

WPA

certification program created by the Wi-Fi Alliance to indicate compliance with the security protocol covered by the program

Note 1 to entry: This note only applies to the French language.

3.2 Abbreviated terms

API	Application Programming Interface
ASCII	American Standard Code for Information Interchange
ASN	Abstract Syntax Notation
BSSID	Basic Service Set Identification
CA	Certificate Authority
CBC	Cipher-Block Chaining
CCMP	Counter mode with Cipher-block chaining Message authentication code Protocol
DER	Distinguished Encoding Rules
DHCP	Dynamic Host Configuration Protocol
DM	Device Management
DNS	Domain Name Server
DP	Discovery Proxy
EAP	Extensible Authentication Protocol
GW	Gateway
HMAC	Hash-based Message Authentication Code
HTTP	Hypertext Transfer Protocol
HTTPS	Hypertext Transfer Protocol over Secure Socket Layer
IANA	Internet Assigned Numbers Authority
IO, I/O	Input/Output
IP	Internet Protocol
IPv4	Internet Protocol Version 4
IPv6	Internet Protocol Version 6
LAN	Local Area Network
MTOM	Message Transmission Optimization Mechanism
NAT	Network Address Translation
NFC	Near Field Communication
NTP	Network Time Protocol
OASIS	Organization for the Advancement of Structured Information Standards
POSIX	Portable Operating System Interface
PKCS	Public Key Cryptography Standards
PSK	Pre Shared Key
REL	Rights Expression Language

RSA	Rivest, Sharmir and Adleman
SAML	Security Assertion Markup Language
SOAP	Simple Object Access Protocol
SSID	Service Set ID
TCP	Transmission Control Protocol
TLS	Transport Layer Security
TKIP	Temporal Key Integrity Protocol
TTL	Time To Live
UDDI	Universal Description, Discovery and Integration
UDP	User Datagram Protocol
URI	Uniform Resource Identifier
URN	Uniform Resource Name
USB	Universal Serial Bus
UTC	Coordinated Universal Time
UTF	Unicode Transformation Format
UUID	Universally Unique Identifier
WDR	Wide Dynamic Range
WS	Web services
WSDL	Web Services Description Language
WS-I	Web Services Interoperability
XML	eXtensible Markup Language
XPath	XML Path Language

4 Overview

4.1 General

This document defines a core set of interface functions for configuration and operation of network devices by defining their server side interfaces. This document covers device discovery, device configuration as well as an event framework.

All services share a common XML schema, see Clause B.4. The different services are defined in the respective sections and service WSDL documents.

4.2 Web services

The term Web services is the name of a standardized method of integrating applications using open, platform independent Web services standards such as XML, SOAP 1.2 [W3C SOAP12-PART1] and WSDL1.1 [W3C WSDL11] over an IP network. XML is used as the data description syntax, SOAP is used for message transfer and WSDL is used for describing the services.

This framework is built upon Web services standards. All configuration services defined in this document are expressed as Web services operations and defined in WSDL with HTTP [RFC 2616] as the underlying transport mechanism.

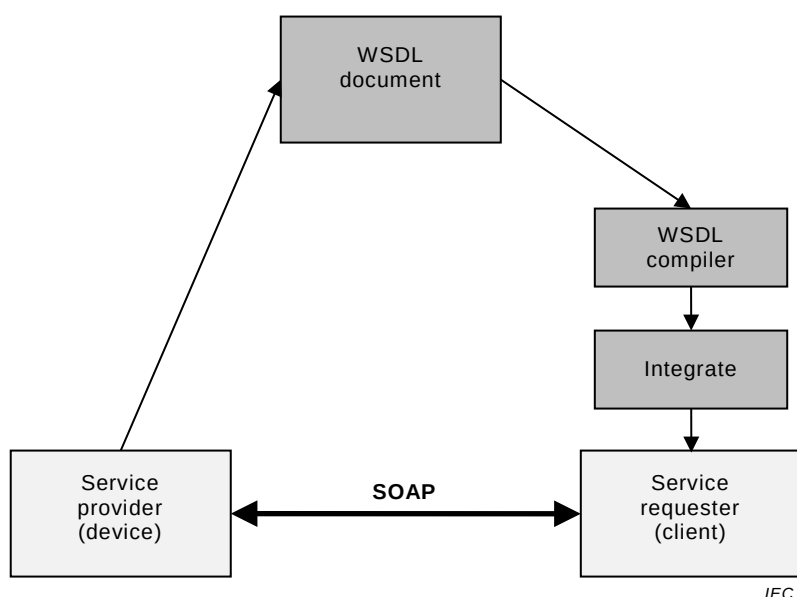


Figure 1 – Web services based development principles

Figure 1 gives an overview of the basic principles for development based on Web services. The service provider (device) implements the service or services. The service is described using the XML-based WSDL. Then, the WSDL is used as the basis for the service requester (client) implementation/integration. Client-side integration is simplified through the use of WSDL compiler tools that generate a platform specific code that can be used by the client side developer to integrate the Web Service into an application.

The Web services provider and requester communicate using the SOAP message exchange protocol. SOAP is a lightweight, XML-based messaging protocol used to encode the information in a Web Service request and in a response message before sending them over a network. SOAP messages are independent of any operating system or protocol and may be transported using a variety of Internet protocols. This document defines conformant transport protocols for the SOAP messages for the described Web services.

The Web services subclause introduces the general service structure, the command definition syntax used in this document, error handling principles and the adopted Web Service security mechanisms.

To ensure interoperability, all services follow the Web services Interoperability Organization (WS-I) basic profile 2.0 recommendations and use the document/literal wrapped pattern.

4.3 IP configuration

The IP configuration subclause defines the IP configuration compliance requirements and recommendations. IP configuration includes:

- IP network communication capability,
- static IP configuration,
- dynamic IP configuration.

4.4 Device discovery

The configuration interfaces defined in this document are Web services interfaces that are based on the WS-Discovery standard. This use of this document makes it possible to reuse a suitable existing Web Service discovery framework, instead of requiring a completely new service or service addressing definition.

This document introduces a specific discovery behaviour suitable for alarm and electronic security systems. For example, a fully interoperable discovery requires a well defined service definition and a service searching criteria. This document covers device type and scopes definitions in order to achieve this.

A successful discovery provides the device service address. Once a client has the device service address it can receive detailed device information through the device service, see 4.5 below.

4.5 Device management

4.5.1 General

Device management functions are handled through the device service. The device service is the entry point to all other services provided by a device. WSDL for the device service is provided in the device management WSDL file. The device management interfaces consist of these subcategories:

- capabilities,
- network,
- system,
- security.

4.5.2 Capabilities

The capability commands allow a client to ask for the services provided by a device and to determine which general and vendor specific services are offered by the device. The capabilities are structured per service. This document defines the capability exchange for the device, device IO and the event service. For the other services refer to the respective service specification:

- device,
 - network,
 - system,
 - security,
- device IO,
- event.

The capabilities for the different categories indicate those commands and parameter settings that are available for the particular service or service subcategory.

4.5.3 Network

The following set of network commands allows standardized management of functions:

- Get and set hostname.
- Get and set DNS configurations.
- Get and set NTP configurations.
- Get and set dynamic DNS.
- Get and set network interface configurations.
- Enable/disable and list network protocols.
- Get and set default gateway.
- Get and set zero configuration.
- Get, set, add and delete IP address filter.

- Wireless network interface configuration.

4.5.4 System

The system commands are used to manage the following device system settings:

- Get device information.
- Make system backups.
- Get and set system date and time.
- Factory default reset.
- Upgrade firmware.
- Get system log.
- Get device diagnostics data (support information).
- Reboot.
- Get and set device discovery parameters.

4.5.5 Retrieval of system information

System information, such as system logs, vendor-specific support information and configuration backup images, may be retrieved using either MTOM or HTTP.

The MTOM method is supported by the `GetSystemLog`, `GetSystemSupportInformation` and `GetSystemBackup` commands. The HTTP method is supported by the `GetSystemUri` command; this retrieves URIs from which the files may be downloaded using an HTTP GET operation.

4.5.6 Firmware upgrade

Two mechanisms are provided for upgrading the firmware on a device. The first uses the `UpgradeSystemFirmware` command to send the new firmware image using MTOM.

The second is a two stage process; first the client sends the `StartFirmwareUpgrade` command to instruct the device to prepare for upgrade, then it sends the firmware image using HTTP POST.

The HTTP method is designed for resource-limited devices that may not be capable of receiving a new firmware image in its normal operating state.

4.5.7 SystemRestore

The `SystemRestore` capability allows a device's configuration to be restored from a backup image. Again two mechanisms are provided. The first uses the `RestoreSystem` command to send the backup image using MTOM. The second uses the `StartSystemRestore` command followed by an HTTP POST operation to send the backup image.

4.5.8 Security

The following security operations are used to manage the device security configurations:

- Get and set access security policy.
- Handle user credentials and settings.
- Handle HTTPS server certificates.
- Enable/disable HTTPS client authentication.
- Key generation and certificate download functions.

- Handle IEEE 802.1X supplicant certificate.
- Handle IEEE 802.1X CA certificate.
- IEEE 802.1X configuration.

4.6 DeviceIO

The DeviceIO service offers commands to retrieve and configure the settings of physical inputs and outputs of a device.

The DeviceIO service supports the configuration of the following device interfaces:

- RelayOutputs,
- DigitalInputs,
- Send and/or receive serial data communication.

4.7 Event handling

Event handling is based on the OASIS WS-BaseNotification and WS-Topics specifications. These specifications allow the reuse of a rich notification framework without the need to redefine event handling principles, basic formats and communication patterns.

Firewall traversal, according to WS-BaseNotification, is handled through a PullPoint notification pattern. This pattern, however, does not allow real-time notification. Hence, this standard defines an alternative PullPoint communication pattern and service interface. The PullPoint pattern allows a client residing behind a firewall to receive real-time notifications while utilizing the WS-BaseNotification framework.

A fully standardized event handling requires standardized notifications. However, the notification topics will, to a large extent, depend on the application needs. This document defines a set of basic notification topics.

WSDL for the event service including extensions is provided in the Event WSDL file.

4.8 Security

Subclause 4.8 describes network security requirements. This document defines security mechanism on two different communication levels:

- transport-level security,
- message-level security.

This document also defines port-based network security as follows.

- IEEE 802.1X

The general security requirements, definitions and transport security requirements are specified in 11.3. Message level security requirements are specified in 5.13. IEEE 802.1X requirements are specified in 8.4.8. Security management is handled through the device management service as listed above in 4.5.8.

5 Web services framework

5.1 General

All management and configuration commands are based on Web services.

For the purposes of this document:

- the device is a service provider;
- the client is a service requester.

A typical network system does have multiple clients that handle device configuration and device management operations for numerous devices. Additionally a device providing services may also act as a client.

Web services also require a common way to discover service providers. This discovery is achieved using the Universal Discovery, Description and Integration Registry (UDDI) specifications [UDDI API ver2], [UDDI Data Structure ver2]. The UDDI specifications utilize service brokers for service discovery. This document targets devices while the UDDI model is not device oriented. Consequently, UDDI and service brokers are outside the scope of this document.

According to this document, devices (service providers) are discovered using WS-Discovery [XMLSOAP WS-Discovery] based techniques. The service discovery principles are described in Clause 7.

Web services allow developers the freedom to define services and message exchanges, which may cause interoperability problems. The Web services interoperability organization (WS-I) develops standard profiles and guidelines to create interoperable Web services. The devices and the clients shall follow the guidelines in the WS-I Basic Profile 2.0 [WS-I BP 2.0]. The service descriptions in this document follow the WS-I Basic Profile 2.0 recommendations.

5.2 Services overview

5.2.1 General

A device shall support a number of Web services which are defined in this document and related specifications.

The device management service is the entry point for all other services of the device and therefore also the target service for the WS-Discovery behavior defined by this document, see Clause 7.

The entry point for the device management service is fixed to:

`http://onvif_host/onvif/device_service`

5.2.2 Services requirements

A device shall provide the device management and event service.

If a device supports a certain service, the device shall respond to all commands defined in the corresponding service WSDL. If the specific command is not required for that service and the device does not support the command, the device should respond to a request with the error codes:

env:Receiver,
ter:ActionNotSupported,

See 5.12.3 for the definitions of the error codes.

5.3 WSDL overview

“WSDL is an XML format for describing network services as a set of endpoints operating on messages containing either document-oriented or procedure-oriented information. The operations and messages are described abstractly, and then bound to a concrete network protocol and message format to define an endpoint. Related concrete endpoints are combined

into abstract endpoints (services). WSDL is extensible to allow description of endpoints and their messages regardless of what message formats or network protocols are used to communicate” [SOURCE: W3C WSDL11].

This document follows the WSDL 1.1 specification, see [W3C WSDL11], and uses the document/literal wrapped pattern.

A WSDL document consists of the following sections:

- types – Definition of data types using XML schema definitions.
- message – Definition of the content of input and output messages.
- operation – Definition of how input and output messages are associated with a logical operation.
- portType – Groups a set of operations together.
- binding – Specification of which protocols that are used for message exchange for a particular portType.
- port – Specifies an address for a binding.
- service – Used to group a set of related ports.

5.4 Namespaces

Note that the Namespace URI, listed in Tables 1, 2 and 3, is primarily used to create a unique identifier. It does not have to be useful for retrieving a corresponding document, for example an XML schema or WSDL file.

Prefix and namespaces used in this document are listed in Table 1. These prefixes are not part of this document and an implementation can use any prefix.

Table 1 – Defined namespaces in this document

Prefix	Namespace URI	Description
tt	http://www.onvif.org/ver10/schema	XML schema descriptions in this document.
tds	http://www.onvif.org/ver10/device/wsdl	The namespace for the WSDL device service.
tmd	http://www.onvif.org/ver10/deviceIO/wsdl	The namespace for the WSDL device IO service.
trt	http://www.onvif.org/ver10/media/wsdl	The namespace for the WSDL media service.
tev	http://www.onvif.org/ver10/events/wsdl	The namespace for the WSDL event service.
ter	http://www.onvif.org/ver10/error	The namespace used for faults defined by this document.
tns1	http://www.onvif.org/ver10/topics	The namespace used for topics defined by this document.

The namespaces listed in Table 2 are referenced by this document.

Table 2 – Referenced namespaces (with prefix)

Prefix	Namespace URI	Description
wsdl	http://schemas.xmlsoap.org/wsdl/	WSDL namespace for WSDL framework.
wsoap12	http://schemas.xmlsoap.org/wsdl/soap12/	WSDL namespace for WSDL SOAP 1.2 binding.
http	http://schemas.xmlsoap.org/wsdl/http/	WSDL namespace for WSDL HTTP GET & POST binding.
soapenv	http://www.w3.org/2003/05/soap-envelope	Envelope namespace as defined by SOAP 1.2 [W3C SOAP12-PART11]
xs	http://www.w3.org/2001/XMLSchema	Instance namespace as defined by XS [W3C XML-Schema-1] and [W3C XML-Schema- 2]
xsi	http://www.w3.org/2001/XMLSchema-instance	XML schema instance namespace.
d	http://schemas.xmlsoap.org/ws/2005/04/discovery	Device discovery namespace as defined by [XMLSOAP WS-Discovery].
wsadis	http://schemas.xmlsoap.org/ws/2004/08/addressing	Device addressing namespace referred in WS-Discovery [XMLSOAP WS-Discovery].
wsa	http://www.w3.org/2005/08/addressing	Device addressing namespace as defined by [W3C WS-Addressing].
wstop	http://docs.oasis-open.org/wsn/t-1	Schema namespace of the [OASIS WS-Topics] specification.
wsnt	http://docs.oasis-open.org/wsn/b-2	Schema namespace of the [OASIS WS-BaseNotification] specification.
xop	http://www.w3.org/2004/08/xop/include	XML-binary Optimized Packaging namespace as defined by [W3C XOP]

In addition, this document refers without prefix to the namespaces listed in Table 3.

Table 3 – Referenced namespaces (without prefix)

Namespace URI	Description
http://docs.oasis-open.org/wsn/t-1/TopicExpression/Concrete	Topic expression dialect defined for topic expressions.
http://www.onvif.org/ver10/tev/topicExpression/ConcreteSet	Topic expressions dialect defined by this document.
http://www.onvif.org/ver10/tev/messageContentFilter/ItemFilter	Filter dialect, used for message content filtering, defined by this document.

5.5 Types

Data types are defined using XML schema descriptions Part 1 and Part 2. All data types defined in this document are included in the common schema, see Clause B.4.

5.6 Messages

According to WSDL 1.1 operations are described using input and output messages in XML. The message section contains the message content.

A message in this document contains two main elements:

- message name,
- message parts.

The message name specifies the name of the element and that name is used in the operation definition in the WSDL document. The message name defines the name of the message.

The WSDL message part element is used to define the actual format of the message. Although there can be multiple parts in a WSDL message, this document follows the WS-I basic profile [WS-I BP 2.0] and does not allow more than one part element in a message. Hence the same name ("parameters") is always used for the message part name.

The following WSDL notation is used for this document:

```
<message name="'Operation_Name'Request">
  <part name="parameters" element="'prefix': 'Operation_Name'"/>
</message>
```

respectively,

```
<message name="'Operation_Name'Response">
  <part name="parameters" element="'prefix': 'Operation_Name'Response'"/>
</message>
```

where 'prefix' is the prefix for the namespace in which the message is defined.

This document uses message specific types that encapsulate multiple parts to allow multiple arguments (or data) in messages.

5.7 Operations

5.7.1 General

Operations are defined within the WSDL portType declaration. An operation can be one of these two types:

- One-way – The service provider receives a message.
- Request-response – The service provider receives a message and sends a corresponding message.

Depending on the operation, different port types can be used.

The operation name defines the name of the operation.

Operations in this document are defined using the following table format outlined in Table 4.

Table 4 – Operation description outline used in this document

Operation_Name	Access_Class_Name
Message name	Description
'Operation_Name'Request	<i>Description of the request message.</i> <i>Type_{r1} Name_{r1} [a_{r1}][b_{r1}]</i> <i>Type_{r2} Name_{r2} [a_{r2}][b_{r2}]</i> <i>:</i> <i>Type_{rn} Name_{rn} [a_{rn}][b_{rn}]</i>
'Operation_Name'Response	<i>Description of the response message.</i> <i>Type_{s1} Name_{s1} [a_{s1}][b_{s2}]</i> <i>Type_{s2} Name_{s2} [a_{s2}][b_{s2}]</i> <i>:</i> <i>Type_{sn} Name_{sn} [a_{sn}][b_{sn}]</i>
'FaultMessage_Name'	<i>In the case that operation specific faults are defined, this field describes the structure of the defined fault message.</i>
Fault codes	Description
Code	<i>Description of the operation specific fault.</i>
Subcode	
Subcode	

The description column includes a list of the elements (if applicable) included in the request and response messages respectively. The value between brackets defines the lower and upper limits of the number of occurrences that can be expected for the element of the specified type. For example, $Name_{s2}$ in the table above occurs at least a_{s2} times and at most b_{s2} times.

Most commands do not define any specific fault messages. If a message is defined, it follows in the table directly after the response message.

The fault codes listed in the tables are the specific fault codes that can be expected from the command, see 5.12.3.3. Any command can return a generic fault, see 5.12.3.3.

The `Access_Class_Name` defines the access class of the operation. The access class characterizes the impact of the operation, see 5.13.2.3.

5.7.2 One-way operation type

A one-way operation type is used when the service provider receives a control message and does not send any explicit acknowledgement message or confirmation. This document makes use of one-way operations for discovery and event purposes only.

This operation type is defined by a single input message.

Use the following table format to describe one-way operations:

Operation_Name		One-way
Message name	Description	
'Operation_Name'Request	<i>Description of the request message.</i> $Type_1$ Name₁ [a_1][b_1] $Type_2$ Name₂ [a_2][b_2] : $Type_n$ Name_n [a_n][b_n]	

This table corresponds to the following WSDL notation in the service specifications:

```
<operation name=""Operation_Name"">
    <input message=""prefix':'Operation_Name'""/>
</operation>
```

5.7.3 Request-response operation type

A request-response operation type is used when a service provider receives a message and responds with a corresponding message.

This operation type is defined by one input, one output and multiple fault messages.

Use the following table format to describe request-response operations:

Operation_Name		Request-Response
Message name	Description	
'Operation_Name'Request	<i>Description of the request message.</i> <i>Type_{r1} Name_{r1} [a_{r1}][b_{r1}]</i> <i>Type_{r2} Name_{r2} [a_{r2}][b_{r2}]</i> : <i>Type_{rn} Name_{rn} [a_{rn}][b_{rn}]</i>	
'Operation_Name'Response	<i>Description of the response message.</i> <i>Type_{s1} Name_{s1} [a_{s1}][b_{s2}]</i> <i>Type_{s2} Name_{s2} [a_{s2}][b_{s2}]</i> : <i>Type_{sn} Name_{sn} [a_{sn}][b_{sn}]</i>	
"FaultMessage_Name"	<i>In the case that operation specific faults are defined, this field describes the structure of the defined fault message.</i>	
Fault codes	Description	
Code Subcode Subcode	<i>Description of the operation specific fault.</i>	

This table corresponds to the following WSDL notation:

```
<operation name="'Operation_Name'">
  <input message="'prefix':'Operation_Name'"/>
  <output message="'prefix':'Operation_Name'Response'"/>
  <fault name="Fault" message="'prefix':'FaultMessage_Name'"/>
</operation>
```

5.8 Port types

A port type is a named set of abstract operations and the abstract messages involved. One single port type is a collection of several different operations.

All operation names in this document are sorted into categories. Each operation category contains one or more operations. Each category holds only one type of operation and is grouped into a single port type. A one-way operation and a request response operation can never exist for the same port type.

5.9 Binding

A binding defines a concrete protocol and transport data format specification for a particular port type. There may be any number of bindings for a given port type.

"Port_type" is a previously defined type and "Binding" is a character string starting with an upper case letter that defines the name of the binding.

Binding definitions for a compliant device shall follow the requirements in [WS-I BP 2.0]. This implies that the WSDL SOAP 1.2 bindings shall be used.

The SOAP binding can have different styles. A compliant device shall use the style 'document' specified at the operation level.

The bindings are defined in the WSDL specifications for respective services.

5.10 Ports

The individual endpoint is specified by a single address for a binding. Each port shall be given a unique name. A port definition contains a name and a binding attribute.

This document does not mandate any port naming principles.

5.11 Services

A service is a collection of related ports. This document does not mandate any service naming principles.

5.12 Error handling

5.12.1 General

As with any other protocol, errors can occur during communications, protocol or message processing.

This document classifies error handling into the following categories:

- protocol errors,
- SOAP errors,
- application errors.

5.12.2 Protocol errors

Protocol errors are the result of an incorrectly formed protocol message, which could contain illegal header values, or be received when not expected or experience a socket timeout. To indicate and interpret protocol errors, HTTP and RTSP protocols have defined a set of standard status codes (e.g. 1xx, 2xx, 3xx, 4xx, 5xx). According to this document, devices and clients shall use appropriate RTSP and HTTP protocol defined status codes for error reporting and when received handle them accordingly.

5.12.3 SOAP errors

5.12.3.1 General

SOAP errors are generated as a result of Web services operation errors or during SOAP message processing. All such SOAP errors shall be reported and handled through SOAP fault messages. The SOAP specification provides a well defined common framework to handle errors through SOAP fault.

A SOAP fault message is a normal SOAP message with a single well-known element inside the body (soapenv:Fault). To understand the error in more detail, SOAP has defined a SOAP fault message structure with various components in it.

- Fault code
- Subcode
- Reason
- Node and Role
- Fault Details

Subcode and **Fault Detail** elements information items are intended for carrying application specific error information.

This document uses a separate name space for specific faults, see 5.12.3.3:

ter = "http://www.onvif.org/ver10/error".

SOAP fault messages for different Web services are defined as part of the different Web services definitions. Server and client shall use SOAP 1.2 fault message handling [W3C SOAP12-PART1] as specified in this document and shall follow the WS-I Basic Profile 2.0 fault handling recommendations.

The following example is an error message (SOAP 1.2 fault message over HTTP). The values in *italics* are placeholders for actual values.

```
HTTP/1.1 500 Internal Server Error
CONTENT-LENGTH: bytes in body
CONTENT-TYPE: application/soap+xml; charset="utf-8"
DATE: when response was generated
<?xml version="1.0" ?>
<soapenv:Envelope xmlns:soapenv="http://www.w3.org/2003/05/soap-
envelope"
  xmlns:ter="http://www.onvif.org/ver10/error"
  xmlns:xs="http://www.w3.org/2000/10/XMLSchema">
  <soapenv:Body>
    <soapenv:Fault>
      <soapenv:Code>
        <soapenv:Value>fault code</soapenv:Value>
        <soapenv:Subcode>
          <soapenv:Value>ter:fault subcode</soapenv:Value>
          <soapenv:Subcode>
            <soapenv:Value>ter:fault subcode</soapenv:Value>
          </soapenv:Subcode>
        </soapenv:Subcode>
      </soapenv:Code>
      <soapenv:Reason>
        <soapenv:Text xml:lang="en">fault reason</soapenv:Text>
      </soapenv:Reason>
      <soapenv:Node>http://www.w3.org/2003/05/soap-
envelope/node/ultimateReceiver</soapenv:Node>
      <soapenv:Role>http://www.w3.org/2003/05/soap-
envelope/role/ultimateReceiver</soapenv:Role>
      <soapenv:Detail>
        <soapenv:Text>fault detail</soapenv:Text>
      </soapenv:Detail>
    </soapenv:Fault>
  </soapenv:Body>
</soapenv:Envelope>
```

The following Table 5 summarizes the general SOAP fault codes (fault codes are defined in SOAP version 1.2 Part 1: Messaging Framework). Server and client may define additional fault subcodes for use by applications.

We distinguish between generic faults and specific faults. Any command can generate a generic fault. Specific faults are related to a specific command or set of commands. Specific faults that apply to a particular command are defined in the command definition tables.

In Table 5, the Fault Code, Subcode and Fault Reason are normative values. The description column is added for information.

5.12.3.2 Generic faults

Table 5 lists the generic fault codes and, if applicable, subcodes. All server and client implementations shall handle all the faults listed below. Any Web service command may return one or several of the generic faults.

The faults listed without subcode do not have any subcode value.

Table 5 – Generic faults

Fault code	Subcode	Fault reason	Description
env:VersionMismatch		SOAP version mismatch	The device found an invalid element information item instead of the expected Envelope element information item.
env:MustUnderstand		SOAP header blocks not understood	One or more mandatory SOAP header blocks were not understood.
env:DataEncodingUnknown		Unsupported SOAP data encoding	SOAP header block or SOAP body child element information item is scoped with data encoding that is not supported by the device.
env:Sender	ter:WellFormed	Well-formed error	XML well-formed violation occurred.
env:Sender	ter:TagMismatch	Tag mismatch	There was a tag name or namespace mismatch.
env:Sender	ter:Tag	No tag	XML element tag was missing.
env:Sender	ter:Namespace	Namespace error	SOAP namespace error occurred.
env:Sender	ter:MissingAttr	Required attribute not present	There was a missing required attribute.
env:Sender	ter:ProhibAttr	Prohibited attribute	A prohibited attribute was present.
env:Sender	ter:InvalidArgs	Invalid arguments	An error due to any of the following: – missing argument – too many arguments – arguments are of the wrong data type.
env:Sender	ter:InvalidArgVal	Argument value invalid	The argument value is invalid.
env:Sender	ter:UnknownAction	Unknown action	An unknown action is specified.
env:Sender	ter:OperationProhibited	Operation not permitted	The requested operation is not permitted by the device.
env:Sender	ter:NotAuthorized	Sender not authorized	The action requested requires authorization and the sender is not authorized.
env:Receiver	ter:ActionNotSupported	Optional action not implemented	The requested action is optional and is not implemented by the device.
env:Receiver	ter:Action	Action failed	The requested SOAP action failed.
env:Receiver	ter:OutOfMemory	Out of memory	The device does not have sufficient memory to complete the action.
env:Receiver	ter:CriticalError	Critical error	The device has encountered an error condition which it cannot recover by itself and needs reset or power cycle.

5.12.3.3 Specific faults

Specific faults apply only to a specific command or set of commands. The specific faults are declared as part of the service definitions.

5.12.3.4 HTTP errors

If the server waits for the start of the inbound message and no SOAP message is received, the server shall not generate a SOAP fault and instead sends an HTTP error response (see Table 6).

Table 6 – HTTP errors

HTTP error	HTTP error code	HTTP reason
Malformed request	400	Bad request
Requires authorization	401	Unauthorized
HTTP method is neither POST or GET	405	Method not allowed
Unsupported message encapsulation method	415	Unsupported media

A server should avoid reporting internal errors as this can expose security weaknesses that can be misused.

5.13 Security

5.13.1 Authentication

A device shall support digest authentication according to [RFC 2617] for authentication of web service requests.

Digest authentication gives only a rudimentary level of security. In a system where security is important, it is recommended to always configure the device for TLS-based access (see 11.2). Digest authentication combined with TLS, with client and server authentication, protected transport level security give an acceptable level of security in many systems.

A device should authenticate an RTSP request at the RTSP level. If HTTP is used to tunnel the RTSP request the device shall not authenticate on the HTTP level.

A device shall, when authenticating RTSP and HTTP methods, use user/credentials from the same set of users/credentials that are used for the WS part and digest authentication [RFC 2617] shall be used for RTSP and HTTP.

5.13.2 User-based access control

5.13.2.1 General

The authorization framework described in 5.13 allows for authentication of service requests. Once a service request is authenticated, the device shall decide based on its access policy whether the requestor is authorized to receive the service.

This document defines a set of command for managing the user credentials, see 8.4. These commands allow associating users with the different user levels defined in 5.13.2.2.

A device may support the definition of a custom access policy by the device user through the get and set access policy operations defined in 8.4.

5.13.2.2 User levels

Each user is associated with exactly one of the following user levels:

- 1) Administrator
- 2) Operator
- 3) User
- 4) Anonymous

Unauthenticated users are placed into the anonymous category and a device shall not allow users to be added to the anonymous user level category.

5.13.2.3 Access classes for service requests

The service requests are classified into access classes based to their impact. The following access classes are defined:

- **PRE_AUTH**
The service shall not require user authentication.
Example: GetEndpointReference
- **READ_SYSTEM**
The service reads system configuration information from the device.
Example: GetNetworkInterfaces
- **READ_SYSTEM_SENSITIVE**
The service reads sensitive (but not really confidential) system configuration information from the device.
- **READ_SYSTEM_SECRET**
The service reads confidential system configuration information from the device.
Example: GetSystemLog
- **WRITE_SYSTEM**
The service causes changes to the system configuration of the device.
Example: SetNetworkDefaultGateway
- **UNRECOVERABLE**
The service causes unrecoverable changes to the system configuration of the device.
Example: SetSystemFactoryDefault
- **READ_MEDIA**
The service reads data related to recorded media.
Example: GetRecordings
- **ACTUATE**
The service affects the runtime behaviour of the system.
Example: CreateRecordingJob

Table 7 defines for each access class which user levels are allowed access. A user of level c shall be granted access to a service request associated to access class r if and only if an "X" is present in the cell at column c and row r.

Table 7 – Access class to user level mapping

	Administrator	Operator	User	Anonymous
PRE_AUTH	X	X	X	X
READ_SYSTEM	X	X	X	
READ_SYSTEM_SENSITIVE	X	X		
READ_SYSTEM_SECRET	X			
WRITE_SYSTEM	X			
UNRECOVERABLE	X			
READ_MEDIA	X	X	X	
ACTUATE	X	X		

5.13.2.4 Default access policy

By default the device should enforce the default access policy defined by this document, and other specifications based on this document, which gives an acceptable level of security in many systems.

The default access policy is defined for each service request. It is done by identifying which access class that should be associated with that service request. See 5.7.1 for details on how this is done.

5.14 String representation

5.14.1 Character set

A device shall support the UTF-8 character set and it may support other character sets. If a client sends a request using UTF-8, the device shall always reply using the UTF-8 character set.

5.14.2 Allowed characters in strings

A device shall not have any restriction regarding legal characters in string that are not explicitly stated in this document or other specification based on this document.

5.15 Proprietary extensions

Proprietary extensions to this document shall be handled as follows:

- 1) It is strongly recommended to add proprietary extensions through defining new web services commands, in a namespace different from the target namespace, and not through extensions of the existing schema elements. This option allows full backward and forward interoperability with extensions from different vendors.
- 2) If new commands are not the best way to add proprietary extensions, it is recommended, whenever possible, to declare proprietary element extensions as attribute declarations instead of adding new schema elements in existing types. New proprietary attributes shall be declared in a namespace different from the target namespace. This option allows full backward and forward interoperability.
- 3) If it is not possible to declare the proprietary extensions using new commands or attributes, the proprietary extensions shall be declared adding a unique mandatory type of extension element before the extension point and then add all new proprietary elements in this extension element. The new elements shall be declared in a namespace different from the target namespace. Each proprietary extension element shall have `minOccurs="0"` and the proprietary extension element declarations in the schema shall be followed by an `xs:any` element declaration in the target namespace with `minOccurs="0"` and `maxOccurs="unbounded"`.

6 IP configuration

The device and client communicate over an open or closed IP network. This document does not place any general restrictions or requirements on the network type. It shall be possible, however, to establish communication links between the entities according to the architectural framework specified in Clause 4. Device IP configuration includes parameters such as IP addresses and a default gateway.

A device shall have at least one network interface that gives it IP network connectivity. Similarly, the client shall have at least one network interface that gives IP connectivity and allows data communication between the device and the client.

Both device and client shall support IPv4 based network communication. The device and client should support IPv6 based network communication.

It shall be possible to make static IP configuration on the device using a network or local configuration interface.

A device should support dynamic IP configuration of link-local addresses according to [RFC 3927]. A device that supports IPv6 shall support stateless IP configuration according to [RFC 4862] and neighbour discovery according to [RFC 4861].

The device shall support dynamic IP configuration according to [RFC 2131]. A device that supports IPv6 shall support stateful IP configuration via DHCPv6 according to [RFC 3315] if signaled via the corresponding capability.

The device may support any additional IP configuration mechanism.

Network configuration of a device shall be provided via the device management service as specified in 8.3 and may additionally be provided through local interfaces. The latter is outside the scope of this document.

The default device configuration shall have both DHCP and dynamic link-local (stateless) address configuration enabled. Even if the device is configured through a static address configuration it should have the link-local address default enabled.

When a device is connected to an IPv4 network, address assignment priorities (link local versus routable address) should be done as recommended in [RFC 3927].

Further details regarding how the IP connectivity is achieved are outside the scope of this document.

7 Device discovery

7.1 General

A client searches for available devices using the dynamic Web services discovery protocol [XMLSOAP WS-Discovery].

A device compliant with this document shall implement the Target Service role as specified in [XMLSOAP WS-Discovery].

If necessary a client compliant with this document shall implement the Client role as specified in [XMLSOAP WS-Discovery].

[XMLSOAP WS-Discovery] describes the Universally Unique Identifier (UUID): URI format recommendation for endpoint references, but this document overrides this recommendation. Instead, the Uniform Resource Name: Universally Unique Identifier (URN:UUID) format is used [RFC 4122] (see 7.3.1).

7.2 Modes of operation

The device shall be able to operate in two modes:

- discoverable,
- non-discoverable.

A device in discoverable mode sends multicast Hello messages once connected to the network or sends its Status changes according to [XMLSOAP WS-Discovery]. In addition it always listens for Probe and Resolve messages and sends responses accordingly. A device in non-discoverable shall not listen to [XMLSOAP WS-Discovery] messages or send such messages.

The devices default behaviour shall be the discoverable mode. In order to thwart denial-of-service attacks, it shall be possible to set a device into non-discoverable mode through the operation defined in 8.4.19.

7.3 Discovery definitions

7.3.1 Endpoint reference

A device or an endpoint that takes the client role shall use a URN:UUID [RFC 4122] as the address property of its endpoint reference.

The device or an endpoint that takes the client role shall use a stable, globally unique identifier that is constant across network interfaces as part of its endpoint reference property. The combination of an wsadis:Address and wsadis:ReferenceProperties provide a stable and globally-unique identifier.

7.3.2 Hello

7.3.2.1 Types

A device shall include the device management service port type, i.e. tds:Device, in the <d:Types> declaration.

The following example shows how the type is encoded in the SOAP Hello body:

```
<d:Types>tds:Device</d:Types>.
```

The Hello message may include additional types.

7.3.2.2 Scopes

7.3.2.2.1 General

A device shall include the scope <d:Scopes> attribute with the scopes of the device in the Hello message.

The device scope is set by using [RFC 3986] URIs. This document defines scope attributes as follows:

The scheme attribute: onvif

The authority attribute: www.onvif.org

This implies that all scope URIs defined by this document have the following format:

```
onvif://www.onvif.org/<path>
```

A device may have other scope URIs. These URIs are not restricted by the scope attributes defined in this document.

Table 8 defines a set of scope parameters. Apart from these standardized parameters, it shall be possible to set any scope parameter as defined by the device owner. Scope parameters can be listed and set through the commands defined in 8.4.

Table 8 – Scope parameters

Category	Defined values	Description
Location	Any character string or path value.	The location defines the physical location of the device. The location value might be any string describing the physical location of the device.
Hardware	Any character string or path value.	A string or path value describing the hardware of the device. A device shall include at least one hardware entry into its scope list.
Name	Any character string or path value.	The searchable name of the device. A device shall include at least one name entry into its scope list.

A device shall include at least one fixed entry (defined by the device vendor) of the hardware and name categories respectively in the scopes list. A device may include any other additional scope attributes in the scopes list.

A device might include an arbitrary number of scopes in its scope list. This implies that one unit might for example define several different location scopes. A probe is matched against all scopes in the list.

7.3.2.2.2 Example

The following example illustrates the usage of the scope value. This is just an example, and not at all an indication of what type of scope parameter to be part of a device configuration. In this example we assume that the device is configured with the following scopes:

```
onvif://www.onvif.org/hardware/D1-566
onvif://www.onvif.org/location/country/china
onvif://www.onvif.org/location/city/beijing
onvif://www.onvif.org/location/building/headquarter
onvif://www.onvif.org/location/floor/R5
onvif://www.onvif.org/name/ARV-453
```

A client that probes for the device with scope `onvif://www.onvif.org` will get a match. Similarly, a probe for the device with scope:

```
onvif://www.onvif.org/location/country/china
```

will give a match. A probe with:

```
onvif://www.onvif.org/hardware/D1
```

will not give a match.

7.3.2.3 Addresses

A device shall include the `<d:XAddr>` element with the address(es) for the device service in the Hello message. A URI shall be provided for each protocol (http, https) and externally available IP address.

The device should provide a port 80 device service entry in order to allow firewall traversal.

The IP addressing configuration principles for a device are defined in Clause 6.

7.3.3 Probe and probe match

For the device probe match types, scopes and addresses definitions, see 7.3.2 Hello.

A device shall at least support the following scope matching rule:

`http://schemas.xmlsoap.org/ws/2005/04/discovery/`

This scope matching definitions differs slightly from the definition in [XMLSOAP WS-Discovery] as [RFC 2396] is replaced by [RFC 3986].

A device shall include the `<d:XAddrs>` element with the addresses for the device service in a matching probe match message. The `<d:XAddrs>` element will in most cases only contain one address to the device management service as defined in 5.2.

7.3.4 Resolve and resolve match

This document requires end point address information to be included into Hello and Probe Match messages. In most cases, there is no need for the resolve and resolve match exchange. To be compatible with the [XMLSOAP WS-Discovery] specification, however, a device should implement the resolve match response.

7.3.5 Bye

A device should send a one-way Bye message when it prepares to leave a network as described in [XMLSOAP WS-Discovery].

7.3.6 SOAP fault messages

If an error exists with the multicast packet, the device and client should silently discard and ignore the request. Sending an error response is not recommended due to the possibility of packet storms if many devices send an error response to the same request. For completeness, unicast packet error handling is described below.

If a device receives a unicast Probe message and it does not support the matching rule, then the device may choose not to send a Probe Match, and instead generate a SOAP fault bound to SOAP 1.2 as follows:

[action] `http://schemas.xmlsoap.org/ws/2005/04/discovery/fault`

[Code] `s12:Sender`

[Subcode] `d:MatchingRuleNotSupported`

[Reason] E.g., the matching rule specified is not supported

[Detail] `<d: SupportedMatchingRules>`

`List of xs:anyURI`

`</d: SupportedMatchingRules>`

8 Device management

8.1 General

The device service is divided into five different categories: capabilities, network, system, I/O and security commands. This set of commands can be used to obtain information about the device capabilities and configurations or to set device configurations. A device shall support the device management service as specified in Clause B.1. A basic set of operations are

required for the device management service, other operations are recommended or optional to support. The detailed requirements are listed under the command descriptions.

8.2 Capabilities

8.2.1 Get WSDL URL

It is possible for an endpoint to request a URL that can be used to retrieve the complete schema and WSDL definitions of a device. The command gives in return a URL entry point where all the necessary product specific WSDL and schema definitions can be retrieved. The device shall provide a URL for WSDL and schema download through the GetWsdUrl command.

Table 9 – GetWsdUrl command

GetWsdUrl		Access class: PRE_AUTH
Message name	Description	
GetWsdUrlRequest	<i>This is an empty message</i>	
GetWsdUrlResponse	<i>The requested URL.</i> xs:anyURI WsdUrl [1][1]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.2.2 Capability exchange

8.2.2.1 General

Any endpoint can ask for the capabilities of a device using the capability exchange request response operation. A device shall indicate its capabilities through the GetServices/GetServiceCapabilities commands.

The capability list includes references to the addresses (XAddr) of the service implementing the interface operations in the category.

8.2.2.2 GetServices

Returns a collection of the devices services and possibly their available capabilities. The returned capability response message is untyped to allow future addition of services, service revisions and service capabilities. All returned service capabilities shall be structured by different namespaces which are supported by a device.

A device shall support this method. For complementary information on the structure of GetServices response with capabilities, refer to Annex A.

Table 10 – GetServices command

GetServices		Access class: PRE_AUTH
Message name	Description	
GetServicesRequest	<i>The message contains a request for all services in the device and possibly the capabilities for each service. If the Boolean IncludeCapability is set, then the response shall include the services capabilities.</i> boolean IncludeCapability[1][1]	
GetServicesResponse	<i>The capability response message contains the requested information about the services.</i> tt:ServiceList [1][unbounded]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.2.2.3 GetServiceCapabilities

This command returns the capabilities of the device service. A device shall support this command.

Table 11 and Table 12 describe how to interpret the indicated capabilities.

Table 11 – GetServiceCapabilities command

GetServiceCapabilities		Access class: PRE_AUTH
Message name	Description	
GetServiceCapabilitiesRequest	<i>This is an empty message.</i>	
GetServiceCapabilitiesResponse	<i>The capability response message contains the requested device capabilities using a hierarchical XML capability structure.</i> tds:DeviceServiceCapabilities Capabilities [1][1]	
Fault codes	Description	
	<i>No command specific faults!</i>	

Table 12 – Capabilities in the GetServiceCapabilities command

Category	Capability	Description
Network	IPFilter	Indication if the device supports IP filtering control using the commands in 8.3.18, 8.3.19, 8.3.20 and 8.3.21.
	ZeroConfiguration	Indication if the device supports zero configuration according to the commands in 8.3.16 and 8.3.17.
	IPVersion6	Indication if the device supports IP version 6.
	DynDNS	Indication if the device supports Dynamic DNS configuration according to 8.3.8 and 8.3.9 .
	Dot11Configuration	Indication if the device supports IEEE802.11 configuration as specified in 8.3.22
	HostnameFromDHCP	Indicates whether retrieval of hostname from DHCP is supported by the device.
	NTP	Indicates the maximum number of supported NTP servers by the devices SetNTP command.
	Dot1XConfigurations	Indicates the maximum number of Dot1X configurations supported by the device, see 8.5.8
	DHCPv6	Indicates support for Stateful IPv6 DHCP.
System	DiscoveryResolve	Indication if the device responses to resolve requests as described in 7.3.4.
	DiscoveryBye	Indication if the device sends Bye messages as described in 7.3.5
	SystemBackup	Indication if the device supports system backup and restore as specified in 8.4.3 and 8.4.5
	FirmwareUpgrade	Indication if the device supports firmware upgrade as specified in 8.4.10.
	SystemLogging	Indication if the device supports system log retrieval as specified in 8.4.11.
	HttpSystemBackup	Indication if the device supports system backup and restore using HTTP GET and POST.
	HttpFirmwareUpgrade	Indication if the device supports firmware upgrade using HTTP POST.
	HTTPSystemLogging	Indication if the device supports retrieval of system log using HTTP Get, see 8.4.2.
	HTTPSupportInformation	Indication if the device supports retrieval of support information using HTTP Get, see 8.4.2.
Security	TLS1.0	Support of TLS 1.0.

Category	Capability	Description
	TLS1.1	Support of TLS 1.1.
	TLS1.2	Support of TLS 1.2.
	OnboardKeyGeneration	Indication if the device supports onboard key generation and creation of self-signed certificates as specified in 8.5.9.
	AccessPolicyConfig	Indication if the device supports retrieving and loading device access control policy according to 8.5.2 and 8.5.3.
	DefaultAccessPolicy	Indicates if the device supports the default access policies as defined in 5.13.2.4.
	HttpDigest	Indication if the device supports the HTTP digest authentication.
	Dot1X	Indication if the device supports IEEE 802.1X port-based network authentication
	SupportedEAPMethod	List of supported EAP method types. The numbers correspond to the IANA [EAP-Registry].
	RemoteUserHandling	Indication if the device supports remote user handling and the corresponding methods defined in 8.5.22 and 8.5.23.
	MaxUsers	The maximum number of users that the device supports

8.3 Network

8.3.1 Get hostname

This operation is used by an endpoint to get the hostname from a device. The device shall return its hostname configurations through the GetHostname command as described in Table 13.

Table 13 – GetHostname command

GetHostname		Access Class: PRE_AUTH
Message name	Description	
GetHostnameRequest	<i>This is an empty message.</i>	
GetHostnameResponse	<i>This message contains:</i> “FromDHCP”: True if the hostname is obtained via DHCP “Name”: The hostname. In case of DHCP the hostname has been obtained from the DHCP server. xs:boolean FromDHCP [1][1] xs:token Name [0][1]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.2 Set hostname

This operation sets the hostname on a device. It shall be possible to set the device hostname configurations through the SetHostname command as described in Table 14. Attention: a call to SetDNS may result in overriding a previously set hostname.

A device shall accept strings formatted according to RFC 1123:1989, Section 2.1 or alternatively to RFC 952; other string shall be considered as invalid strings.

A device shall try to retrieve the name via DHCP when the HostnameFromDHCP capability is set and an empty name string is provided.

Table 14 – SetHostname command

SetHostname		Access class: WRITE_SYSTEM
Message name	Description	
SetHostnameRequest	<i>This message contains:</i> “Name”: The hostname. If Name is an empty string hostname should be retrieved from DHCP, otherwise the specified Name shall be used. xs:token Name [1][1]	
SetHostnameResponse	<i>This is an empty message</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:InvalidHostname	<i>The requested hostname cannot be accepted by the device.</i>	

8.3.3 Set hostname from DHCP

This operation, as described in Table 15, controls whether the hostname shall be retrieved from DHCP.

A device shall support this command if support is signalled via the HostnameFromDHCP capability. Depending on the device implementation the change may only become effective after a device reboot.

Table 15 – SetHostnameFromDHCP command

SetHostnameFromDHCP		Access class: WRITE_SYSTEM
Message name	Description	
SetHostnameFromDHCPRequest	<i>This message contains:</i> “FromDHCP”: True if the hostname shall be obtained via DHCP. xs:boolean FromDHCP [1][1]	
SetHostnameFromDHCPResponse	<i>An indication if a reboot is needed in case of changes in the hostname settings.</i> xs:boolean RebootNeeded [1][1]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.4 Get DNS settings

This operation gets the DNS settings from a device as described in Table 16. The device shall return its DNS configurations through the GetDNS command.

Table 16 – GetDNS command

GetDNS		Access class: READ_SYSTEM
Message name	Description	
GetDNSRequest	<i>This is an empty message.</i>	
GetDNSResponse	<i>This message contains:</i> • “FromDHCP”: True if the DNS servers are obtained via DHCP. • “SearchDomain”: The domain(s) to search if the hostname is not fully qualified. • “DNSFromDHCP”: A list of DNS servers obtained via DHCP in case FromDHCP is equal to true. This means that the resolved addresses in the field DNSFromDHCP are coming from DHCP and describe the configuration status. • “DNSManual”: A list of manually given DNS servers xs:boolean FromDHCP [1][1] xs:token SearchDomain [0][unbounded] tt:IPAddress DNSFromDHCP [0][unbounded] tt:IPAddress DNSManual [0][unbounded]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.5 Set DNS settings

This operation sets the DNS settings on a device as described in Table 17. It shall be possible to set the device DNS configurations through the SetDNS command.

Table 17 – SetDNS command

SetDNS		Access class: WRITE_SYSTEM
Message name	Description	
SetDNSRequest	<i>This message contains:</i> • “FromDHCP”: True if the DNS servers are obtained via DHCP • “SearchDomain”: The domain(s) to search if the hostname is not fully qualified. • “DNSManual”: A list of manually given DNS servers xs:boolean FromDHCP [1][1] xs:token SearchDomain [0][unbounded] tt:IPAddress DNSManual [0][unbounded]	
SetDNSResponse	<i>This is an empty message.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:InvalidIPv6Address	<i>The suggested IPv6 address is invalid.</i>	
env:Sender ter:InvalidArgVal ter:InvalidIPv4Address	<i>The suggested IPv4 address is invalid.</i>	

8.3.6 Get NTP settings

This operation gets the NTP settings from a device as described in Table 18. If the device supports NTP, it shall be possible to get the NTP server settings through the GetNTP command.

Table 18 – GetNTP command

GetNTP		Access class: READ_SYSTEM
Message name	Description	
GetNTPRequest	<i>This is an empty message.</i>	
GetNTPResponse	<i>This message contains:</i> • “FromDHCP”: True if the NTP servers are obtained via DHCP. • “NTPFromDHCP”: A list of NTP servers obtained via DHCP in case FromDHCP is equal to true. This means that the NTP server addresses in the field NTPFromDHCP are coming from DHCP and describe the current configuration status. • “NTPManual”: A list of manually given NTP servers xs:boolean FromDHCP [1][1] tt:NetworkHost NTPFromDHCP [0][unbounded] tt:NetworkHost NTPManual [0][unbounded]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.7 Set NTP settings

This operation sets the NTP settings on a device as described in Table 19. If support for NTP is signalled via the NTP capability, it shall be possible to set the NTP server settings through the SetNTP command.

A device shall accept string formatted according to RFC 1123 section 2.1; other strings shall be considered as invalid strings.

Changes to the NTP server list shall not affect the clock mode DateTimeType. Use SetSystemDateAndTime to activate NTP operation.

Table 19 – SetNTP command

SetNTP		Access class: WRITE_SYSTEM
Message name	Description	
SetNTPRequest	<i>This message contains:</i> • “FromDHCP”: True if the NTP servers are obtained via DHCP. • “NTPManual”: A list of manually given NTP servers when they are not obtained via DHCP. xs:boolean FromDHCP [1][1] tt:NetworkHost NTPManual [0][unbounded]	
SetNTPResponse	<i>This is an empty message.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:InvalidIPv4Address	<i>The suggested IPv4 address is invalid.</i>	
env:Sender ter:InvalidArgVal ter:InvalidIPv6Address	<i>The suggested IPv6 address is invalid.</i>	
env:Sender ter:InvalidArgVal ter:InvalidDnsName	<i>The suggested NTP server name is invalid.</i>	
env:Sender ter:InvalidArgVal ter:TimeSyncedToNtp	<i>Current DateTimeType requires an NTP server.</i>	

8.3.8 Get dynamic DNS settings

This operation gets the dynamic DNS settings from a device as described in Table 20. If the device supports dynamic DNS as specified in [RFC 2136] and [RFC 4702], it shall be possible to get the type, name and TTL through the GetDynamicDNS command.

Table 20 – GetDynamicDNS command

GetDynamicDNS		Access class: READ_SYSTEM
Message name	Description	
GetDynamicDNSRequest	<i>This is an empty message.</i>	
GetDynamicDNSResponse	<i>This message contains:</i> • “Type”: The type of update. There are three possible types: the device desires no update (NoUpdate), the device wants the DHCP server to update (ServerUpdates) and the device does the update itself (ClientUpdates). • “Name”: The DNS name in case the device does the update. • “TTL”: Time to live. <i>tt:DynamicDNSType Type [1][1]</i> <i>tt:DNSName Name [0][1]</i> <i>xs:duration TTL [0][1]</i>	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.9 Set dynamic DNS settings

This operation sets the dynamic DNS settings on a device as described in Table 21. If the device supports dynamic DNS as specified in [RFC 2136] and [RFC 4702], it shall be possible to set the type, name and TTL through the SetDynamicDNS command.

Table 21 – SetDynamicDNS command

SetDynamicDNS		Access class: WRITE_SYSTEM
Message name	Description	
SetDynamicDNSRequest	<i>This message contains:</i> • “Type”: The type of update. There are three possible types: the device desires no update (NoUpdate), the device wants the DHCP server to update (ServerUpdates) and the device does the update itself (ClientUpdates). • “Name”: The DNS name in case the device does the update. • “TTL”: Time to live. <i>tt:DynamicDNSType Type [1][1]</i> <i>tt:DNSName Name [0][1]</i> <i>xs:duration TTL [0][1]</i>	
SetDynamicDNSResponse	<i>This is an empty message.</i>	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.10 Get network interface configuration

This operation gets the network interface configuration from a device as described in Table 22. The device shall support return of network interface configuration settings as defined by the NetworkInterface type through the GetNetworkInterfaces command.

Table 22 – GetNetworkInterfaces command

GetNetworkInterfaces		Access class: READ_SYSTEM
Message name	Description	
GetNetworkInterfacesRequest	<i>This is an empty message.</i>	
GetNetworkInterfacesResponse	<i>This message contains an array of device network interfaces.</i>	
	tt:NetworkInterface NetworkInterfaces [0][unbounded]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.11 Set network interface configuration

This operation sets the network interface configuration on a device as described in Table 23. The device shall support network configuration of supported network interfaces through the SetNetworkInterfaces command.

If a device responds with RebootNeeded set to false, the device can be reached via the new IP address without further action. A client should be aware that a device may not be responsive for a short period of time until it signals availability at the new address via the discovery Hello messages as defined in 7.3.2.

If a device responds with RebootNeeded set to true, it will be further available under its previous IP address. The settings will only be activated when the device is rebooted via the SystemReboot command.

For interoperability with a client unaware of the IEEE 802.11 extension a device shall retain its IEEE 802.11 configuration if the IEEE 802.11 configuration element is not present in the request.

Table 23 – SetNetworkInterfaces command

SetNetworkInterfaces		Access class: WRITE_SYSTEM
Message name	Description	
SetNetworkInterfacesRequest	<i>This message contains:</i> “InterfaceToken”: The token of the network interface to operate on. “NetworkInterface”: The network interface to configure. tt:ReferenceToken InterfaceToken [1][1] tt:NetworkInterfaceSetConfiguration NetworkInterface [1][1]	
SetNetworkInterfacesResponse	<i>This message contains:</i> “RebootNeeded”: An indication if a reboot is needed in case of changes in the network settings. xs:boolean RebootNeeded [1][1]	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:InvalidNetworkInterface	The supplied network interface token does not exist.	
env:Sender ter:InvalidArgVal ter:InvalidMtuValue	The MTU value is invalid.	
env:Sender ter:InvalidArgVal ter:InvalidInterfaceSpeed	The suggested speed is not supported.	
env:Sender ter:InvalidArgVal ter:InvalidInterfaceType	The suggested network interface type is not supported.	
env:Sender ter:InvalidArgVal ter:InvalidIPv4Address	The suggested IPv4 address is invalid.	
env:Sender ter:InvalidArgVal ter:InvalidIPv6Address	The suggested IPv6 address is invalid.	
env:Receiver ter:ActionNotSupported ter:InvalidDot11	IEEE 802.11 Configuration is not supported.	
env:Sender ter:InvalidArgVal ter:InvalidSecurityMode	The selected security mode is not supported.	
env:Sender ter:InvalidArgVal ter:InvalidStationMode	The selected station mode is not supported.	
env:Sender ter:InvalidArgVal ter:MissingDot11	IEEE 802.11 value is missing in the security configuration.	
env:Sender ter:InvalidArgVal ter:MissingPSK	PSK value is missing in security configuration.	
env:Sender ter:InvalidArgVal ter:MissingDot1X	IEEE 802.1X value in security configuration is missing or non existing.	
env:Sender ter:InvalidArgVal ter:IncompatibleDot1X	IEEE 802.1X value in security configuration is incompatible with the network interface.	
env:Receiver ter:ActionNotSupported ter:InvalidDHCPv6	The requested stateful DHCPv6 mode is not supported.	

8.3.12 Get network protocols

This operation gets defined network protocols from a device as described in Table 24. The device shall support the GetNetworkProtocols command returning configured network protocols.

Table 24 – GetNetworkProtocols command

GetNetworkProtocols		Access class: READ_SYSTEM
Message name	Description	
GetNetworkProtocolsRequest	<i>This is an empty message.</i>	
GetNetworkProtocolsResponse	<i>This message returns an array of defined protocols supported by the device. There are three protocols defined, HTTP, HTTPS and RTSP. The following parameters can be retrieved for each protocol:</i> • Port • Enable/disable tt:NetworkProtocol NetworkProtocols [0][unbounded]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.13 Set network protocols

This operation configures defined network protocols on a device as described in Table 25. The device shall support configuration of defined network protocols through the SetNetworkProtocols command.

Table 25 – SetNetworkProtocols command

SetNetworkProtocols		Access class: WRITE_SYSTEM
Message name	Description	
SetNetworkProtocolsRequest	<i>This message configures one or more defined network protocols supported by the device. There are currently three protocols defined, HTTP, HTTPS and RTSP. The following parameters can be set for each protocol:</i> • Port • Enable/disable tt:NetworkProtocol NetworkProtocols [1][unbounded]	
SetNetworkProtocolsResponse	<i>This is an empty message.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:ServiceNotSupported	<i>The supplied network service is not supported.</i>	
env:Sender ter:InvalidArgVal ter:PortAlreadyInUse	<i>The selected port is already in use.</i>	
env:Receiver ter:ActionNotSupported ter:EnablingTlsFailed	<i>The device doesn't support TLS or TLS is not configured appropriately.</i>	

8.3.14 Get default gateway

This operation gets the default gateway settings from a device as described in Table 26. The device shall support the GetNetworkDefaultGateway command returning configured default gateway address(es).

Table 26 – GetNetworkDefaultGateway command

GetNetworkDefaultGateway		Access class: READ_SYSTEM
Message name	Description	
GetNetworkDefaultGateway-Request	<i>This is an empty message.</i>	
GetNetworkDefaultGateway-Response	<i>This message contains:</i> • "IPv4Address": The default IPv4 gateway address(es). • "IPv6Address": The default IPv6 gateway address(es). tt:IPv4Address IPv4Address [0][unbounded] tt:IPv6Address IPv6Address [0][unbounded]	
Fault codes	Description	
	<i>No command specific faults!</i>	

8.3.15 Set default gateway

This operation sets the default gateway settings on a device as described in Table 27. The device shall support configuration of default gateway through the SetNetworkDefaultGateway command.

Table 27 – SetNetworkDefaultGateway command

SetNetworkDefaultGateway		Access class: WRITE_SYSTEM
Message name	Description	
SetNetworkDefaultGateway-Request	This message contains: • “IPv4Address”: The default IPv4 gateway address(es). • “IPv6Address”: The default IPv6 gateway address(es). tt:IPv4Address IPv4Address [0][unbounded] tt:IPv6Address IPv6Address [0][unbounded]	
SetNetworkDefaultGateway-Response	This is an empty message.	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:InvalidGatewayAddress	The supplied gateway address was invalid.	
env:Sender ter:InvalidArgVal ter:InvalidIPv4Address	The suggested IPv4 address is invalid.	
env:Sender ter:InvalidArgVal ter:InvalidIPv6Address	The suggested IPv6 address is invalid.	

8.3.16 Get zero configuration

This operation gets the zero-configuration from a device as described in Table 28. If the device supports dynamic IP configuration according to [RFC 3927], it shall support the return of IPv4 zero configuration address and status through the GetZeroConfiguration command

Table 28 – GetZeroConfiguration command

GetZeroConfiguration		Access class: READ_SYSTEM
Message name	Description	
GetZeroConfigurationRequest	This is an empty message.	
GetZeroConfigurationResponse	This message contains: • “InterfaceToken”: The token of the network interface • “Enabled”: If zero configuration is enabled or not. • “Addresses”: The IPv4 zero configuration address(es). tt:ReferenceToken InterfaceToken [1][1] xs:boolean Enabled [1][1] tt:IPv4Addresses Address [0][unbounded]	
Fault codes	Description	
	No command specific faults!	

8.3.17 Set zero configuration

This operation sets the zero-configuration on the device as described in Table 29. If the device supports dynamic IP configuration according to [RFC 3927], it shall support the configuration of IPv4 zero configuration address and status through the SetZeroConfiguration command.