Designation: D5130 – 95 (Reapproved 2014)

Standard Test Method for Open-Channel Flow Measurement of Water Indirectly by Slope-Area Method[1]

This standard is issued under the fixed designation D5130; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This test method covers the computation of discharge (the volume rate of flow) of water in open channels or streams using representative cross-sectional characteristics, the water-surface slope, and coefficient of channel roughness as input to gradually-varied flow computations.[2,3]

1.2 This test method produces an indirect measurement of the maximum discharge for one flow event, usually a specific flood. The computed discharge may be used to help define the high-water segment of a stage-discharge relation.

1.3 The values stated in inch-pound units are to be regarded as standard. The values given in parentheses are mathematical conversions to SI units that are provided for information only and are not considered standard.

1.4 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 *ASTM Standards:*[4]

D1129 Terminology Relating to Water

D2777 Practice for Determination of Precision and Bias of Applicable Test Methods of Committee D19 on Water

D3858 Test Method for Open-Channel Flow Measurement of Water by Velocity-Area Method

2.2 *ISO Standards:*[5]

ISO 748 Liquid Flow Measurements in Open Channels—Velocity-Area Method

ISO 1070 Liquid Flow Measurements in Open Channels—Slope-Area Method

3. Terminology

3.1 *Definitions*—For definitions of terms used in this test method, refer to Terminology D1129.

3.2 *Definitions of Terms Specific to This Standard:*

3.2.1 Several of the following terms are illustrated in Fig. 1:

3.2.2 *alpha (α)*—a velocity-head coefficient that represents the ratio of the true velocity head to the velocity head computed on the basis of the mean velocity. It is assumed equal to 1.0 if the cross section is not subdivided. For subdivided sections, α is computed as follows:

$$\alpha = \frac{\sum \left(\frac{k_i^3}{A_i^2} \right)}{\frac{K_T^3}{A_T^2}}$$

where:

K and A = the conveyance and area of the subsection indicated by the subscript i, and

K_T and A_T = the conveyance and area of the entire cross section.

3.2.3 *conveyance (K)*—a measure of the carrying capacity of a channel and has dimensions of cubic feet per second or cubic metres per second. Conveyance is computed as follows:

$$K = \frac{1.486}{n} AR^{2/3}$$

where:

n = the Manning roughness coefficient,

A = the cross-section area, ft^2 (m^2), and

R = the hydraulic radius, ft (m).

NOTE 1—1.486 = 1.00 SI unit.

3.2.4 *cross sections (numbered consecutively in downstream order)*—representative of a reach of channel and are positioned

[1] This test method is under the jurisdiction of ASTM Committee D19 on Water and is the direct responsibility of Subcommittee D19.07 on Sediments, Geomorphology, and Open-Channel Flow.

Current edition approved Jan. 1, 2014. Published March 2014. Originally approved in 1990. Last previous edition approved in 2008 as D5130 – 95 (2008). DOI: 10.1520/D5130-95R14.

[2] This test method is similar to methods developed by the U.S. Geological Survey and described in Refs (**1-3**).[3]

[3] The boldface numbers in parentheses refer to a list of references at the end of this standard.

[4] For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

[5] Available from American National Standards Institute (ANSI), 25 W. 43rd St., 4th Floor, New York, NY 10036, http://www.ansi.org.

Copyright © ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959. United States

Documents
Document Sharing Hub

Full document details: ASTM D5130-95(2014)

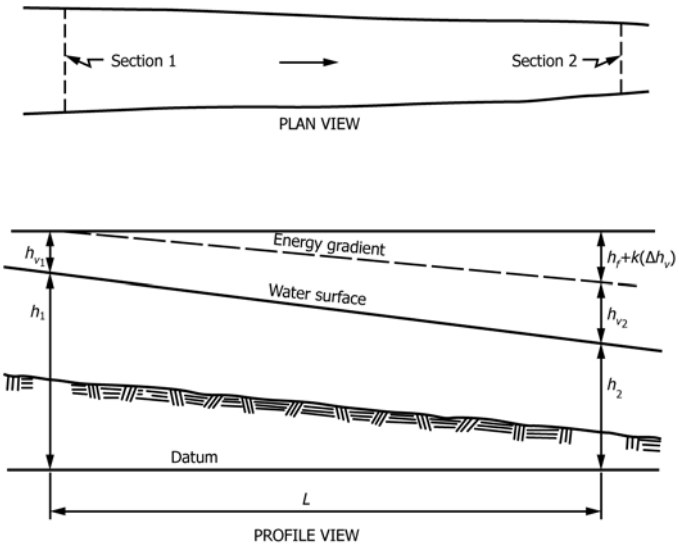

FIG. 1 Definition Sketch of a Slope-Area Reach

as nearly as possible at right angles to the direction of flow. They must be defined by coordinates of horizontal distance and ground elevation. Sufficient ground points must be obtained so that straight-line connection of the coordinates will adequately describe the cross-section geometry. If major breaks in the high-water profile are evident, cross sections should be located at the breaks.

3.2.5 *cross-section area (A)*—the area of the water below the high-water surface elevations that are computed by assuming a straight-line interpolation between elevations on each bank. The area is computed as the summation of the products of mean depth multiplied by the width between stations of the cross section.

3.2.6 *friction loss (h_f)*—the loss due to boundary friction in the reach and is equivalent to the following:

$$\Delta h + \Delta h_v - k(\Delta h_v)$$

where:

Δh = the fall in the reach,
Δh_v = the upstream velocity head minus the downstream velocity head,
$(k\Delta h_v)$ = the energy loss due to acceleration or deceleration and to eddies in a contracting or expanding reach, where k is a coefficient for energy losses.

All of the equations presented in this standard are based on the assumption that *k* is zero for contracting reaches and 0.5 for expanding reaches.

3.2.7 *fall (Δh)*—the drop in the water-surface computed as the difference in the average water-surface elevation at adjacent cross sections.

3.2.8 *friction slope (S_f)*—the energy loss divided by the length of the reach or:

$$S_f = \frac{h_f}{L}$$

that becomes:

$$S_f = \frac{\Delta h + \Delta h_v}{L}$$

when Δh_v is negative (for a contracting reach), or:

$$S_f = \frac{\Delta h + \frac{\Delta h_v}{2}}{L}$$

when Δh_v is positive (for an expanding reach).

3.2.9 *Froude number (F)*—an index to the state of flow in the channel. In a prismatic channel, the flow is tranquil or subcritical if the Froude number is less than 1.0 and is rapid or supercritical if it is greater than 1.0. The Froude number is computed as follows:

$$F = \frac{V}{\sqrt{g d_m}}$$

where:

V = the mean velocity in ft/s (m/s),
d_m = the average depth in the cross section in feet, and
g = the acceleration of gravity in ft/s/s (m/s/s).

3.2.10 *high-water marks*—the evidence of the highest stage reached by a flood. Debris, stains, foam lines, and scour marks are common types of high-water marks. Water-surface slopes are determined by the elevations of these marks.

3.2.11 *hydraulic radius (R)*—defined as the area of a cross section or subsection divided by the corresponding wetted perimeter.

3.2.12 *roughness coefficient (n)*—or Manning's n is used in the Manning equation. Roughness coefficient or Manning's n is a measure of the resistance to flow in a channel. The factors that influence the magnitude of the resistance to flow include the character of the bed material, cross section irregularities, depth of flow, vegetation, and alignment of the channel. A reasonable evaluation of the resistance to flow in a channel depends on the experience of the person selecting the coefficient and reference to texts and reports that contain values for similar stream and flow conditions (**1 and 2**). (See 9.3.)

3.2.13 *velocity head (h_v)*—computed as follows:

$$h_v = \frac{\alpha V^2}{2g}$$

where:

α = the velocity-head coefficient,
V = the mean velocity in the cross section in ft/s (m/s), and
g = the acceleration of gravity in ft/s/s (m/s/s).

3.2.14 *wetted perimeter (WP)*—the total length of the boundary between the channel bed and the water for a cross section. It is computed as the sum of the hypotenuse of the right triangle defined by the distance between adjacent stations of the cross section and the difference in bed elevations.

4. Summary of Test Method

4.1 The slope-area method is used to indirectly determine the discharge through a reach of channel during a flood,

AVA Documents Document Sharing Hub

Full document details: ASTM D5130-95(2014)

using evidence left by the event and the physical characteristics of the channel reach. A field survey is made to determine distances between and elevations of high-water marks and to define cross sections of the stream. These data are used to compute the fall in the water surface between sections and selected properties of the sections. This information is used along with Manning's n in the Manning equation to compute the discharge, Q. The Manning equation in terms of discharge, Q, is as follows:

$$Q = \frac{1.486}{n} AR^{2/3} S_f^{\,1/2} \text{ or } Q = KS_f^{\,1/2}$$

The symbols on the right sides of the equations are defined in Section 3.

5. Significance and Use

5.1 This test method is particularly useful for determining the discharge when it cannot be measured directly by some type of current meter to obtain velocities and with sounding weights to determine the cross section.

5.2 Even under optimum conditions, the personnel available cannot cover all points of interest during a major flood. Field personnel cannot always obtain reliable results by direct methods if the stage is rising or falling very rapidly, if flowing ice or debris interferes with depth or velocity measurements.

5.3 Under the worst conditions, access roads are blocked, cableways and bridges may be washed out, and knowledge of the flood frequently comes too late to obtain direct measurements of flow. Therefore, some type of indirect measurement is necessary. The slope-area method is a commonly used method.

6. Apparatus

6.1 The equipment generally used for a "transit-stadia" survey is recommended. An engineer's transit, a self-leveling level with azimuth circle, newer equipment using electronic circuitry, or other advanced surveying instruments may be used. Standard level rods, a telescoping, 25-ft (7.6 m) level rod, rod levels, hand levels, steel and metallic tapes, tag lines (small wires with markers fixed at known spacings), vividly colored flagging, survey stakes, a camera (preferably stereo) with color film, light meter, and ample note paper are necessary items.

6.2 Additional equipment that may expedite a survey include axes, shovels, a portable drafting machine, a boat with oars and motor, hip boots, waders, rain gear, nails, sounding equipment, two-way radios, ladder, and rope.

6.3 Safety equipment should include life jackets, first aid kit, drinking water, and pocket knives.

7. Sampling

7.1 Sampling as defined in Terminology D1129 is not applicable in this test method.

8. Calibration

8.1 The surveying instruments, levels and transits, etc., should have their adjustment checked before each use and possibly daily when in continuous use or after some occurrence that may have affected the adjustment.

8.2 The standard check is the "two-peg" or" double-peg" test. If the error is over 0.03 ft in 100 ft (0.9 cm in 30.5 m), the instrument should be adjusted. The two-peg test and how to adjust the instrument are described in many surveying textbooks and in instructions provided by the manufacturer. Refer to manufacturer's manual for the electronic instruments.

8.3 If the "reciprocal leveling" technique is used in the survey, it is the equivalent of the two-peg test between each of the two successive hubs.

8.4 Sectional and telescoping level rods should be checked visually at frequent intervals to be sure sections are not separated. A proper fit at each joint can be quickly checked by measurements across the joint with a steel tape.

8.5 All field notes of the transit-stadia survey should be checked before proceeding with the computations.

9. Procedure

9.1 Selection of a reach of channel is the first and probably the most important step to obtain reliable results. Ideal reaches rarely exist; so the various elements in a reach must be evaluated and compromises made so that the best reach available is selected (**3**). Selection soon after the flood event is recommended because livestock, humans, heavy rain, and bank sloughing can destroy high-water marks.

9.1.1 Good high-water marks are essential for good results. At times a reach with poor quality marks must be used because of other complicating factors such as inflow, proximity to a gaging station, etc. List high-water marks in a format such as shown in Fig. 2.

9.1.2 The nearer the reach to a uniform channel the better. Marked changes in channel shape should be avoided because of uncertainties regarding the value of the expansion/contraction loss coefficient (k) and the friction losses in the reach. Changes in channel conveyance should be fairly uniform from section to section to be consistent with the assumption that the mean conveyance is equal to the geometric mean of the conveyances at the end sections.

9.1.3 A reach with flow confined to a roughly trapezoidal channel is desirable because roughness coefficients have been determined for such shapes. However, compound channels, those with overbank flow, for example, can be used if they are properly subdivided into subareas that are approximately trapezoidal.

9.1.4 A straight reach that contracts is preferred, but both conditions seldom exist in the same reach. Whether or not a reach is contracting or expanding depends solely upon the difference in velocity head (Δh_v) between sections. The reach is contracting if the difference in the velocity head is negative. The reach is expanding if the velocity-head difference is positive.

9.1.5 Cross sections are assumed to be carrying water in accordance with the conveyance for each part of the section. Therefore, the channel for some distance upstream should be similar to that of the reach. Then the discharge will be distributed in relation to depths, roughness, and shape. If the upstream section is located too close to a sharp bend, a bridge that constricts the width, or a natural construction, the water,

AVA Documents
Document Sharing Hub

Full document details: ASTM D5130-95(2014)

9–200

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

File No. { Washington ____ District ____

Snake Creek near Connell, Wash. – Flood of Feb. 21, 1956

High water marks							
Left bank				Right bank			
Sta.	Elev.	Sta.	Elev.	Sta.	Elev.	Sta.	Elev.
47	17.80	423	14.58	0	19.18	372	15.07
63	17.60	449	14.35	24	18.81	388	14.94
80	17.17	478	14.05	36	18.54	401	(sec 3)
97	16.81	502	13.96	67	17.40	402	14.96
120	16.53	510	13.84	84	17.22	412	14.88
142	16.48	517	(sec 4)	103	16.99	428	14.87
165	16.37	517	13.76	127	16.65	454	14.47
190	(sec 1)	548	13.63	141	16.56	476	14.35
190	16.29	578	13.44	167	16.39	496	13.99
218	16.15	600	13.41	188	(sec 1)	516	13.99
237	15.91	638	13.04	188	16.40	521	13.67
267	15.71	654	12.90	215	16.31	522	(sec 4)
284	15.62	678	12.73	239	15.93	524	13.75
312	(sec 2)	689	12.64	264	15.76	536	13.73
312	15.26	707	12.62	281	15.58	561	13.37
338	15.16			300	15.53	585	13.27
365	14.93			308	15.51	604	13.12
380	14.77			309	(sec 2)	627	13.00
401	(sec 3)			318	15.48	644	12.92
402	14.71			345	15.41	668	12.55
						684	12.39

E.L.S 3-19-56
Sheet 8 of 13 E.G.P 5-14-56

FIG. 2 Sample Slope-Area Computation, Listing of High-Water Marks

or even an eddy may occupy part of the section; and the section will not be effective in carrying water downstream in proportion to the computed conveyance.

9.1.6 Channels in mountainous areas may be very rough and steep and may have free fall over riffles and boulders. The Manning equation is not applicable when free fall exists. However, free fall may or may not be indicated by the high-water profiles or by inspection of the reach. Cross sections can be located to eliminate any part of a reach in which free fall is indicated. If the reach includes stretches in which free fall might have occurred, the computed discharges are not reliable.

9.1.7 The reach should be long enough to develop a fall that is well beyond the range of error in the surveying method, in alternative interpretations of the high-water profile, or in uncertainties related to the computation of the velocity head. One suggested criteria is that the fall in the reach should be 0.5 ft (0.15 m) or greater than the velocity head in the reach, or both.

9.2 Cross sections represent the geometry of a reach of channel. For example: section 2 should be typical of the reach from halfway upstream to section 1 to halfway downstream to section 3. A minimum of three cross sections is highly recommended.

9.2.1 Locate cross sections at major breaks in the high-water profiles. To do so, the high-water marks should be plotted in the field, and a profile for each bank drawn before sections are located and surveyed. Several high-water marks near the ends of the sections are desirable to define the high-water elevations at these points.

9.3 The roughness coefficient, n , is assigned to a cross section or to subdivisions of a section, but the n selected should represent conditions in the partial reach for which the section is typical. Several factors affect the selection of an n value for a channel. The most important factors are the type and size of the materials that compose the bed and banks of a channel and the shape of the channel. Techniques of determining values of n are given in most texts on hydraulics. One particularly helpful reference uses photographs and descriptive stream channel data to describe values of n(**4**). Cowan developed a procedure for estimating the effects of these factors to determine the value of n for a channel (**5**). In this procedure, the value of n may be computed by the following:

$$n = \left(n_b + n_1 + n_2 + n_3 + n_4\right)m$$

AVA Documents
Document Sharing Hub

Full document details: ASTM D5130-95(2014)